



## STINGRAY FLOOR LAMP



1. If you need to clean the lamp: After turning off the power supply, wipe the outside of the lamp body with a wet cloth and then wipe it with a dry cloth quickly. Do not use any cleaning products containing acid.
2. If a light source needs to be replaced, disconnect the power supply and replace it with a proper light source. Do not replace with a high-power light source.
3. The floor lamp should be placed on a flat horizontal plane, and the tilt angle should not be higher than 15°.