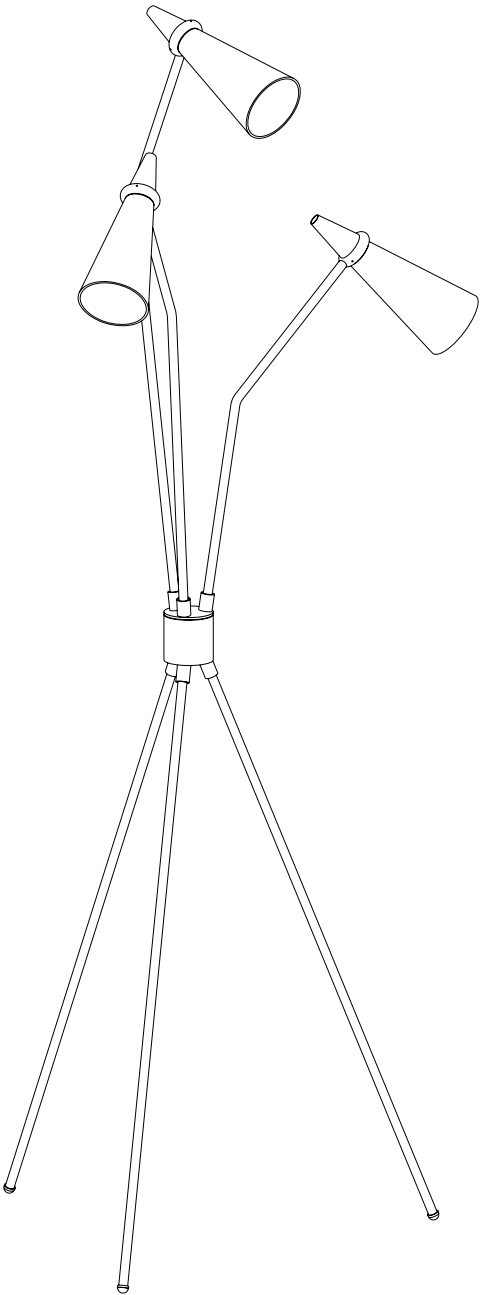
 

 




ASSEMBLY INSTRUCTIONS
Ludwig Floor Lamp



Thank for your purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during transit. Identify and count all parts and compare with the parts list below.



| HARDWERE LIST | | | |
|---------------|---|-----------|----|
| A |  | BODY | 01 |
| B |  | LEGS | 03 |
| C |  | GLASS | 03 |
| D |  | ALLEN KEY | 01 |
| E |  | E 12 BULB | 03 |

ASSEMBLY INSTRUCTIONS

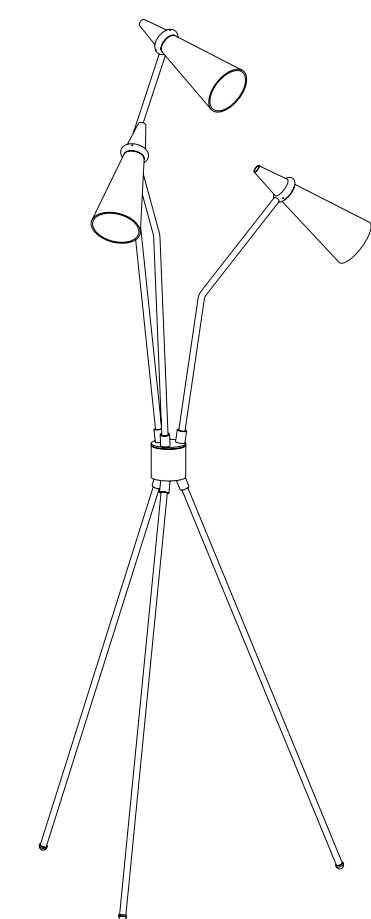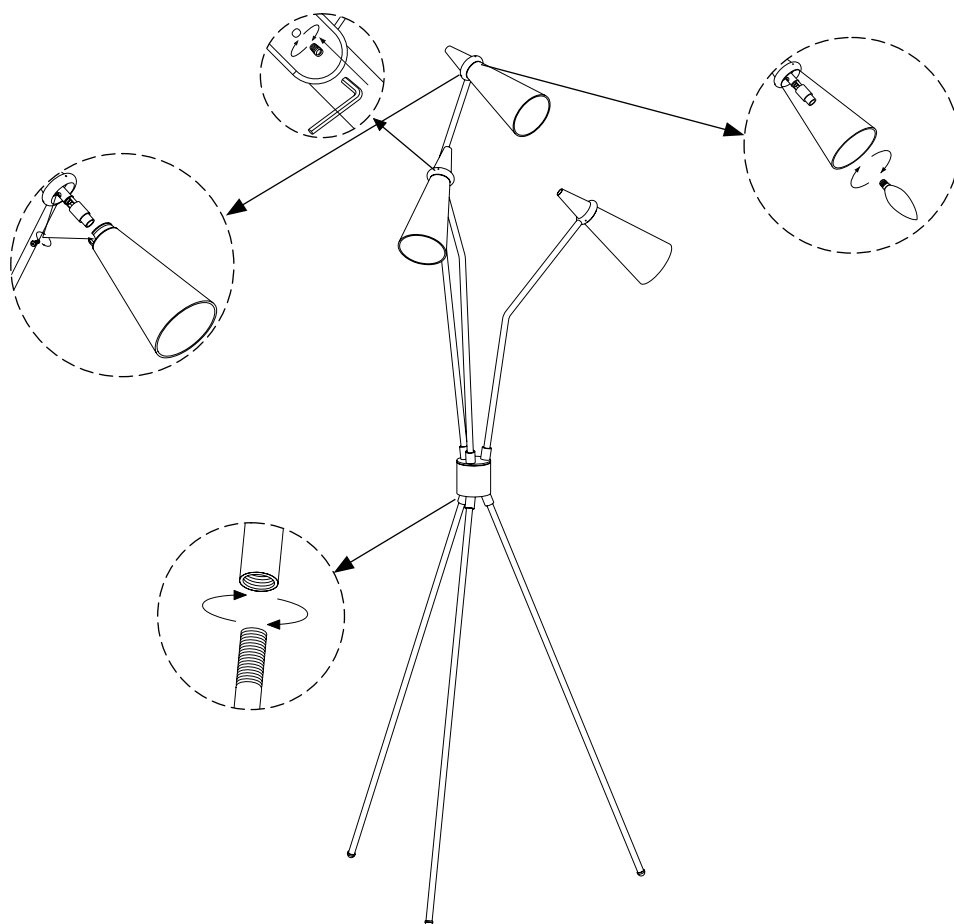Ludwig Floor Lamp



1778mm

787mm

ASSEMBLY INSTRUCTIONS
240836-Ludwig Floor Lamp

IMPORTANT SAFETY INSTRUCTIONS:

1. This fixture has been rated for 3 x 40 - Watt maximum Type B standard bulbs.
2. To avoid the risk of fire, do not exceed the recommended wattage.
3. The manufacturer and distributor accept no liability for incorrect installation.
4. For indoor use only.

WARNINGS:

1. Turn - off / unplug and allow to cool before replacing bulb (lamp).
2. Do not touch bulb or look directly at lighted lamp.
3. Keep flammable materials away from light bulb.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds.
Keep out of reach of children under 3 years of age.