



FOUR HANDS

FURNISHING STYLE

238691 - MERCILINE CHANDELIER

PARTS ENCLOSED:

ITEM	DESCRIPTION	QTY.
(A)	Mounting plate	1
(B)	Mounting Plate Screw	2
(C)	Canopy	1
(D)	Pipes	1 (Set of 3)
(E)	Chandelier	1
(F)	Alabaster Panel	10
(G)	Threaded Knob	10
(H)	Bulb	5

IMPORTANT SAFETY INSTRUCTIONS:

1. Use an authorized and certified electrician for consultation and installation. Electrician must be familiar with commercial - type applications of very heavy chandeliers.
2. This fixture has been rated for 5 x 25 - Watt maximum Type B standard bulb.
3. To avoid the risk of fire, do not exceed the recommended wattage.
4. The manufacturer and distributor accept no liability for incorrect installation.
5. For indoor use only.
6. Keep away from children.

WARNINGS:

1. Turn - off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
2. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.
3. Deviation from instruction may result in a risk of fire or electric shock. Please read all instructions completely before installation.

TO ASSEMBLE:

1. Carefully unpack the Pendant. Do not discard any material till assembly is complete.
2. Connect Pipes (D) to the chandelier (E) and Canopy (C).
3. Turn OFF power to the Outlet box where the ceiling light will be installed.
4. Attach Mounting Plate (A) to ceiling and secure with mounting screws (B).
5. Attach the Ground Wire, Neutral wire and Live wire to respective wires of the Outlet Box.
6. Attach the Canopy (C) to the Mounting Plate (A) and Screw with Mounting Plate Screws (B).
7. Install ten alabaster Panel (F) to the Chandelier (E) and tighten with Threaded Knob (G).
8. Install five 4 Watt LED (included) or Type B bulb maximum 25 watt (not included) into the Socket.
9. Restore Power to the Outlet box and test ceiling light fixture.

CARE INSTRUCTIONS:

To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.

