

# ASSEMBLY INSTRUCTIONS FOR LYLE MEDIA CONSOLE

## PART LIST



| NO. | DESCRIPTION | QTY  |
|-----|-------------|------|
| A   | Desktop     | 1pc  |
| B   | Table Leg   | 2pcs |

## HARDWARE LIST

| NO. | PICTURE                                                                             | DESCRPTON   | SPEC.         | QTY   |
|-----|-------------------------------------------------------------------------------------|-------------|---------------|-------|
| 1   |    | Allen Bolt  | M8 x 25mm     | 16pcs |
| 2   |   | Flat Washer | M8 x 18 x 1mm | 16pcs |
| 3   |  | Lock Washer | M8 x 13 x 2mm | 16pcs |
| 4   |  | Allen Key   | M5            | 1pc   |

## Assembly Steps

- Step 1**      Note: The floor must be covered with protective material so that the table top does not touch the floor directly

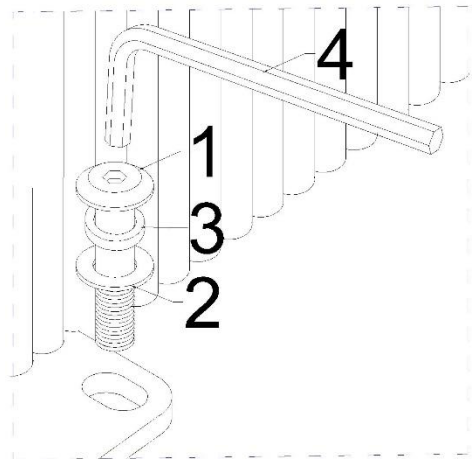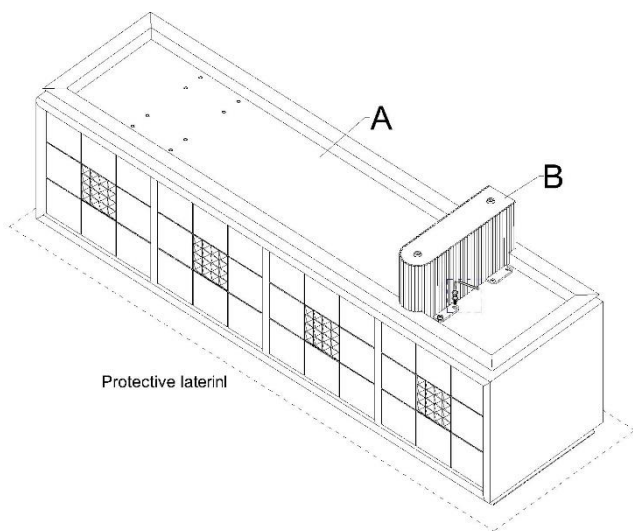

## Adjusting Floor Levelers

Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.


### Adjust the Floor Levelers

**Check for Stability** – Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

**Locate the Levelers** – These are small adjustable feet found at the bottom corners of your furniture.

**Adjust as Needed** – Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

### Examples

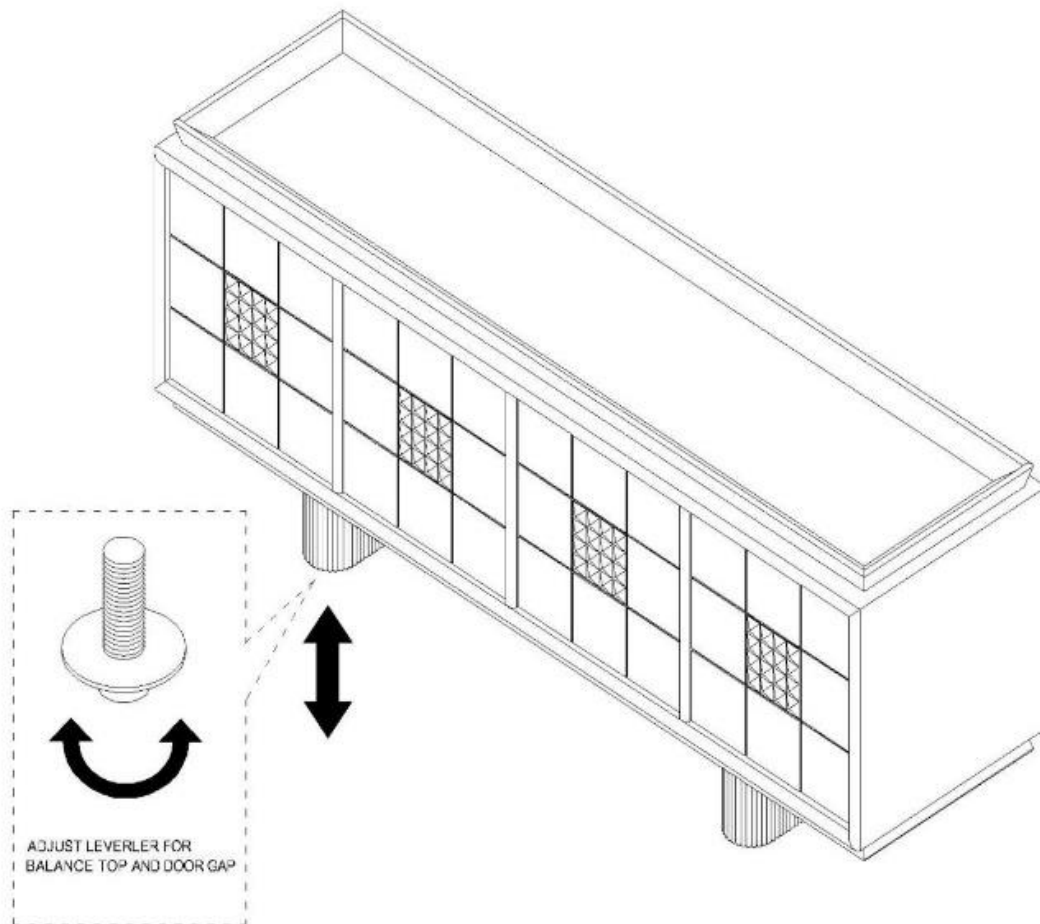

If you need further adjustments, repeat the process in small increments.