









ASSEMBLY INSTRUCTION

CLEMENCE RAF DINING BENCH 72"

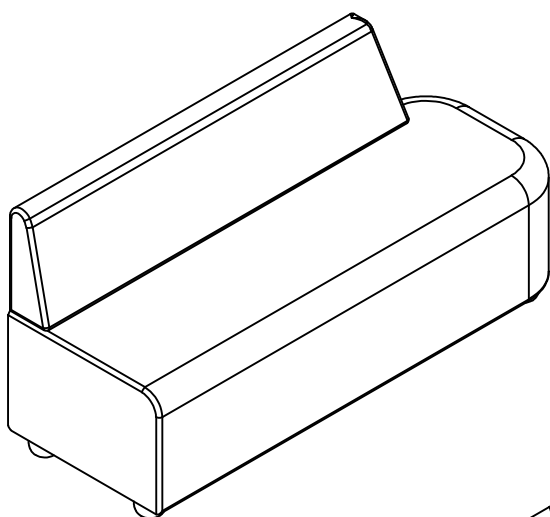



HARDWARE LIST

HARDWARE LIST			
A		Leg	4Pcs
B		Lock Washers Ø40mm	4Pcs

 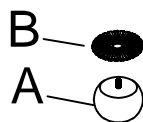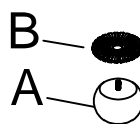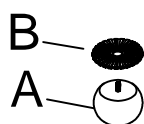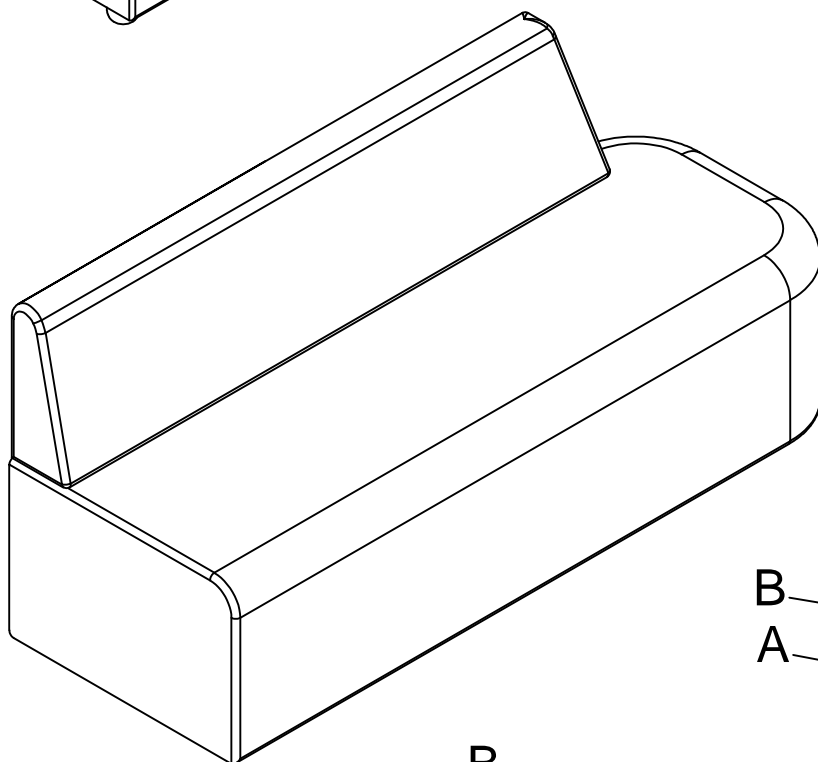

ASSEMBLY INSTRUCTION


CLEMENCE RAF DINING BENCH 72"

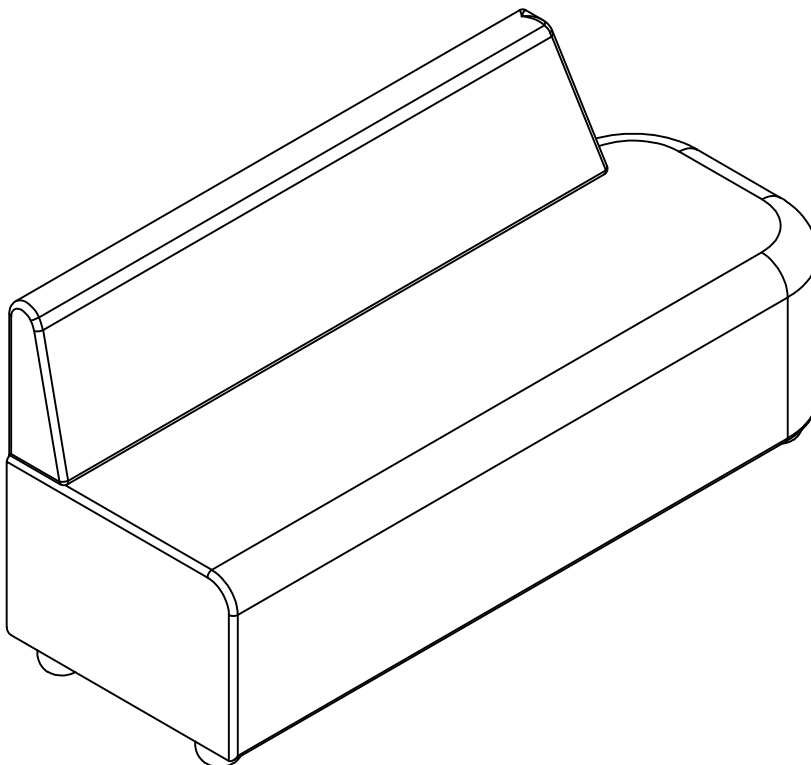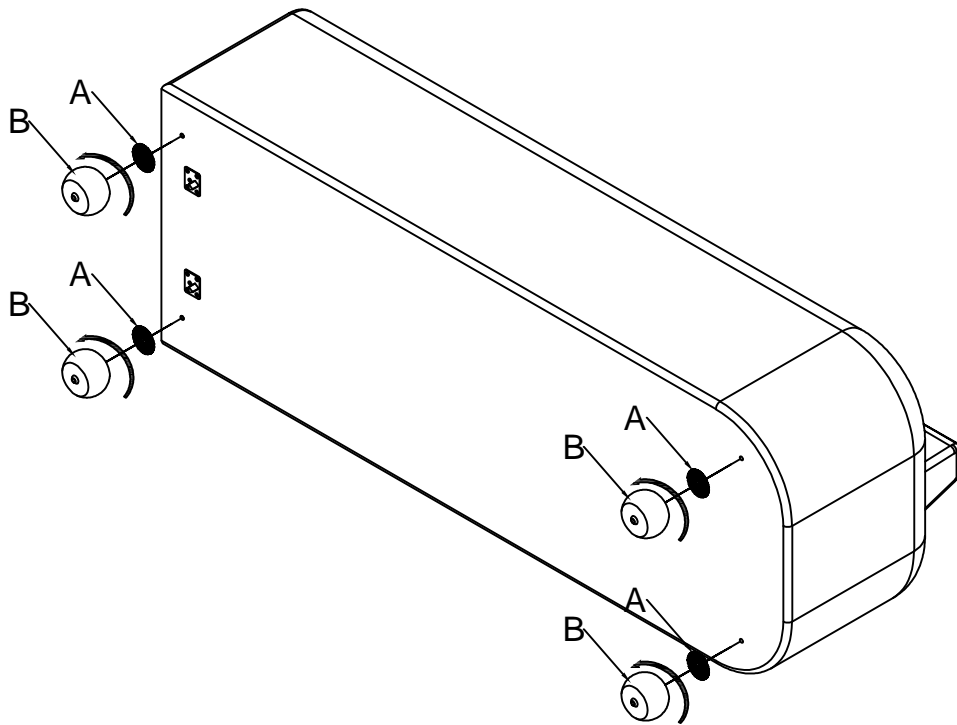


ASSEMBLY INSTRUCTION

Clemence Dining Banquette L Shape 111.5"-Left


Assembly of the sectionals

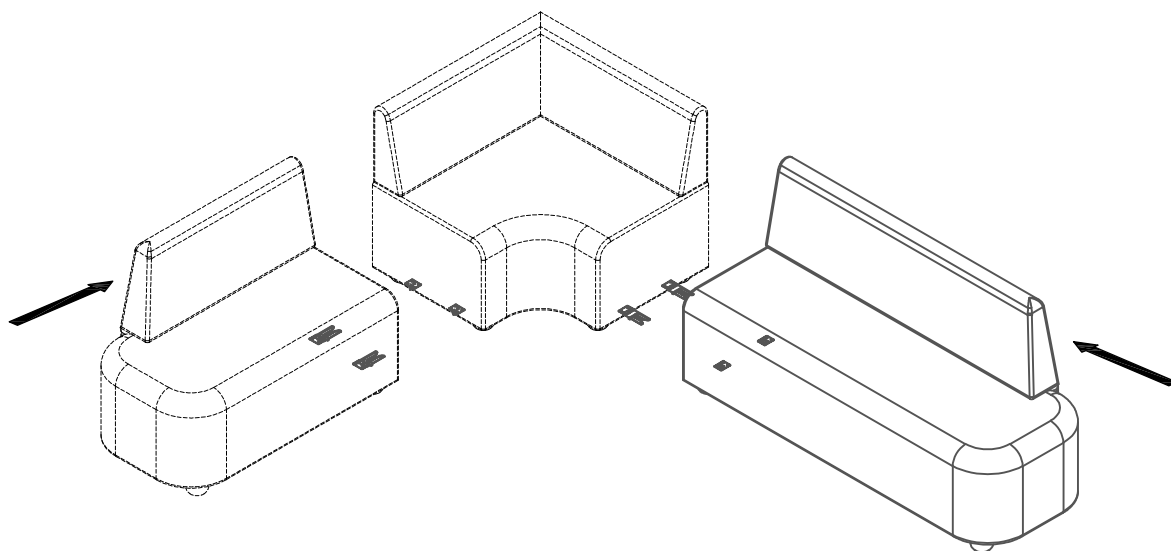

The prong and connector must be aligned well

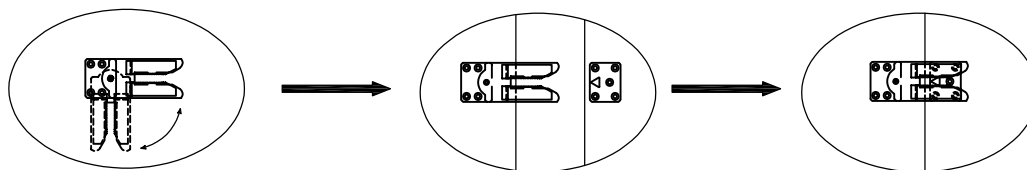

How to disconnect

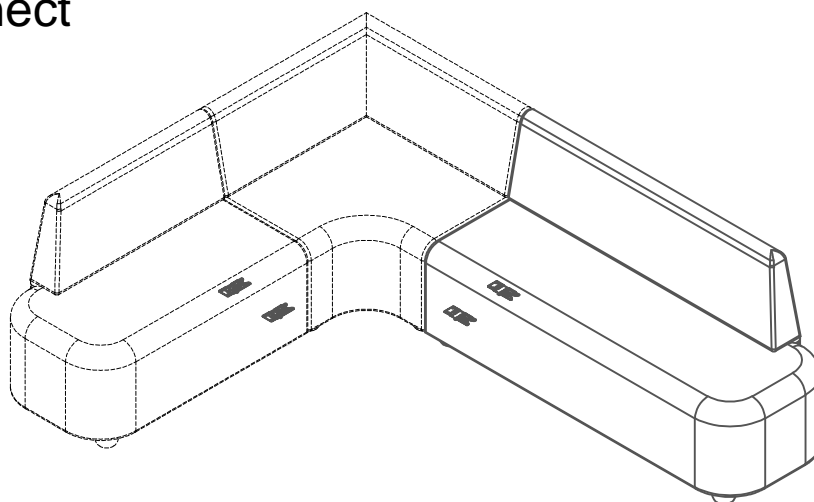

Lift up the right sectional and pull it out

