 









ASSEMBLY INSTRUCTION

CLEMENCE RAF DINING BENCH 49"

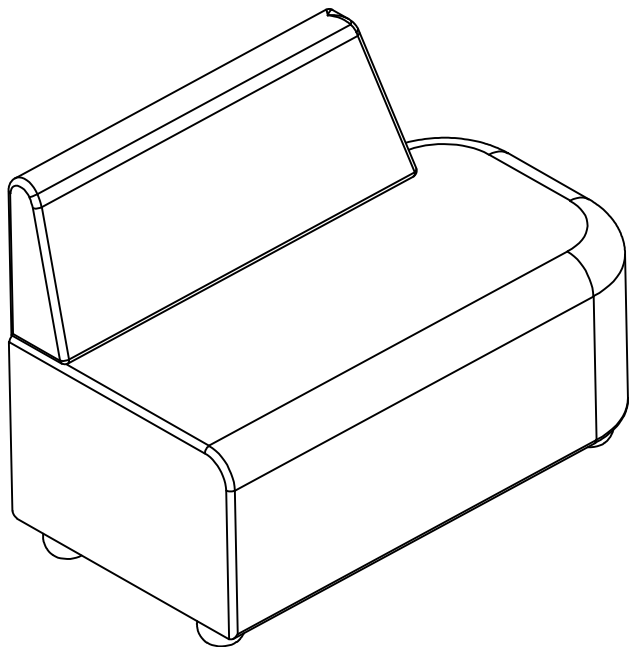



HARDWARE LIST

HARDWARE LIST			
A		Leg	4Pcs
B		Lock Washers Ø40mm	4Pcs

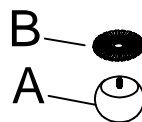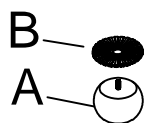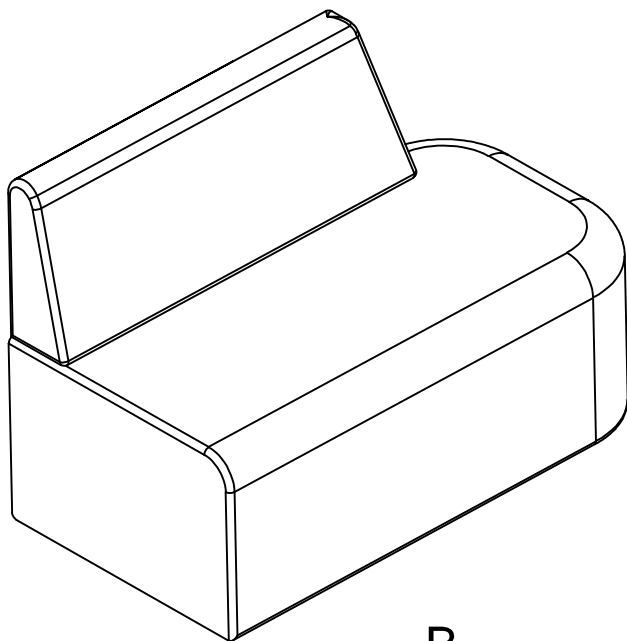     

ASSEMBLY INSTRUCTION

  
CLEMENCE RAF DINING BENCH 49"

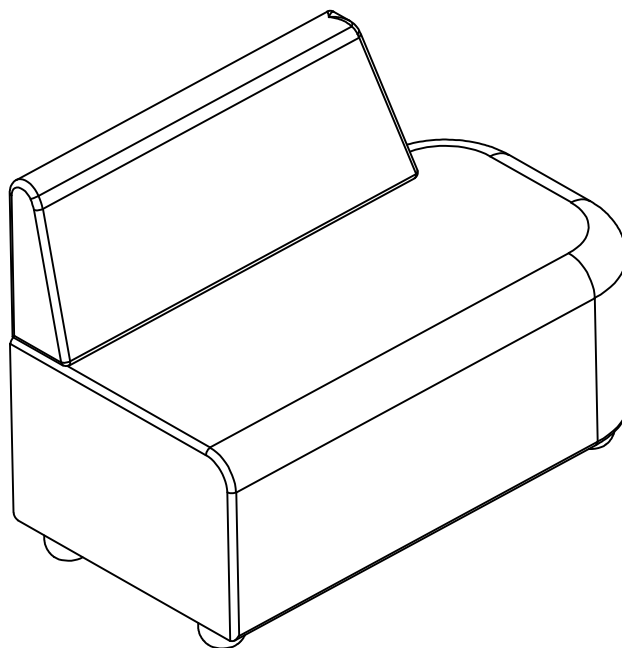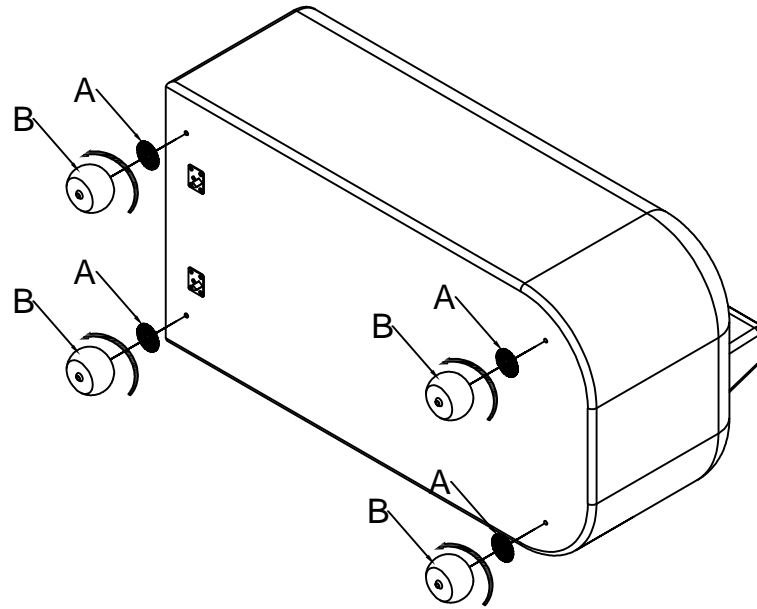


ASSEMBLY INSTRUCTION

Clemence Dining Banquette L Shape 127"

 
Assembly of the sectionals

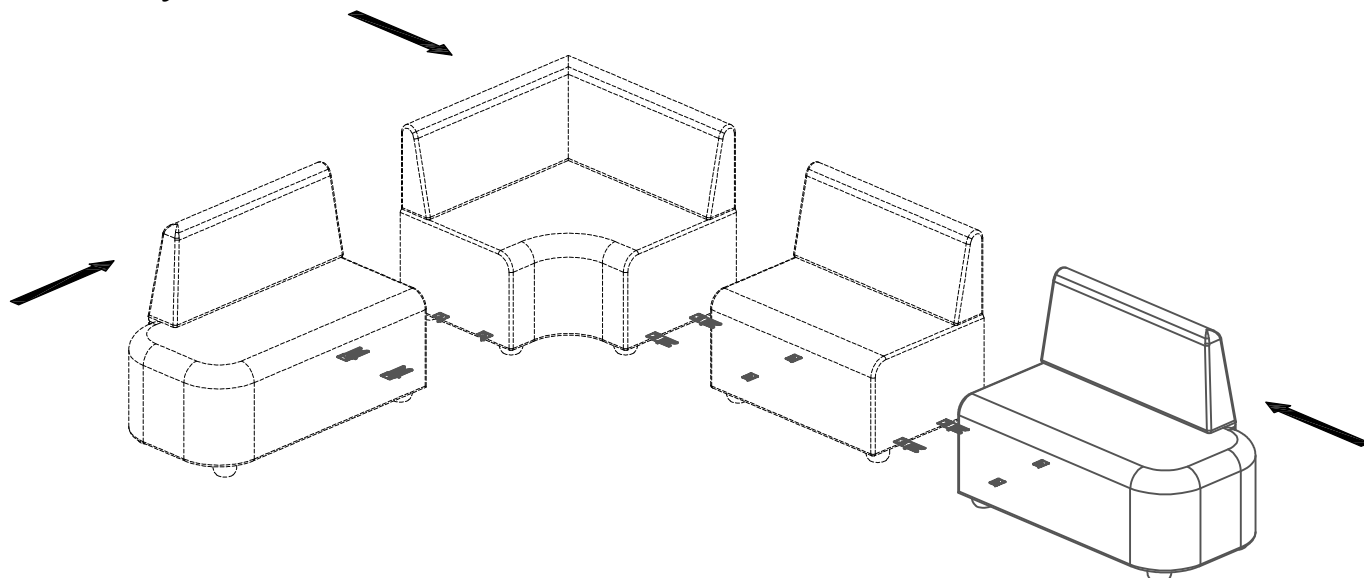

 
The prong and connector must be aligned well

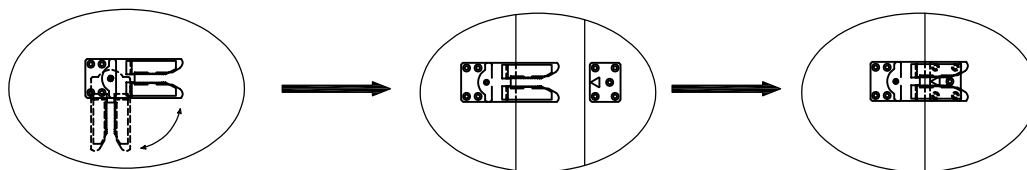

How to disconnect

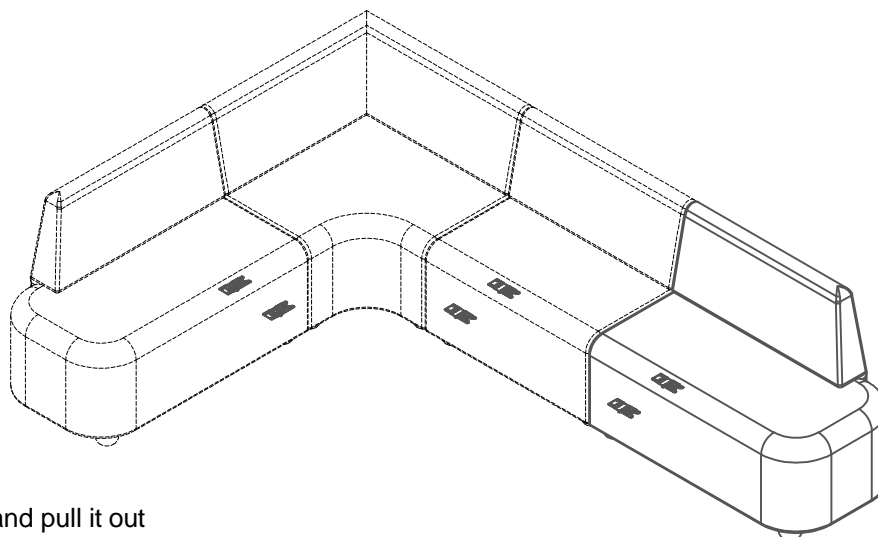 


 
Lift up the right sectional and pull it out

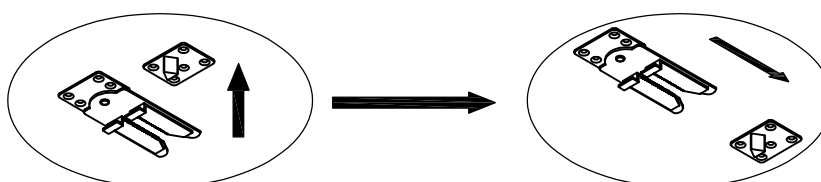


ASSEMBLY INSTRUCTION

Clemence Dining Banquette U Shape 117.5"

  
Assembly of the sectionals

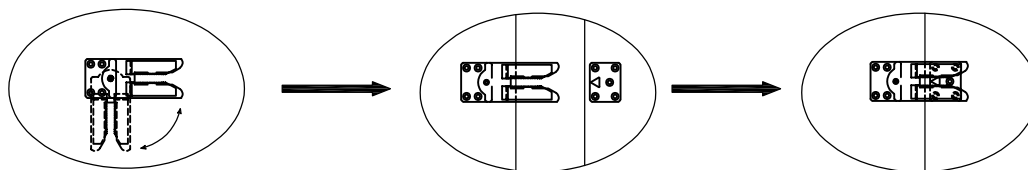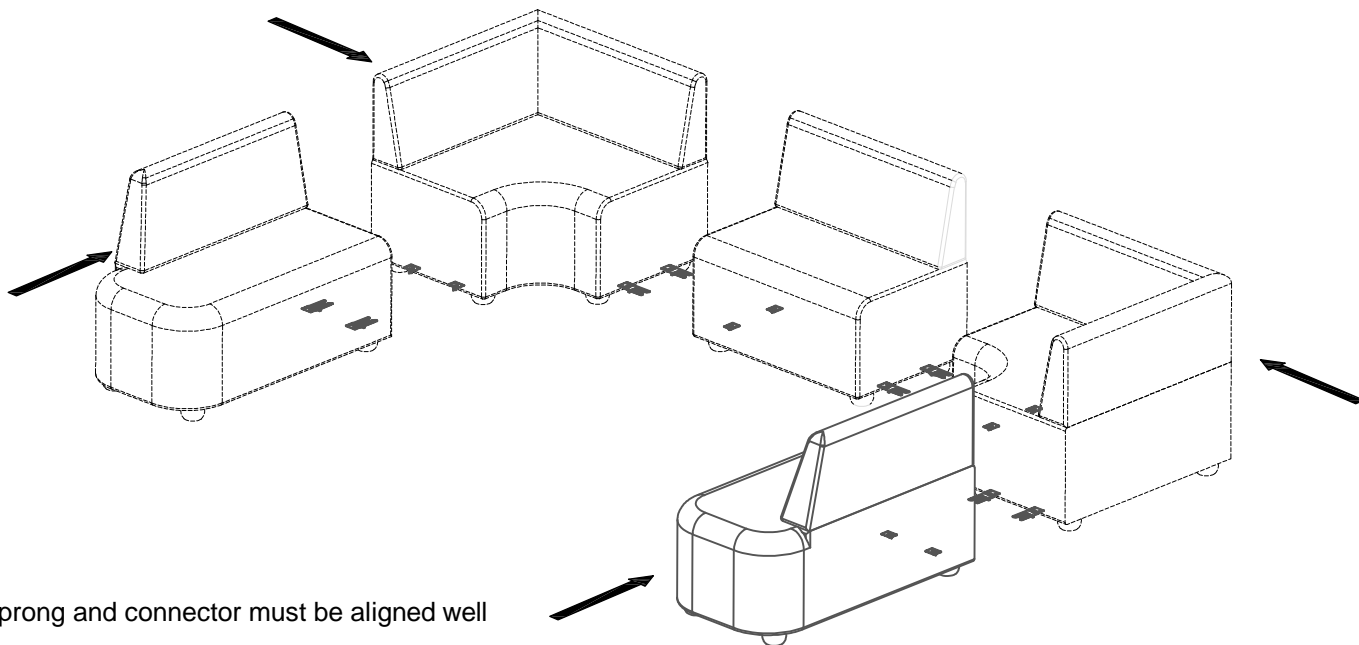

How to disconnect

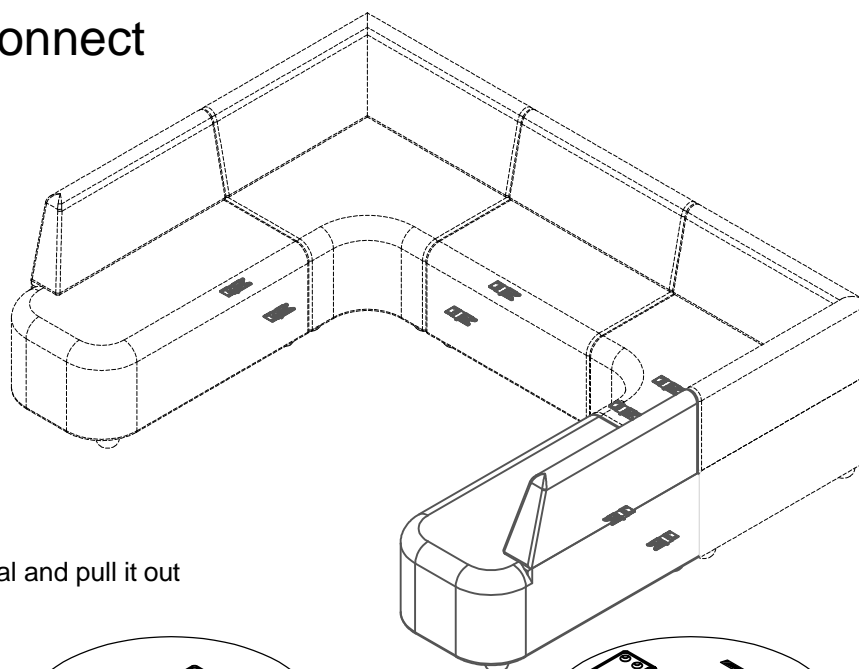 

 
Lift up the right sectional and pull it out

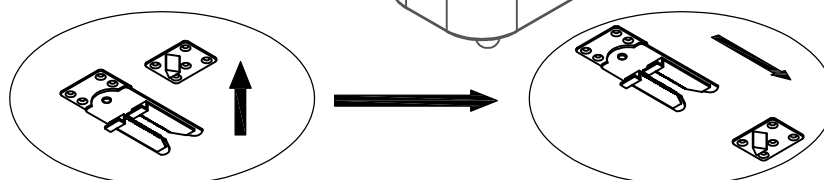


ASSEMBLY INSTRUCTION

Clemence Dining Banquette U Shape 128"

 
Assembly of the sectionals

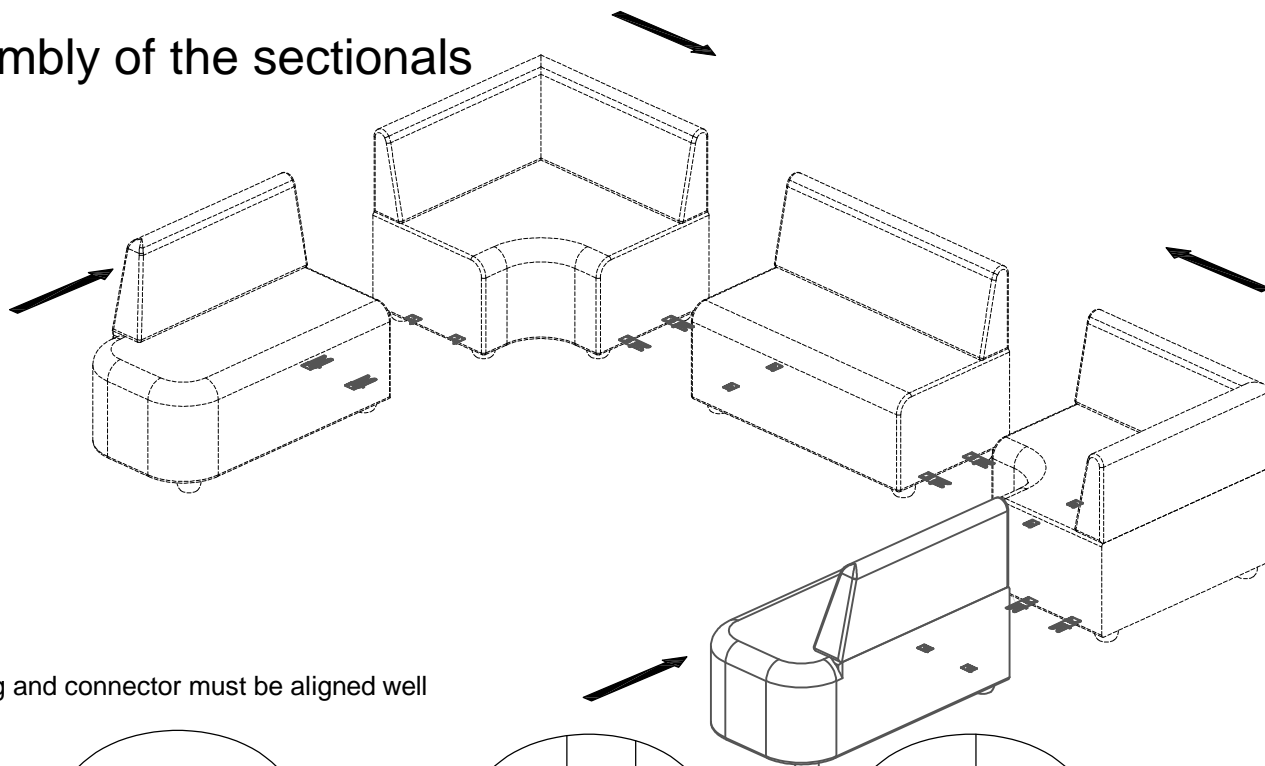

 
The prong and connector must be aligned well

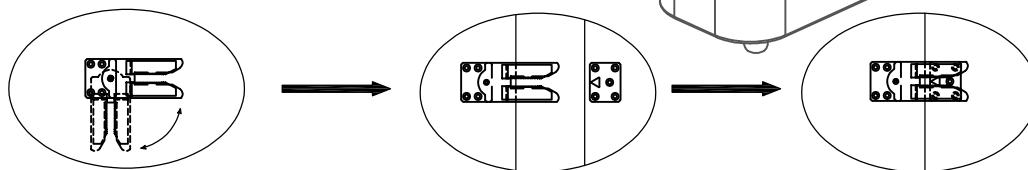

How to disconnect

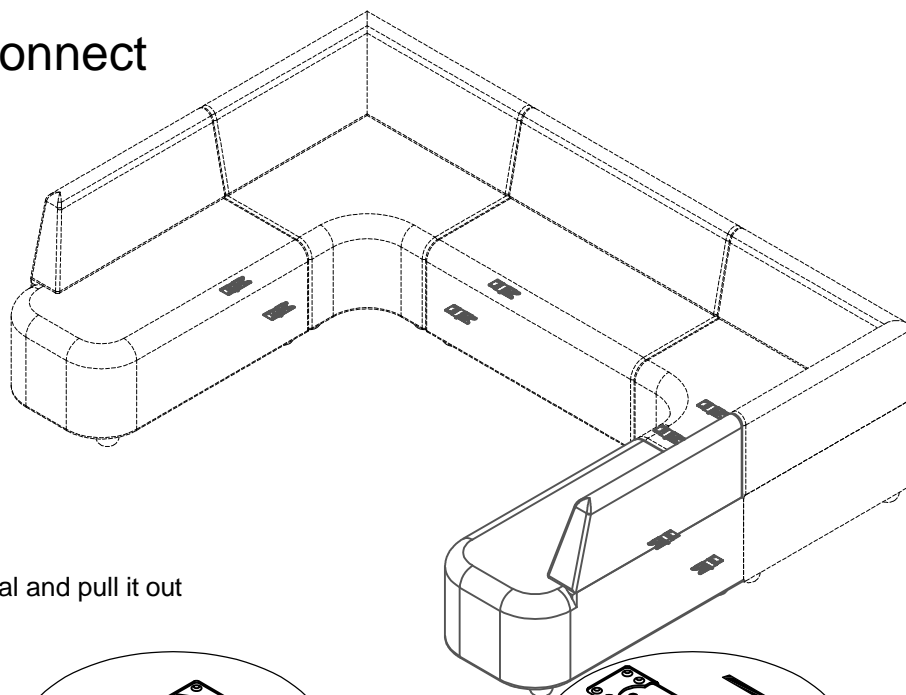 

 
Lift up the right sectional and pull it out

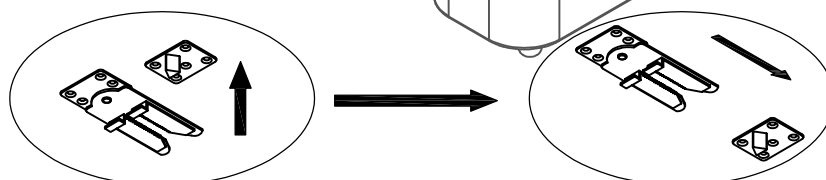


ASSEMBLY INSTRUCTION

Clemence Dining Banquette L Shape 111.5"-Right

 
Assembly of the sectionals

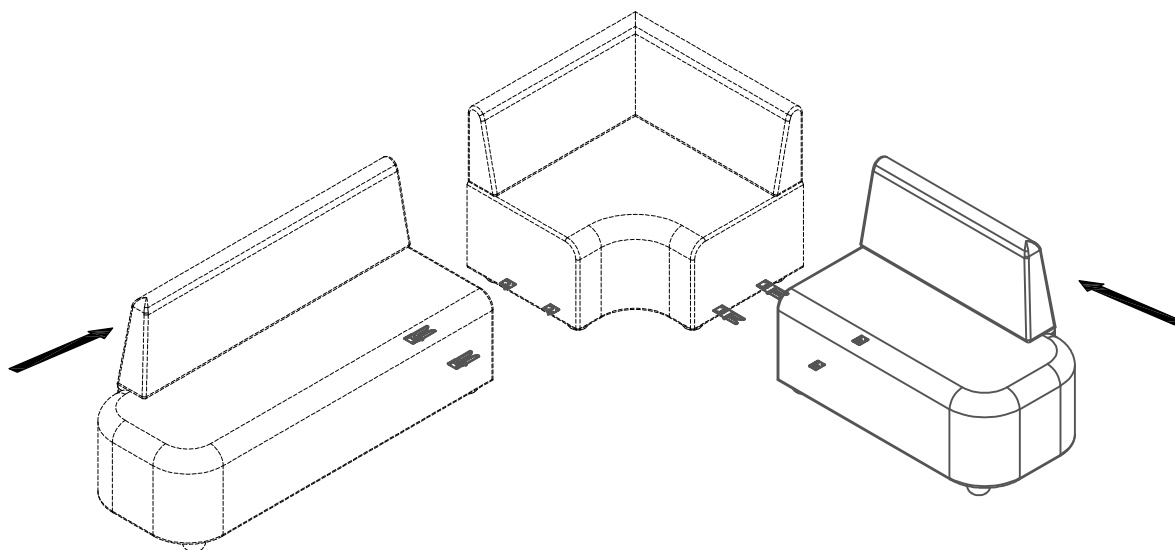

 
The prong and connector must be aligned well

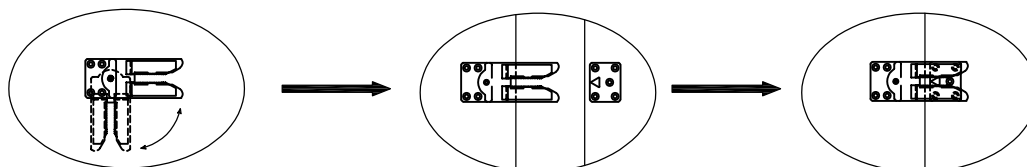

How to disconnect

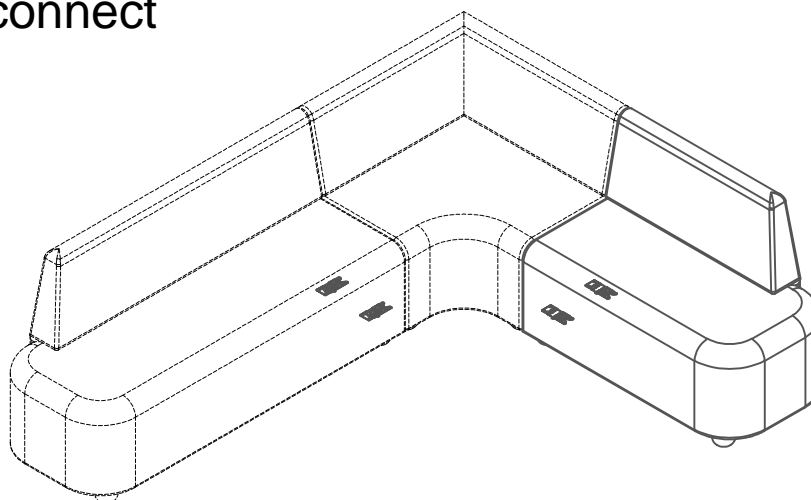 

 
Lift up the right sectional and pull it out

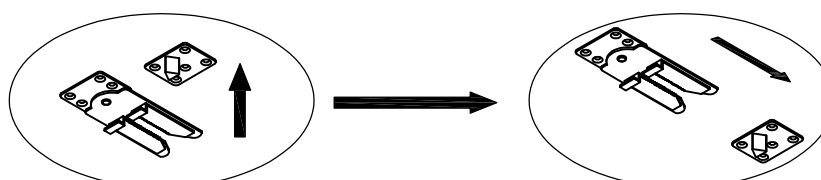


ASSEMBLY INSTRUCTION

Clemence Dining Banquette L Shape 88.5"

 
Assembly of the sectionals

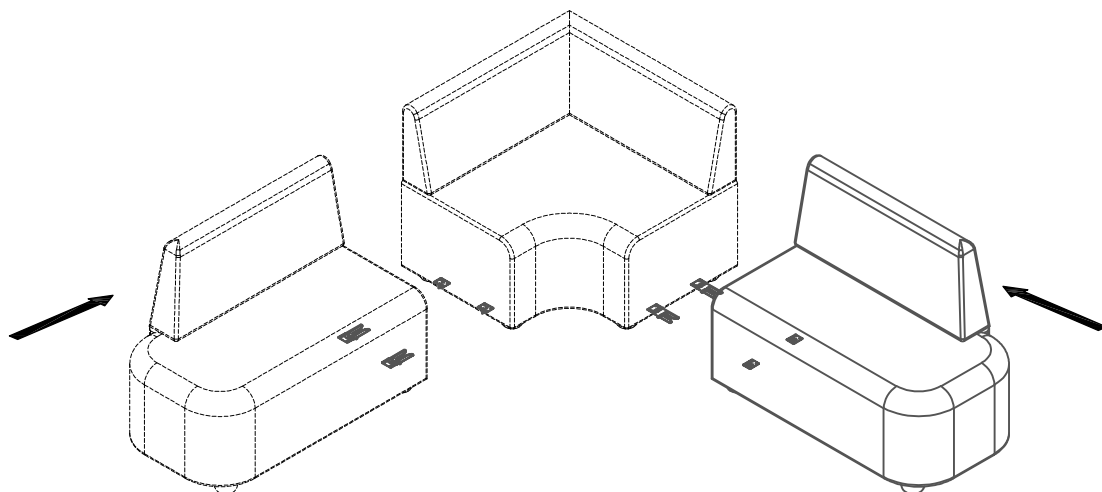

 The prong and connector must be aligned well

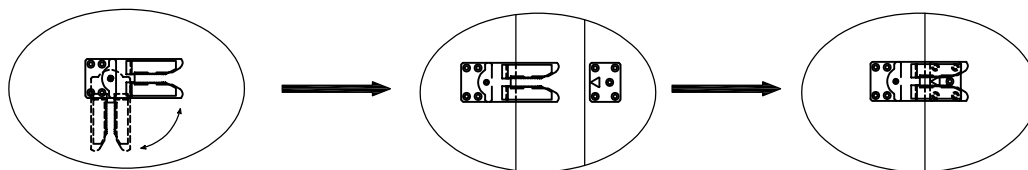

How to disconnect

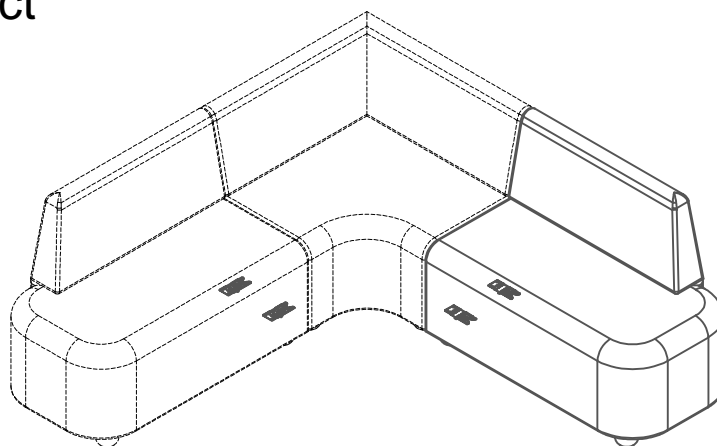 

Lift up the right sectional and pull it out

