

HARDWARE LIST

A

TABLE
BASE



4 PCS.

B

TABLE
TOP



1 PC.

C

NET



1 PCS.

D

FIX PLATE



1 PCS.

E

 
WASHER
1/4"



26 PCS.

F


SCREW
BASE
1 1/2"



16 PCS.

G

 SCREW
TOP
1 1/4"



10 PCS.

H

PADDLE



4 PCS.


I

BALL




4 PCS.




ASSEMBLY INSTRUCTIONS FOR PING PONG VELA TABLE


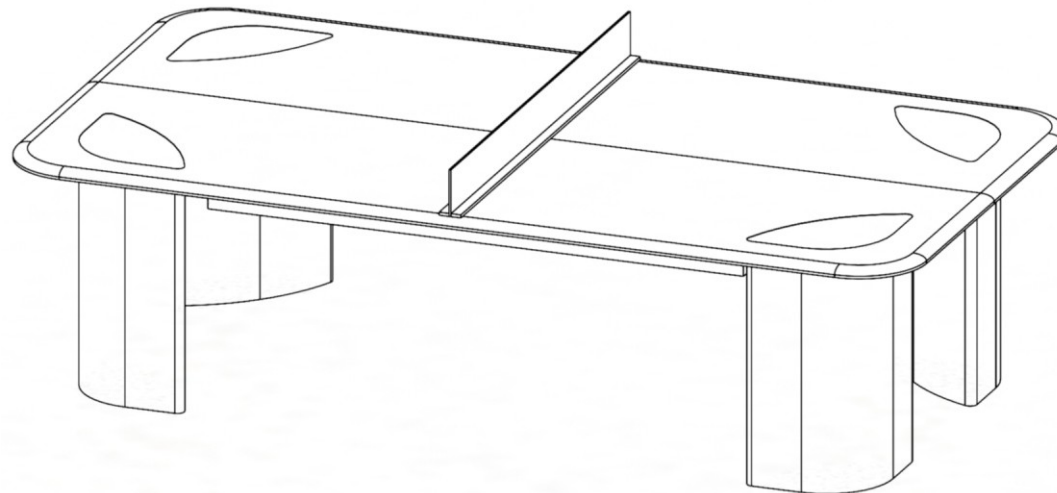


NOTE: SCREW DRIVER NOT INCLUDED **HEAVY ITEM HANDLE WITH CARE TO AVOID FINGER INJURIES**

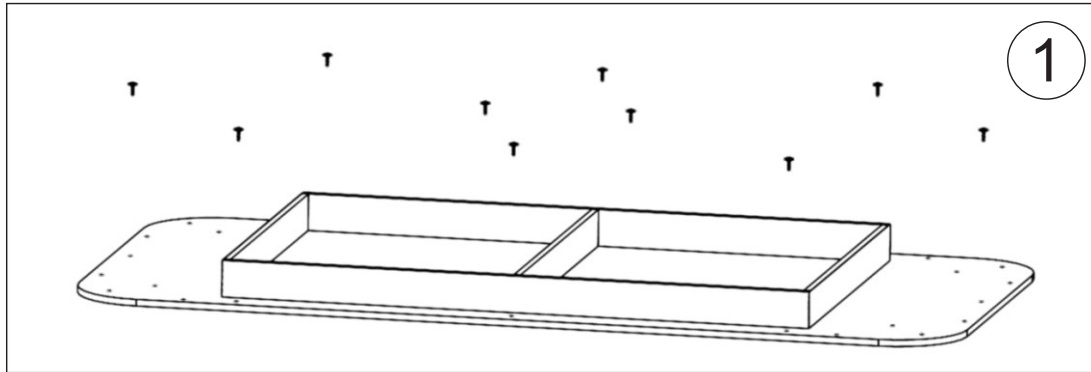

REMOVE THE FIX PLATE FROM THE COVER
THIS PART INCLUDES 10 SCREWS AND 10 WASHERS

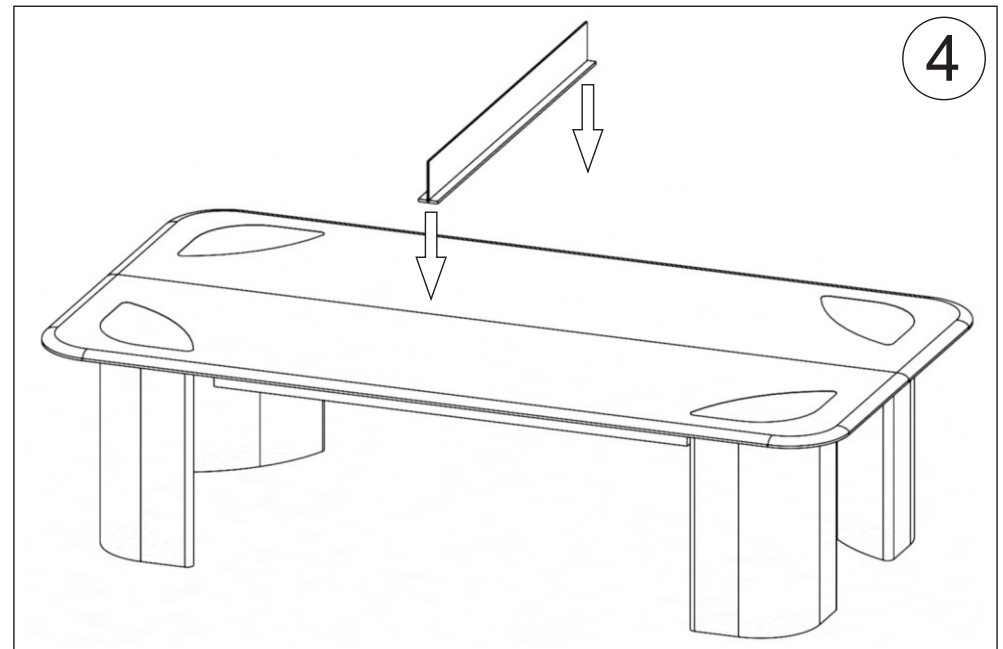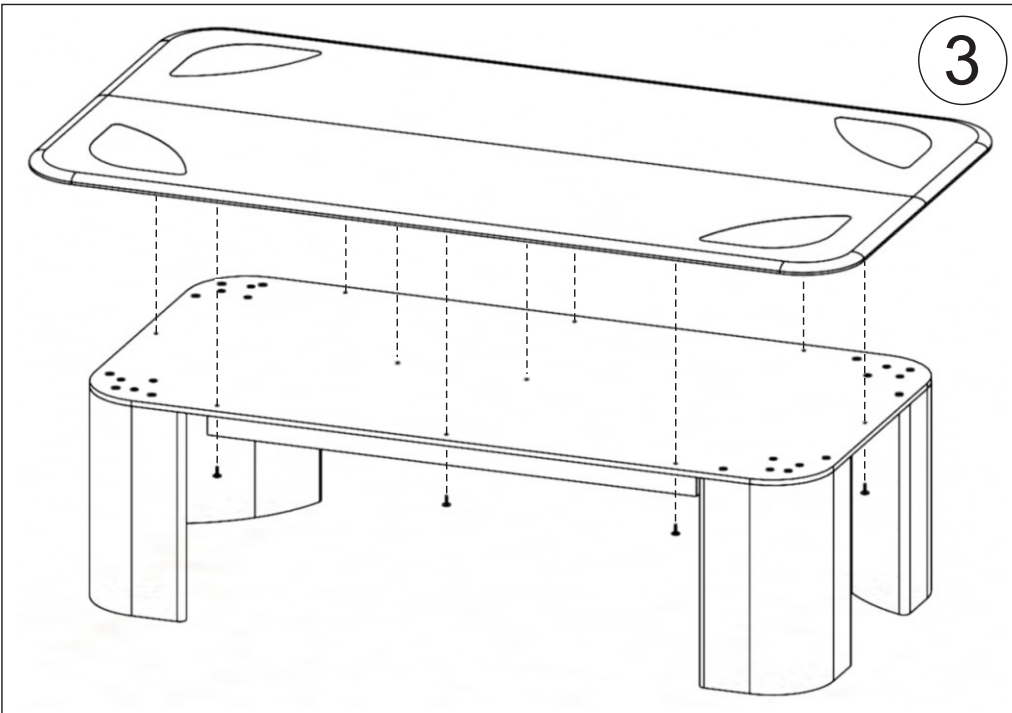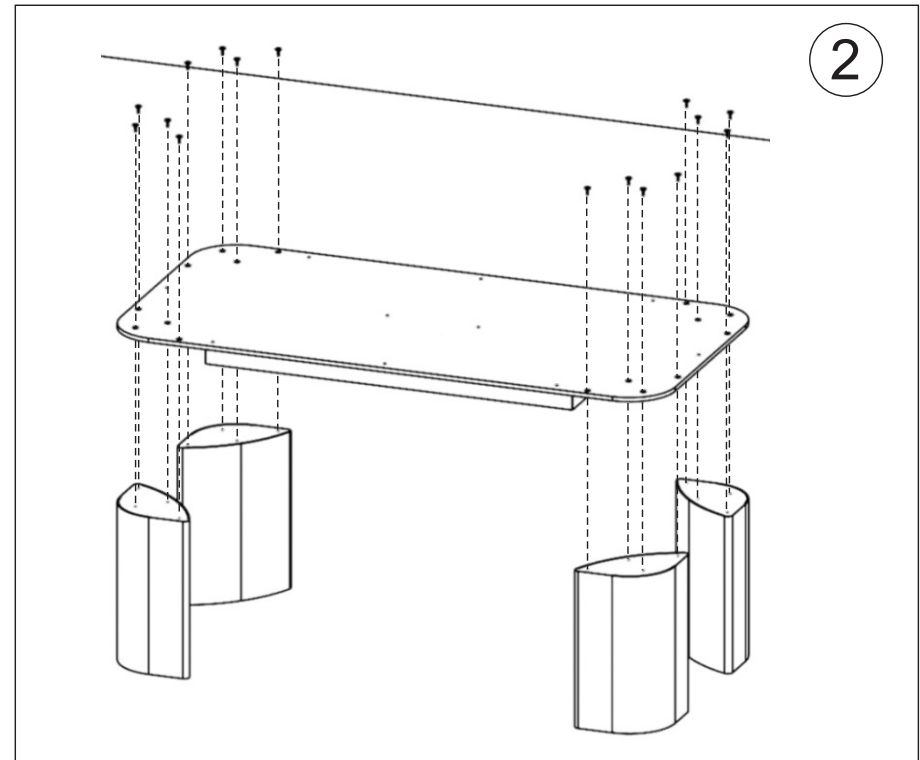

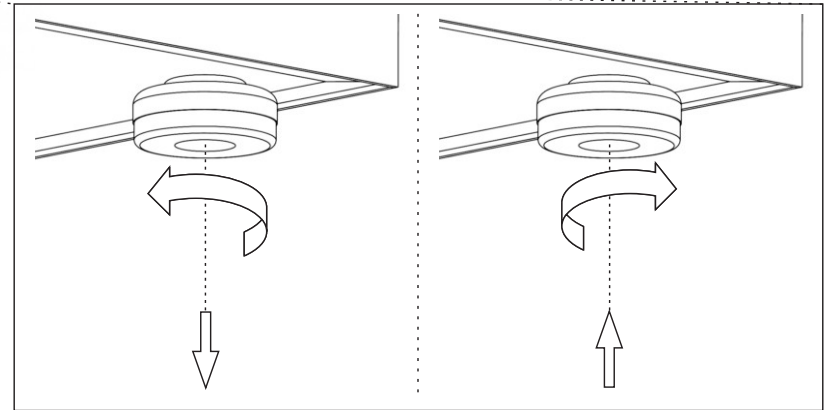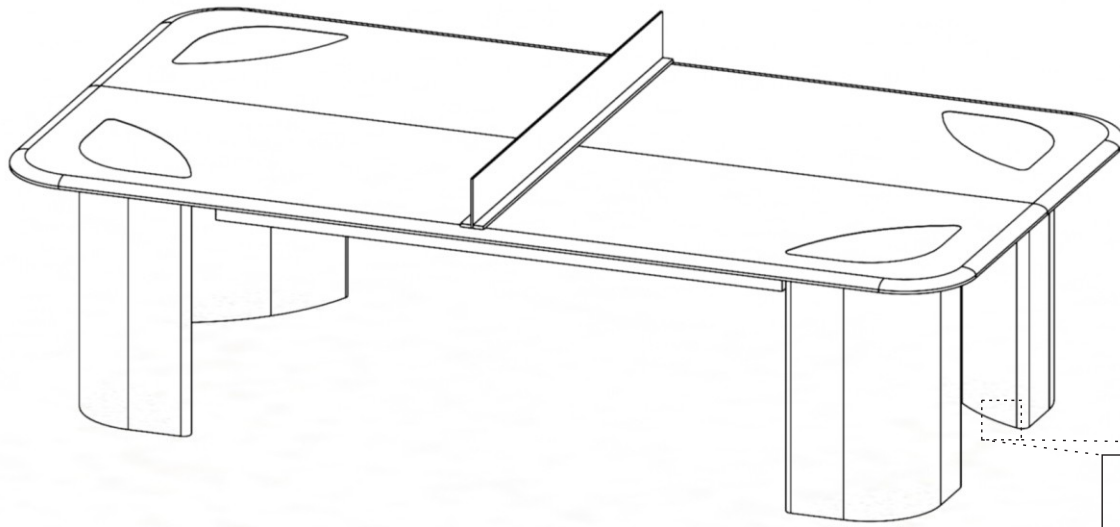

ADJUST LEVELER FOR BALANCE

Adjusting Floor Levelers

Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

Adjust the Floor Levelers

Check for Stability – Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

Locate the Levelers – These are small adjustable feet found at the bottom corners of your furniture.

Adjust as Needed – Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.