



WARNING!

Be sure electrical power is OFF before and during installation or maintenance.
The luminaire must be installed by a qualified electrician, in accordance with all applicable local codes.

Ensure that the rated luminaire voltage requirements are compatible with the available mains supply in which it will be installed.
All LEDs are included in your lamp. Never touch the LED surface with your bare hands as this may reduce the life of your LED.
Do not alter, relocate or remove any electrical component.

Line: Dot
Family: Wall Lamp
Description: Accord Dot Wall Lamp 4127

Input Voltage: 120V - 240 V
Input Frequency: 60 Hz

Material: Natural Wood Veneer, MDF, carbon steel, aluminum.

Read carefully all the assembling instructions below and turn OFF energy power before starting the installation.

TURN OFF THE POWER BEFORE STARTING THE INSTALLATION

- 1 Remove the protecting package from the pieces taking care to not harm any parts with cutting surfaces or objects. Lay the parts of the fixture on some horizontal surface in order to connect them, if needed use the protecting package to soften the surface and protect the parts from getting scratched or harmed.

ASSEMBLING THE FIXTURE

- 2 Using the support base as a template, with an 8mm drill, drill the holes on the wall to fixate the support base.
- 3 Insert the provided bushings into the holes.

MAKING THE ELECTRICAL CONNECTIONS

 
 
- 4 Bring the luminaire close to the junction box and wire it to the mains supply according to all the local electrical codes and regulations. Insert any excess wire inside the electrical box.

INSTALLING THE LUMINAIRE

- 5 Using the (S2) provided screws, fixate the junction box cover with the junction box.
- 6 Using the (S1) provided screws, fixate the support base with the bushings, and make sure that the support base is secured.
- 7 Fit the luminaire into the support.
- 8 Install the deflector on top of the metal rod.
- 9 Install a Max 8W LED GU10 MR16 bulb into the socket.

TURN ON THE POWER.

The luminaire is ready for use.

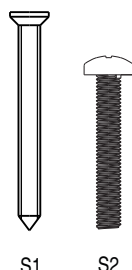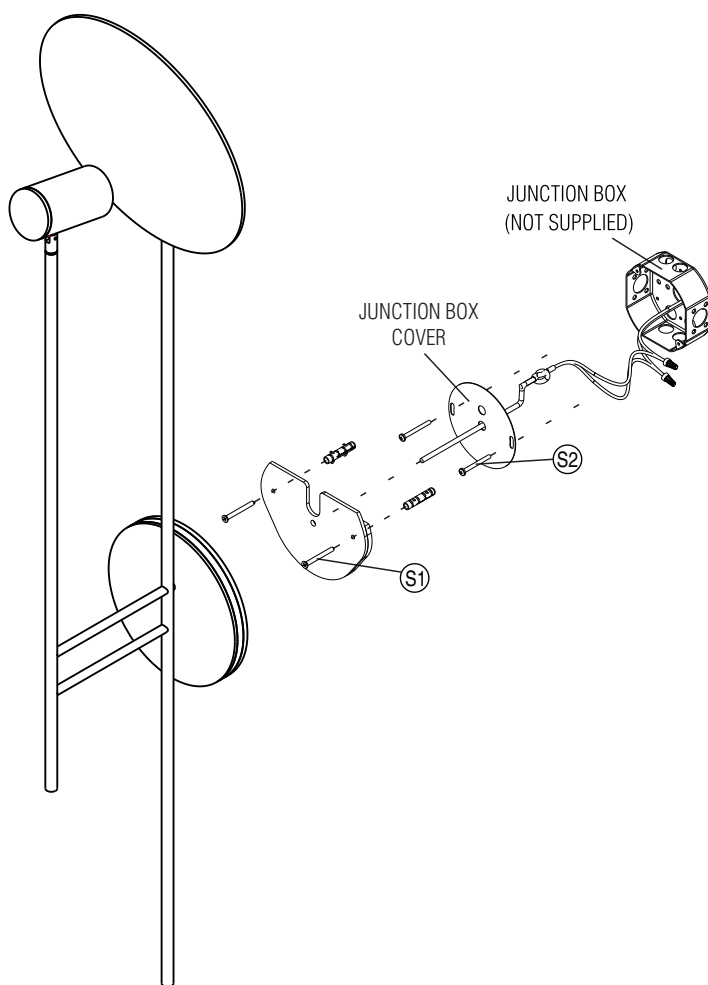

ATTENTION!

FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY CAUSE ACCIDENTS AND LOSS OF PRODUCT WARRANTY.
It's recommended to read these instructions completely and carefully before proceeding.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ACCORD Lighting guarantees coverage against manufacturing defects including electrical components and finishes, for a period of three years, under normal use, from the date of purchase. For warranty service, please contact your local dealer for further instructions. Proof of date of purchase will be required for validation of warranty service.

The responsibility of the manufacturer regarding the product warranty is related to the correct observation of the instructions contained in this manual.
The manufacturer is not responsible for any damage to the product caused by accidents, alterations of any kind, improper usage or improper installation.
See the website for additional warranty details.

ACCORD Lighting reserves the right to change the dimensions and specifications contained in this manual without prior notice, in accordance with its policy of continuous product improvement. Please, contact the manufacturer if additional information is necessary. The illustrations in this manual are for guidance only and may vary in scale, dimensions and model details.

WARNING!



Be sure electrical power is OFF before and during installation or maintenance.
The luminaire must be installed by a qualified electrician, in accordance with all applicable local codes.

Ensure that the rated luminaire voltage requirements are compatible with the available mains supply in which it will be installed.
All LEDs are included in your lamp. Never touch the LED surface with your bare hands as this may reduce the life of your LED.
Do not alter, relocate or remove any electrical component.

Line: Dot
Family: Wall Lamp
Description: Accord Dot Wall Lamp 4128

Input Voltage: 120V - 240 V
Input Frequency: 60 Hz

Material: Natural Wood Veneer, MDF, carbon steel, aluminum.

Read carefully all the assembling instructions below and turn OFF energy power before starting the installation.

TURN OFF THE POWER BEFORE STARTING THE INSTALLATION

- 1 Remove the protecting package from the pieces taking care to not harm any parts with cutting surfaces or objects. Lay the parts of the fixture on some horizontal surface in order to connect them, if needed use the protecting package to soften the surface and protect the parts from getting scratched or harmed.

ASSEMBLING THE FIXTURE

- 2 Using the support base as a template, with an 8mm drill, drill the holes on the wall to fixate the support base.
- 3 Insert the provided bushings into the holes.

MAKING THE ELECTRICAL CONNECTIONS

 
- 4 Bring the luminaire close to the junction box and wire it to the mains supply according to all the local electrical codes and regulations. Insert any excess wire inside the electrical box.

INSTALLING THE LUMINAIRE

- 5 Using the (S2) provided screws, fixate the junction box cover with the junction box.
- 6 Using the (S1) provided screws, fixate the support base with the bushings, and make sure that the support base is secured.
- 7 Fit the luminaire into the support.
- 8 Install the deflector on top of the metal rod.
- 9 Install a Max 8W LED GU10 MR16 bulb into the socket.

TURN ON THE POWER.


The luminaire is ready for use.

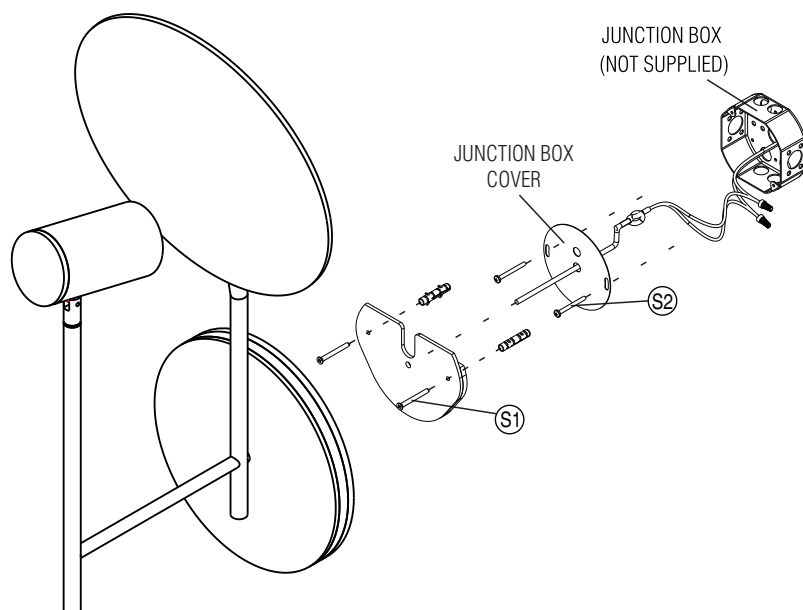

ATTENTION!



 FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY CAUSE ACCIDENTS AND LOSS OF PRODUCT WARRANTY.
It's recommended to read these instructions completely and carefully before proceeding.

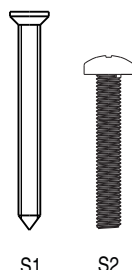

S1

S2

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ACCORD Lighting guarantees coverage against manufacturing defects including electrical components and finishes, for a period of three years, under normal use, from the date of purchase. For warranty service, please contact your local dealer for further instructions. Proof of date of purchase will be required for validation of warranty service.

The responsibility of the manufacturer regarding the product warranty is related to the correct observation of the instructions contained in this manual.
The manufacturer is not responsible for any damage to the product caused by accidents, alterations of any kind, improper usage or improper installation.
See the website for additional warranty details.

ACCORD Lighting reserves the right to change the dimensions and specifications contained in this manual without prior notice, in accordance with its policy of continuous product improvement. Please, contact the manufacturer if additional information is necessary. The illustrations in this manual are for guidance only and may vary in scale, dimensions and model details.