

## ASSEMBLY INSTRUCTIONS

### ITEM DESCRIPTION:

ITEM NO.: DWC84

NAME: Oyster Sconce-UL

MATERIAL TYPE: Glass/Resin/Iron

Champagne Resin


SOCKET TYPE: LED

SOCKET QTY: 1


BULB WATTAGE: LED 12W /2700K / 90+CRI

VOLTAGE: 110V-120V

ITEM NET WEIGHT: 4.4LBS

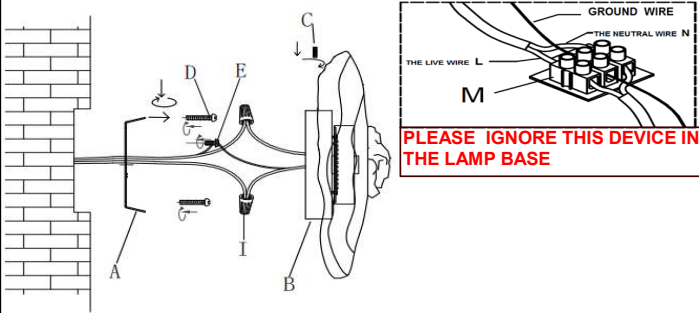

### INCLUDED ASSEMBLY HARDWARE

 

### TOOLS NEEDED( INCLUDED)

J ALLEN WRENCH



### PARTS INCLUDED:

MOUNTING PLATE(A) Qty:1

B BACK PLATE(B) Qty:1

PLATE SCREW(C) Qty:1

MOUNTING SCREW(D) Qty:2

GROUND SCREW(E) Qty:1

### HARDWARE INCLUDED:

MOUNTING PLATE Qty: 1PC

Plastic Wire Connector Qty: 3PCS

### TOOLS NEEDED ( Included):

1 Allen Wrench

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



### TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER.
- 2.REMOVE THE MOUNTING PLATE (A) FROM THE BACK PLATE (B) BY LOOSE PLATE SCREWS(C)
- 3.PULL THE ELECTRICAL CORD OF "J BOX"THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A)
- 4.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW(E) INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW.IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- 5.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE(USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
- 6.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED.
- 7.GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
- 8.ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX USING THE MOUNTING SCREWS(D).TIGHTEN WITH A SCREWDRIVER.
- 9.ATTACH THE BACK PLATE ASSEMBLY (B)TO THE MOUNTING PLATE(A) USING THE ENCLOSED PLATE SCREWS(C). TIGHTEN SCREWS WITH A ALLEN WRENCH(J).
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
10. INSERT LIGHT BULB(Not Included).
11. RESTORE POWER TO JUNCTION BOX AND TESE FIXTURE.

### CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

A R T E R I O R S