

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: GDDWC02 NAME:Neushoorn Wall Sconce

MATERIAL TYPE: Iron / Resin FINISH: New Bronze


SOCKET TYPE: LED SOCKET QTY: 1

BULB WATTAGE: LED 20W /2700K / 90+CRI

VOLTAGE: 110V-120V ITEM NET WEIGHT: 13.2 LBS

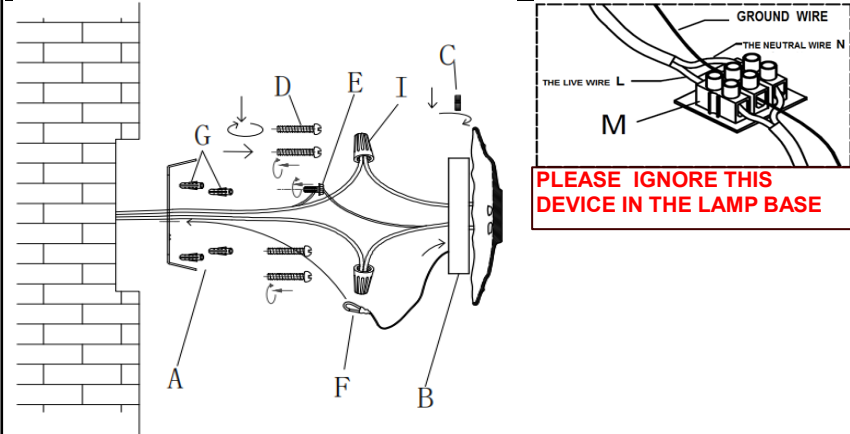

Included Assembly Hardware

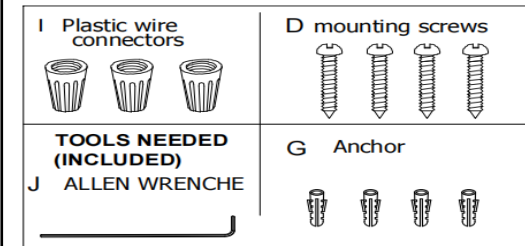

PARTS INCLUDED:

MOUNTING PLATE(A)	Qty:1
BACK PLATE(B)	Qty:1
PLATE SCREW(C)	Qty:1
MOUNTING SCREW(D)	Qty:4
GROUND SCREW(E)	Qty:1

HARDWARE INCLUDED:

MOUNTING PLATE	Qty: 1PC
Plastic Wire Connector	Qty: 3PCS

TOOLS NEEDED (Included):

1 Allen Wrench

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician. electrician.

For customer service questions call 1-800-338-2150



TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER.
 2. ATTACH MOUNTING PLATE(A) TO WALL OR JUNCTION BOX USING ANCHOR(G) MOUNTING SCREWS(D).
 3. CONNECT GROUND WIRE FROM WALL TO GROUND WIRE FROM LAMP USING WIRE CAPS(I)
 4. REMOVE THE MOUNTING PLATE (A) FROM THE BACK PLATE (B) BY LOOSE PLATE SCREWS(C) ATTACH THE WIRE CLIP(F) TO THE MOUNTING PLATE (A)
 5. PULL THE ELECTRICAL CORD OF "J BOX" THROUGH THE EXIT HOLE OF THE MOUNTING PLATE(A)
 6. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW(E) INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
 7. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
 8. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX.
 9. ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX USING THE MOUNTING SCREWS(D). TIGHTEN WITH A SCREWDRIVER.
 10. ATTACH THE BACK PLATE ASSEMBLY (B) TO THE MOUNTING PLATE(A) USING THE ENCLOSED PLATE SCREWS(C). TIGHTEN SCREWS WITH A ALLEN WRENCH(J).
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
12. RESTORE POWER TO JUNCTION BOX AND TEST FIXTURE.
 13. PLEASE PAY SPECIAL ATTENTION TO THE FACT THAT YOU DO NOT NEED TO CONNECT THE WIRE TO THE DEVICE (M). IT IS USED FOR WIRE CONNECTIONS IN THE EUROPEAN MARKET.

DO NOT EXCEED SPECIFIED MAX WATTAGE.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIO RS

WARNING:

INSTALL BEFORE RESTORING POWER AT THE BREAKER

LOW VOLTAGE LED DRIVER INSIDE.

**DO NOT APPLY POWER AT THE BREAKER
OR SWITCH UNTIL FIXTURE IS FULLY INSTALLED.
FAILURE TO FOLLOW INSTRUCTIONS MAY RESULT
IN MALFUNCTION AND WILL VOID WARRANTY.**