

# SEQUEL<sup>®</sup> STUDIO 6612

RETURN

## USER MANUAL

**LET'S GET STARTED.**



DESIGN MATTHEW WEATHERLY

**BDi**

BDIUSA.COM

Congratulations on the purchase of your Sequel Studio Return from BDI. Your return has been designed to provide a lifetime of enjoyment. This manual will provide you with assembly instructions and other helpful information that will ensure that you get the most out of your return. Please save it for future reference.

Your Sequel Studio Return has been engineered for simple assembly. Please follow these directions carefully to prevent any damage.

Should you need further assistance, contact BDI at [customerservice@bdiusa.com](mailto:customerservice@bdiusa.com).

ENJOY!



## HARDWARE AND COMPONENTS


Unpack and identify the parts listed below. The assembly workspace should be a non-marring surface, such as carpet. For missing hardware pieces, please contact BDI Customer Service at **customerservice@bdiusa.com**. For all other concerns, please contact your BDI retailer.

Do not use power tools for the assembly of this product.




Hex Wrench (T1)

QTY: 1

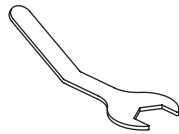


Leveler Wrench (T2)

 QTY: 1



M6 x 40mm Screw (H1)

 QTY: 4



M6 x 15mm Flathead Screw (H2)

QTY: 4




M6 x 15mm Screw (H3)

QTY: 5




Leveler (H4)

QTY: 2

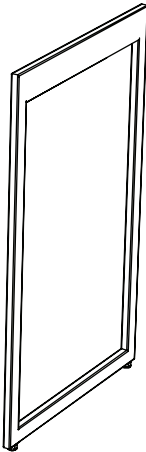


Leg Frame (C1)

QTY: 1

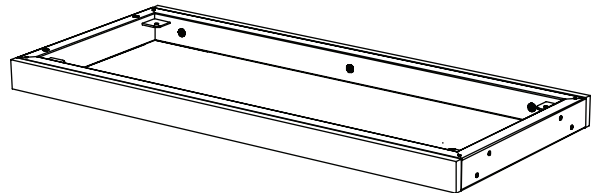


Top Frame (C2)

 QTY: 1



Connector Plate (C3)

QTY: 1

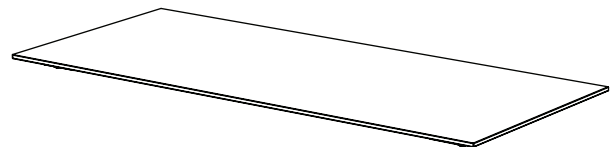


Top Panel (C4)


QTY: 1

## ASSEMBLY

### STEP 1. INSTALL LEVELERS

Install **(H4) Levelers** into the bottom of **(C1) Leg Frame**.


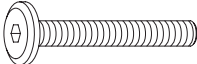
	LEVELERS – H4	QTY 2
---	---------------	----------

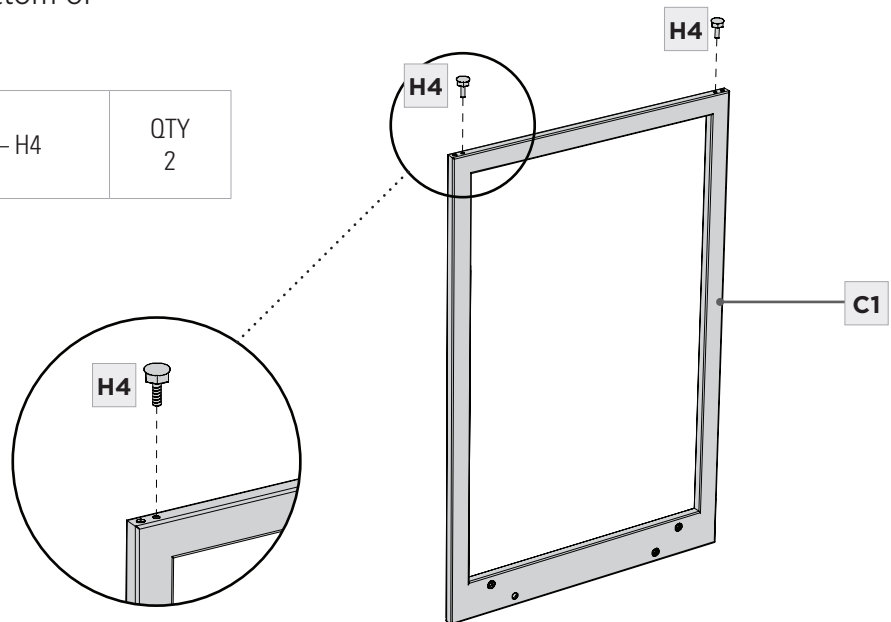


## ASSEMBLY

### STEP 2. INSTALL TOP FRAME

Connect **(C1) Leg Frame** to **(C2) Top Frame** using **4 (H1) Screws** and tighten with **(T1) Hex Wrench**.

	HEX WRENCH – T1	QTY 1
	SCREW – H1	QTY 4

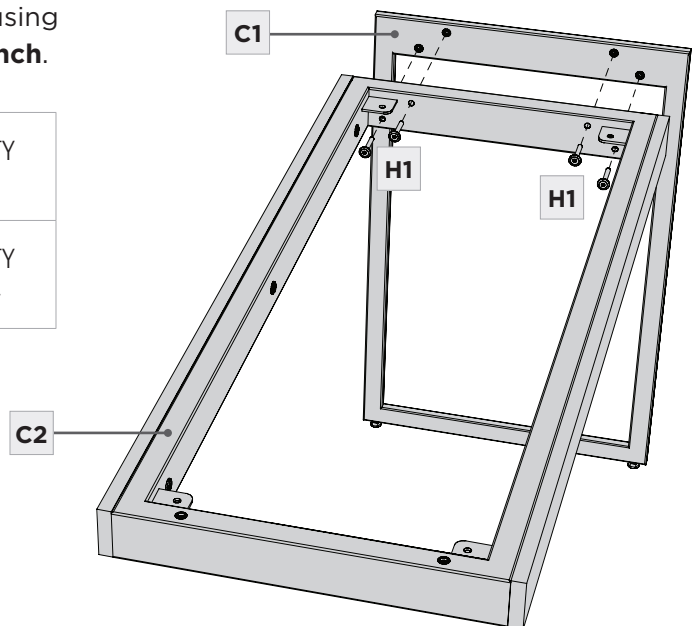

### STEP 3. SELECT ATTACHMENT TYPE & INSTALL CONNECTOR PLATE

 
## ASSEMBLY

The return may be attached to either a desk or a cabinet. **Follow one of the two options below.**

#### OPTION A — ATTACHING TO A 6601 DESK





Connect the **(C3) Connector Plate** to the underside of **(C2) Top Frame** using **2 (H2) Flathead Screws** and **(T1) Hex Wrench**. Make

sure notch is facing outward. Proceed to **Step 4 (Desk Attachment Path)**

	HEX WRENCH – T1	QTY 1
	SCREW – H2	QTY 2

#### OPTION B — ATTACHING TO A 6617 CABINET

Connect the **(C3) Connector Plate** to the topside of **(C2) Top Frame** using **2 (H2) Flathead Screws**. Make sure notch is facing outward. Proceed to **Step 7 (Cabinet Attachment Path)**

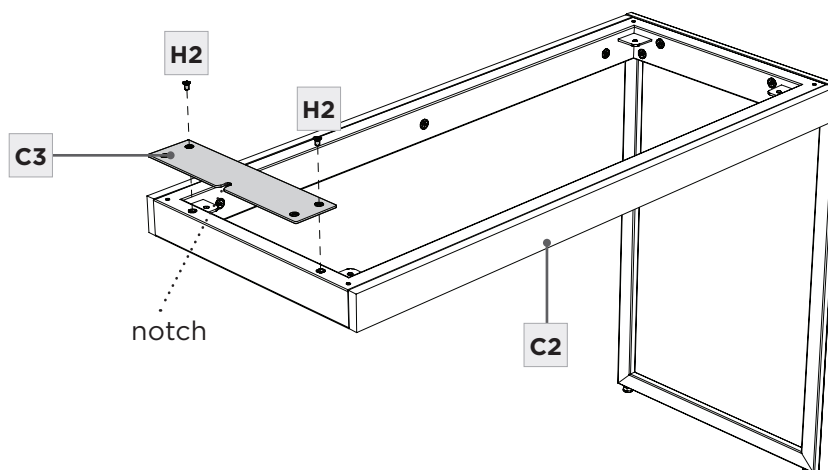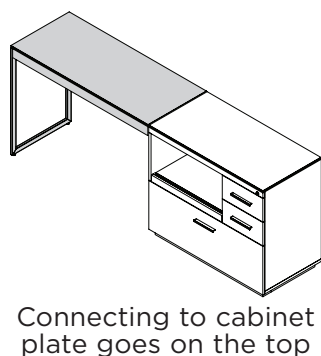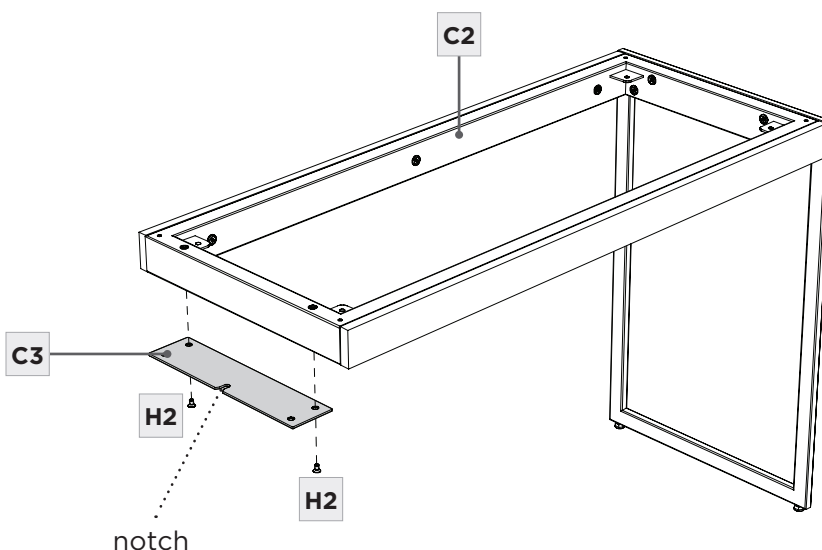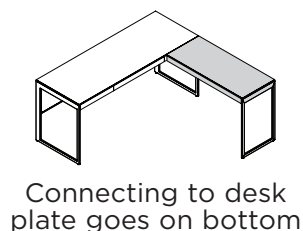


## ASSEMBLY

### STEP 4. 6601 DESK ATTACHMENT — INSTALL SCREW FOR CONNECTOR PLATE

The return may be attached either to the **left** or **right** of the center drawer of the 6601 Desk (right side shown below). Partially thread **1 (H3) Screw** into the **middle insert** leaving it extended out approximately 1/4" (6mm) — do not fully tighten to allow **(C3) Connector Plate** to slide into the space between the screw head and bottom of the desk.

**NOTE: Do not tighten this screw fully until instructed.**

	SCREW – H3	QTY 1
---	------------	----------

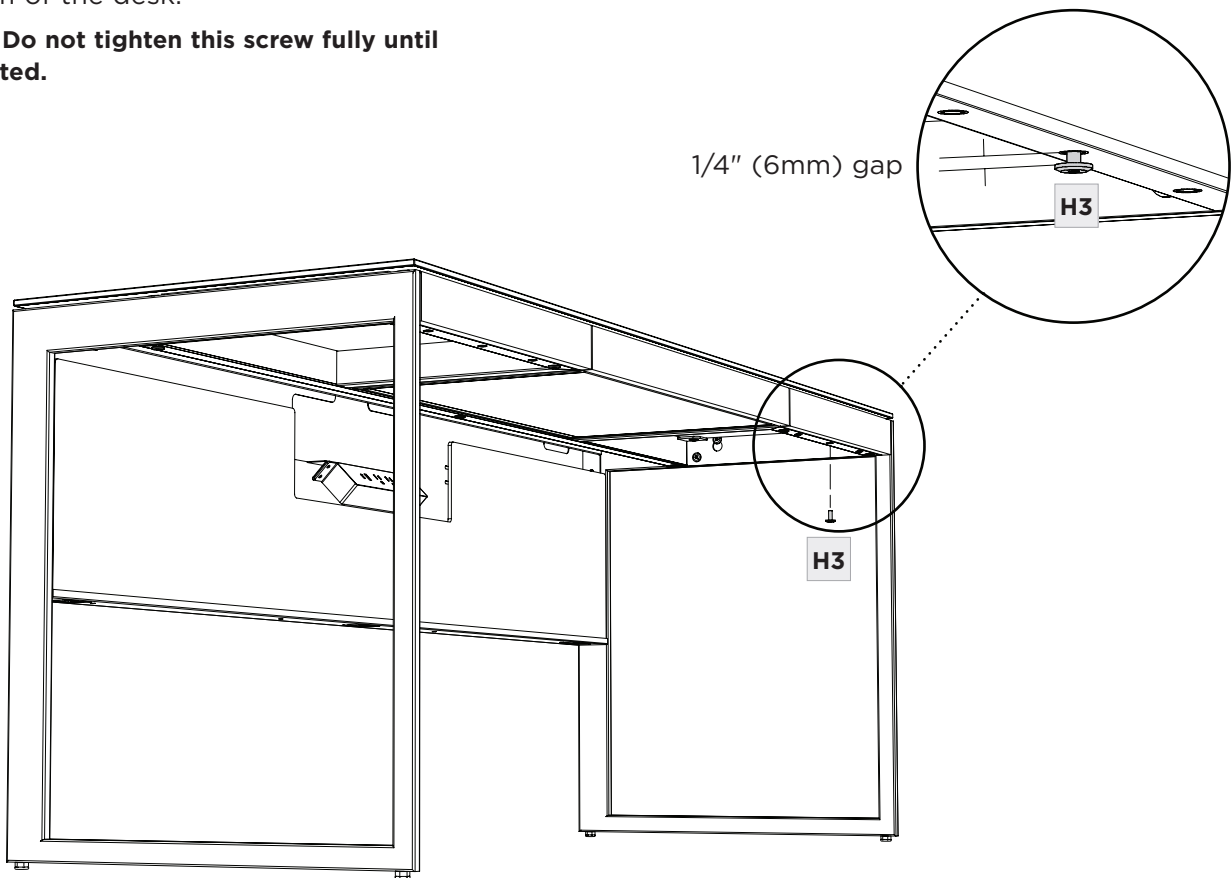


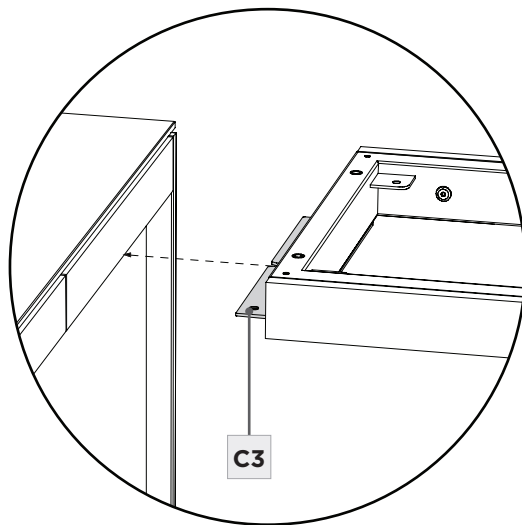
## STEP 5. 6601 DESK ATTACHMENT — ATTACH RETURN ASSEMBLY

## ASSEMBLY


Ensure the notch on the connector plate is fully seated before tightening.


Slide the notch on **(C3) Connector Plate** onto the partially threaded **middle screw**. Tighten the screw with **(T1) Hex Wrench**.

	HEX WRENCH – T1	QTY 1
--	-----------------	----------




 
Insert **(H2) Flathead Screws** into the left and right holes on the **(C3) Connector Plate** and tighten with **(T1) Hex Wrench**.

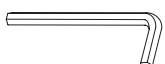
	HEX WRENCH – T1	QTY 1
	SCREW – H2	QTY 2

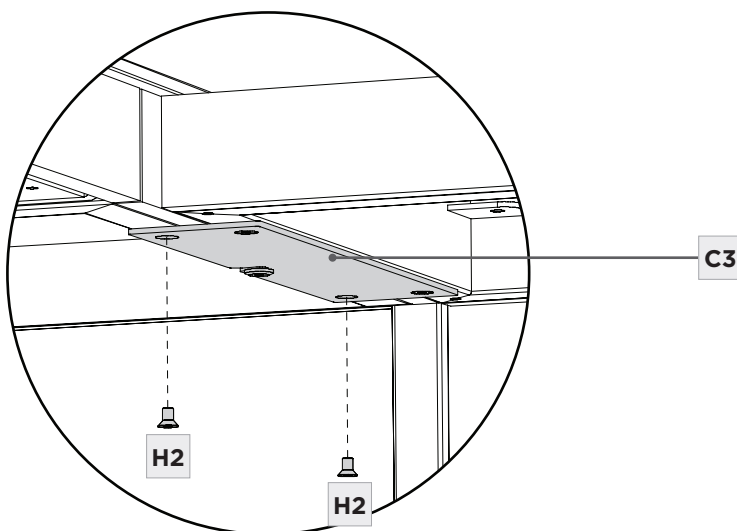

Before tightening screws, ensure the gap between the desk glass and return glass is even.

Attach **(C4) Top Panel** by placing it on top of the return and fastening with **(H3) Screws** going through the metal tabs in the corners and into the inserts on the underside of the **(C4) Top Panel** and tighten with the **(T1) Hex Wrench**.

	HEX WRENCH – T1	QTY 1
	SCREW – H3	QTY 4

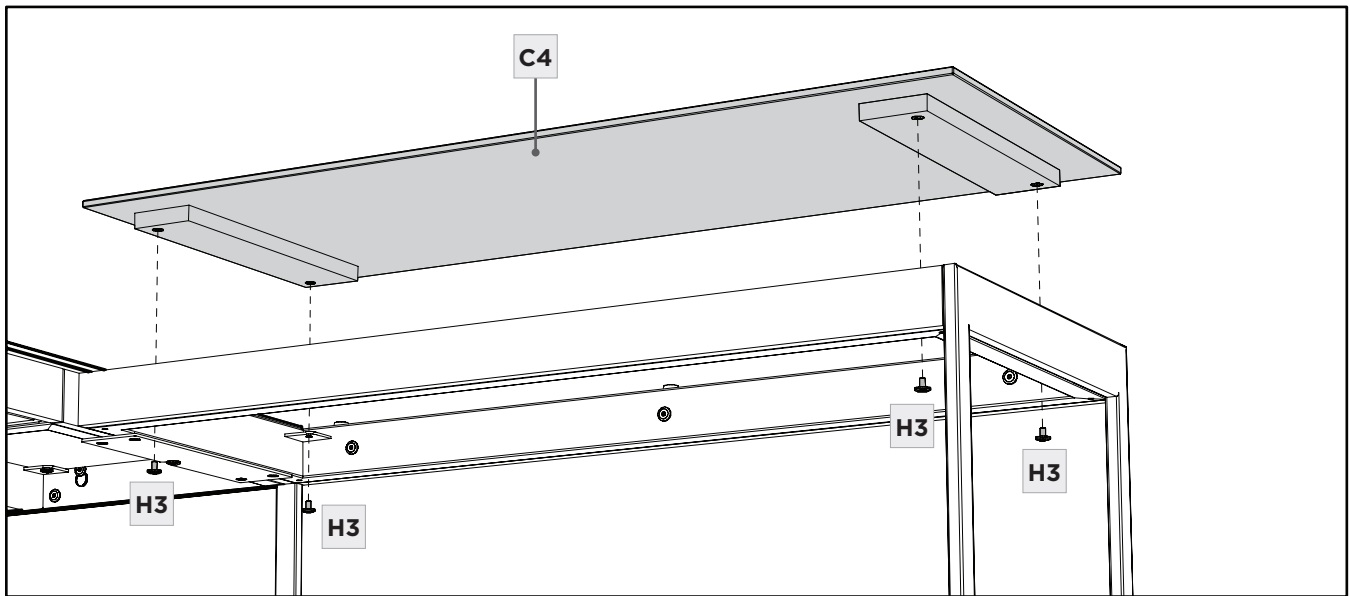





## STEP 7. 6617 CABINET ATTACHMENT — ATTACH RETURN TO CABINET

### ASSEMBLY

The return may be attached to the left or right side of the 6617 Multi-Function Cabinet.

 First, remove the glass top from the cabinet. Attach the **(C3) Connector Plate** to the cabinet using **(H2) Flathead Screws** going through the **(C3) Connector Plate** and into the 2 threaded holes on the top of the cabinet. Tighten with **(T1) Hex Wrench**. Re-install the glass top onto the cabinet.

	HEX WRENCH – T1	QTY 1
	SCREW – H2	QTY 2

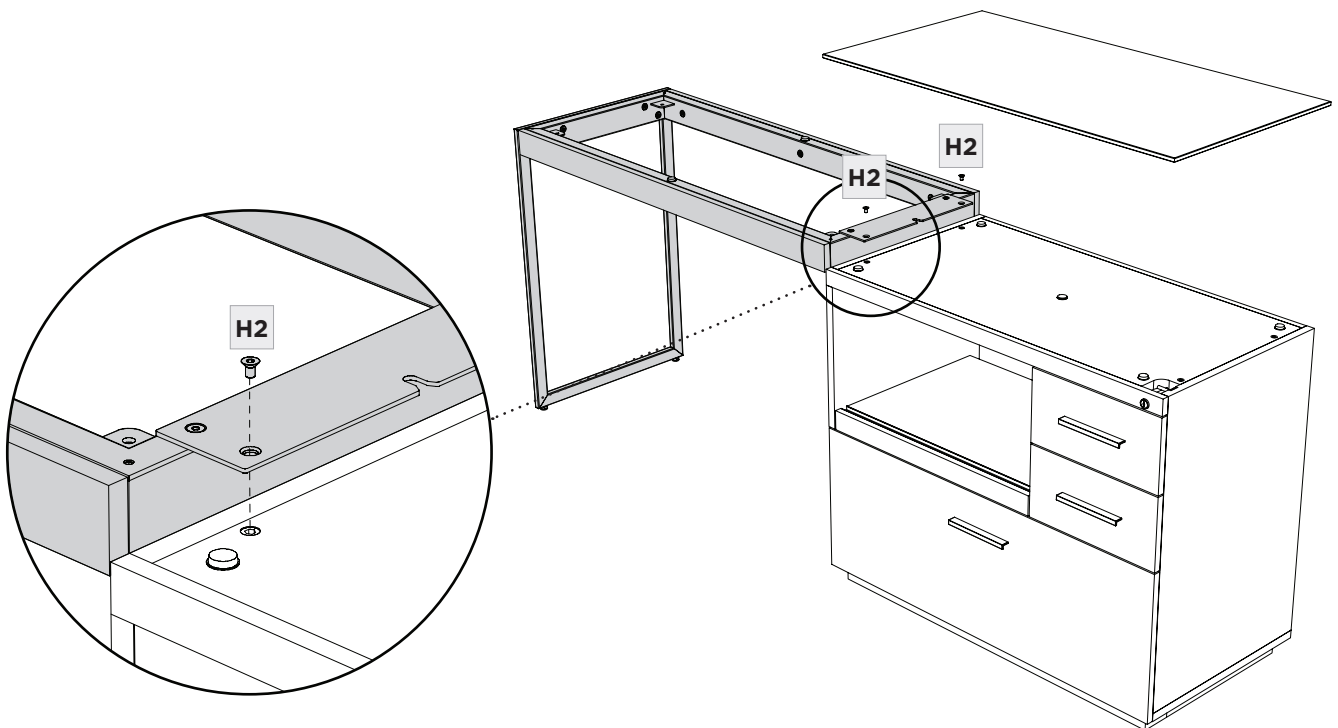



## ASSEMBLY

### STEP 8. 6617 CABINET ATTACHMENT — INSTALL TOP PANEL

Before tightening screws, ensure the gap between the desk glass and return glass is even.

 Attach **(C4) Top Panel** by placing it on top of the return and fastening with **(H3) Screws** going through the metal tabs in the corners and into the inserts on the underside of the **(C4) Top Panel** and tighten with the **(T1) Hex Wrench**.

	HEX WRENCH – T1	QTY 1
	SCREW – H3	QTY 4

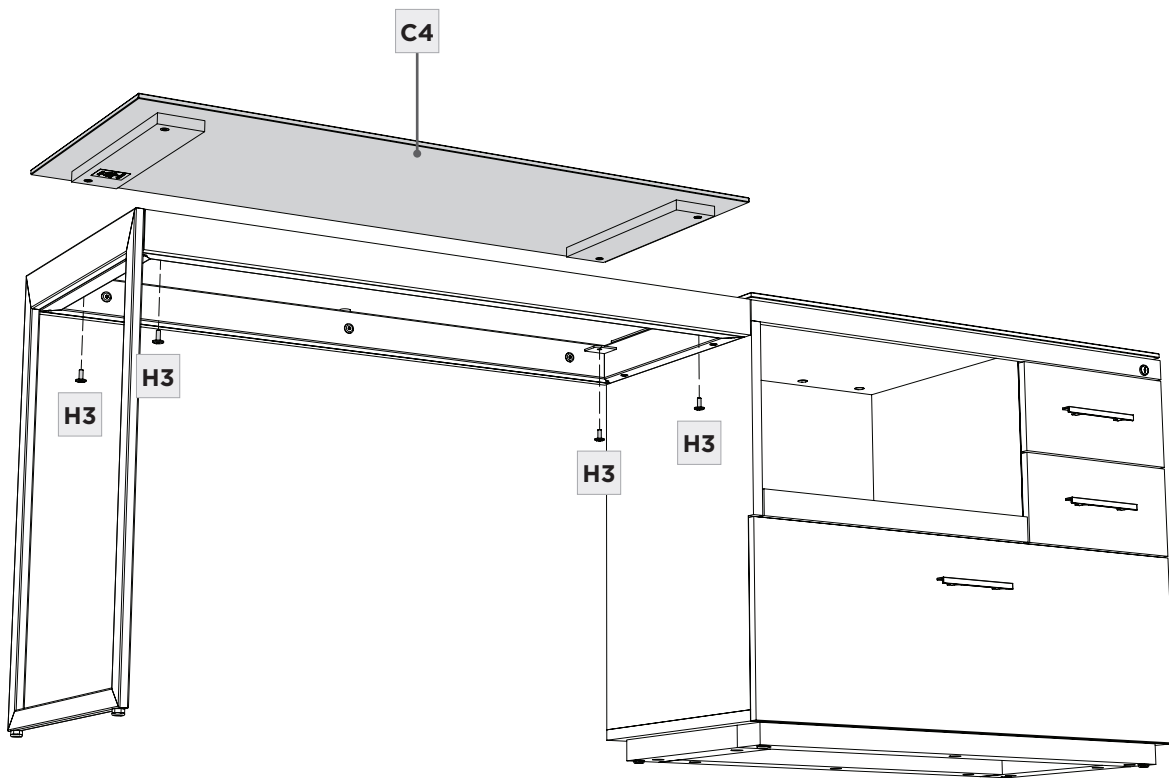

## ASSEMBLY COMPLETE

- ☐ Confirm all fasteners are fully tightened
- ☐ Confirm return is level and stable
- ☐ Confirm glass surfaces are aligned evenly

### GLASS

Glass surface is maintained using household glass cleaner and a paper towel or cloth.

### SATIN-ETCHED GLASS

This uniquely smooth-to-the-touch glass surface can be regularly maintained using household glass cleaner and a paper towel or cloth. Minor scratches or scuffs not eliminated using paper towel or cloth can usually be removed by using a 'Magic Eraser'. Magic Eraser is a melamine foam product available at any grocery store or home improvement center. Dampen the entire glass surface as well as the Magic Eraser, then rub the entire glass surface in broad, even strokes using moderate pressure. Clean and dry the surface with a paper towel. Check for results and repeat as necessary.

Any scratches or scuffing not eliminated by one of the above methods can often be addressed by 'refreshing' the glass. This is a process that should not be required more than once per 6-12 months. See this brief video for the simple method: [www.bdiusa.com/glass](http://www.bdiusa.com/glass)

### WOOD

Wood surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. Do not use glass cleaner on wood. If moisture remains, dry the surface with another cloth. If needed, a gentle non-abrasive cleanser may be used, but be sure to wipe away all cleaner residue and dry the surface with a cloth.

BDI's wood finishes feature natural hardwood solids and veneers. Wood is a product of nature and—unlike man-made materials that can be manufactured to strict and consistent specifications—has natural imperfections that are part of its appeal and character. Every piece of wood differs from every other, even when coming from the very same tree. As such, variation in grain, texture and tone should be expected from one panel or piece of furniture to the next.

While BDI's stained wood finishes are stable in tone & appearance, all finishes are subject to some degree of discoloration with prolonged exposure to direct sunlight. Please take care to avoid positioning your BDI cabinet in any area with extensive direct sunlight. To learn more about the features of natural wood, visit [www.bdiusa.com/wood](http://www.bdiusa.com/wood)

### METAL & PAINTED SURFACES

Surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. If moisture remains, dry the surface with another cloth. If needed, a gentle non-abrasive cleanser may be used, but be sure to wipe away all cleaner residue and dry the surface with a cloth.

## WARRANTY

BDI warrants to the original purchaser that for the below-stated warranty term, BDI will replace any product, part, or component covered by this warranty that fails under normal use as a result of a defect in material or workmanship. The decision to replace a complete product versus the part or component in question will be at BDI's sole discretion.

**Residential Use:** BDI Furnishings carry warranty coverage for three (3) years from the date of product delivery, as shown on your sales receipt/documentation. Select chairs carry coverage for five (5) years from the date of product delivery.


**Commercial Use:** BDI Furnishings carry warranty coverage for one (1) year from the date of product delivery, as shown on your sales receipt/documentation. Select chairs carry coverage for five (5) years from the date of the product delivery, based on an 8-hour daily use pattern.

BDI reserves the right to refine or update its warranty from time to time. See the complete and latest warranty document at [www.bdiusa.com/warranty](http://www.bdiusa.com/warranty).

## PRODUCT REGISTRATION

Registering your new BDI product allows us to send you important product updates, service information, and helpful hints related to your BDI products.

Register today, and you will be **entered to win free a BINK table** from BDI: [www.bdiusa.com/register](http://www.bdiusa.com/register)

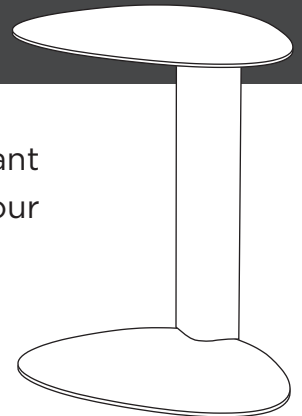

These distinctive product configurations are protected by US and international patents, trade dress, and/or copyright laws. Sequel & BDI are trademarks of Becker Designed, Inc. All rights reserved. ©2026, BDI | V.01.02.2026

Made in Vietnam.