




Limited Warranty:
1 year from the date of purchase. If product fails within the warranty period, contact:
Bulbrite Industries Inc.
returns@bulbrite.com
Bulbrite standard warranty terms and conditions shall apply.
bulbrite.com/kibun
©2025
Made with love from your friends at Kibün by Bulbrite.
Designed and Engineered in U.S.A.
Manufactured in China. All rights reserved.



Show off your style!

Show off your space with your new cordless lamp! Tag us **@Bulbrite** and use **#kibunliving**—we'd love to see it!

CARE AND USE GUIDE

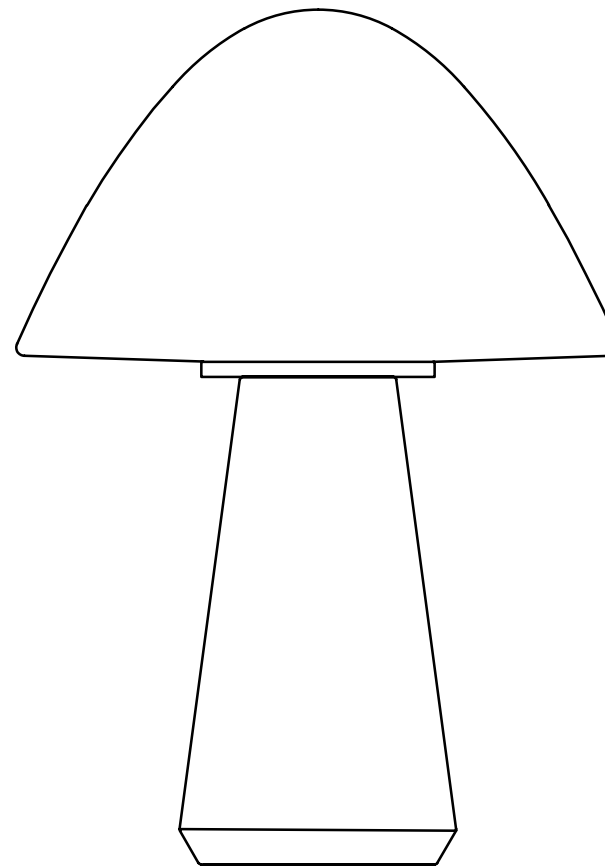


Mushroom LED Cordless Table Lamp

ITEM #

K70600 (Off White)
K70601 (Stone Blue)
K70602 (Terracota)
K70603 (Gray)

In The Box

- Mushroom Glass Canopy
- Mushroom Base
- 8' USB-C Charging Cable with Power Block

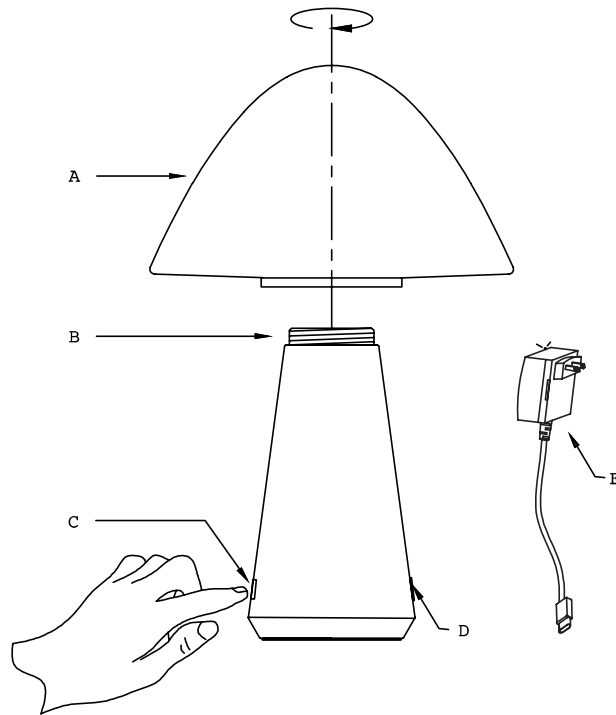

Specifications and Features

Lighting Stages: HIGH/MED/LOW
Rated Output: 300lm/150lm/60lm
Correlated Color Temperature (CCT): 2700K
Color Rendering Index (CRI): 90+
Light Approximate Run Time (HIGH): up to 5 hrs * (LOW): up to 10 hrs

5V/2A USB-C charging input port
3.7V, 5200mAh Li Ion rechargeable battery (not replaceable)**
Integrated LED design**

*Actual run time will depend on several factors including, but not limited to: environmental conditions, continuous run time, and battery age. To maximize run time, the device should be operated in cool, dry conditions, intermittently. As the battery ages, the ability to recover full capacity will degrade.

**Any attempt to access the Li-ion battery, the integrated LED panel, or any other internal portions of this device will void the warranty on this product. There are no serviceable components in this device. The LEDs are designed to last the duration of the operating life of this product.

OPERATION

ASSEMBLY

Unpack all components from the carton and ensure all items are present and undamaged.

CAUTION: When threading the Mushroom Glass Canopy onto the Mushroom Base, DO NOT OVER-TIGHTEN. Overtightening may result in damage to the Mushroom Glass Canopy, making the product unusable. Combine Mushroom Glass Canopy (A) with Mushroom Base (B) by carefully aligning inner threads on the Mushroom Glass Canopy with the outer threads on the Mushroom Base. Once threads are properly aligned, support the Mushroom Glass Canopy and thread the two components together until snug. Do not overtighten.

CHARGING

NOTE:

This device must be charged before use. The battery requires approximately 5-6 hours to fully charge. Actual charging time may vary depending on charging outlet capacity, battery age, and environmental conditions.

- Insert USB-C end of the charging cable (E) into the USB-C charging port (D).
- Insert charging cord converter into 115 VAC electrical outlet.
- The battery status light will be steady red while the battery is charging.
- Once the battery is fully charged, the battery status light will be steady green.
- Disconnect the charging cable from the USB-C charging port once the battery is fully charged.

NOTE:

The lamp may be operated while charging, if desired. Longer charging times will result.

CAUTION:

DO NOT CHARGE THIS DEVICE IN A WET ENVIRONMENT.

CAUTION:

Risk of fire, explosion, and burns. Battery can explode or leak. Do not disassemble, heat above 100°C/212°F, crush, or incinerate. Keep battery out of reach of children. Do not dispose of in fire.

USE

To turn lamp on, lightly press the touch-activated switch (C) located on the front of the Mushroom Base (B). The lamp will turn ON in the default LOW setting. Once the lamp is ON, further pressing of the touch-activated switch will cause the lamp to cycle through the settings.

The lamp operates in the following cycle:
OFF → LOW → MED → HIGH → OFF

SAFETY INSTRUCTIONS

The consumer is responsible for reading and understanding all safety information BEFORE using this device. Failure to do so may result in injury, electrical shock, or fire

- This product contains a rechargeable Lithium-ion battery. Fire and explosion hazards exist when batteries are damaged or are used improperly.
- To reduce risk of electric shock, use charging cable in an indoor dry location only. Do not charge near water /liquid. Do not place, store or charge lamp where it can fall into water. Do not submerge the product in water. The charging cable is intended for indoor use only. Do not use charging cable outdoors.
- Only use the charging cable provided with this device.
- Practice care to ensure doors/windows/drawers are not closed on the charging cable. Crimping or fraying of the charging cable may result.

-IMPORTANT- Periodically inspect the charging cable for cuts or other damage. Discontinue use of charging cable if defects are observed.

- Do not use this product if the housing, battery, or LED source are damaged.
- If this product becomes damaged, dispose of properly in accordance with federal and local laws/directives for disposal of Li-ion batteries.
- To minimize risk of fire, charge and operate this device in open air only. Do not cover this device with any material. Do not operate or store this product near combustible materials.
- Do not place or dispose of this product in a fire. A dangerous explosion may occur.
- Do not crush this product or the associated battery. A dangerous explosion may occur.
- Recommended operating temperature for this product is -4°F to 140°F (-20°C to 60°C).
- Recommended charging temperature for this product is 32°F to 140°F (0°C to 60°C).
- Do not expose this product to temperatures exceeding 140°F (60°C).
- To reduce risk of injury, provide close adult supervision if appliance is operated by children.

CARE AND CLEANING

Ensure device is unplugged and turned off when cleaning.

Do not use:

Chemical cleaning agents
Solvents, acids or alkalis
Harsh abrasives

Use a non-abrasive dry or slightly damp cloth to lightly clean or dust the product surfaces. Ensure no liquid or dust/debris fall into or build up in the charging port, as this can damage the fixture. Prior to use, test any cleaners on a small, inconspicuous area.