





MOE'S
home collection
ASSEMBLY INSTRUCTIONS.
EVERSON CONSOLE TABLE BROWN
PP -1029-20

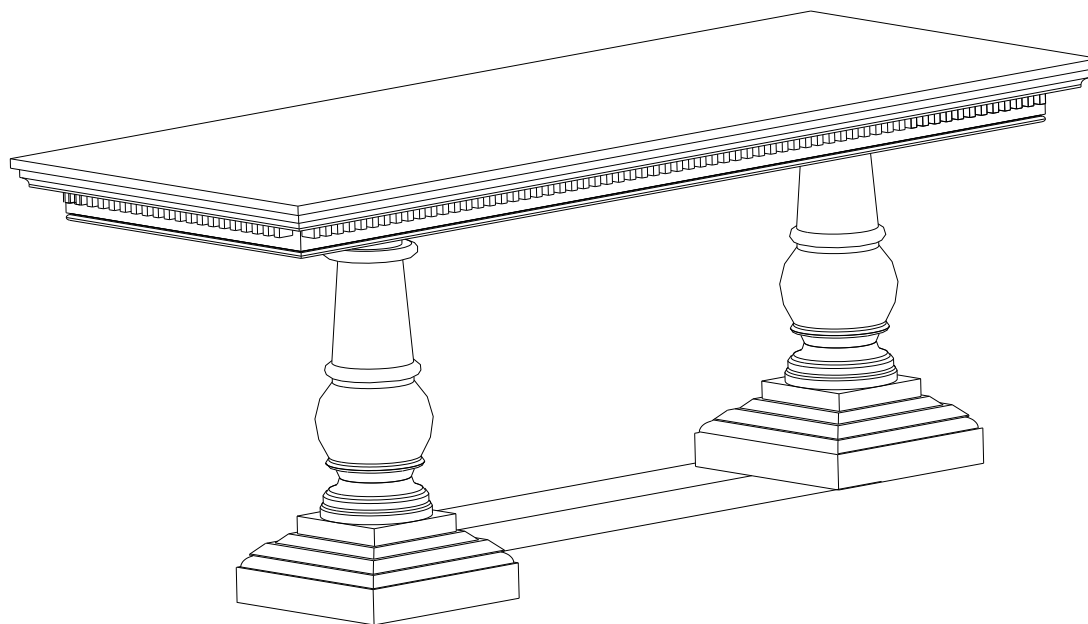




THANK YOU FOR YOUR PURCHASE!

PARTS AND HARDWARE.

 PARTS LIST.

NO.	DESCRIPTION	IMAGE	QTY
P1	CONSOLE TABLE TOP		1
P2	CONSOLE TABLE LEG		2
P3	LEG SUPPORT		1

   HARDWARE LIST.


NO.	DESCRIPTION	IMAGE	QTY
H1	HEX BOLT/ WASHER (TOP) 1/2"-13 x 2" Hex Bolt		4
H2	HEX BOLT/WASHER (SUPPORT) 1/2"-13 x 2-1/2" Hex Bolt		2
H3	SPANNER		1

NOTES.

Thank you for purchasing this quality product ! Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipping.


CAUTION : The item is heavy. assembly should be performed by two people.

STEP 1.

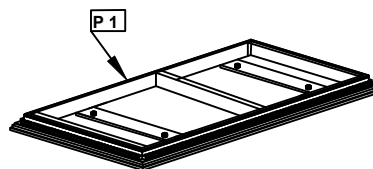


- Place P1 (Dining Table Top) upside down on a clean surface.

STEP 2.

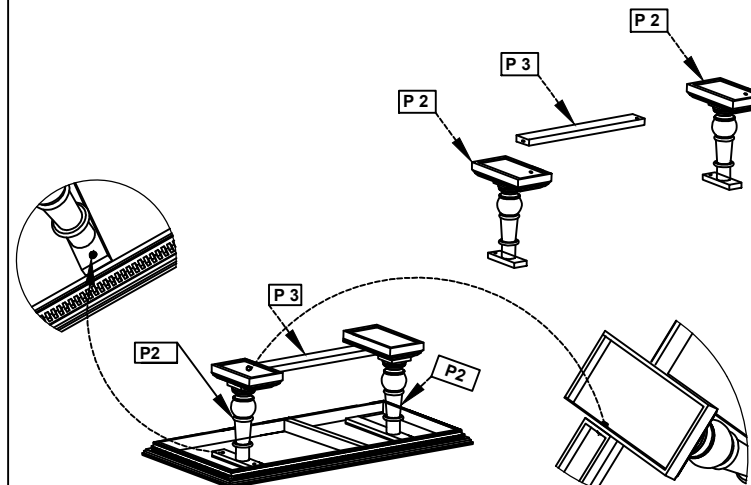


- Take one P2 (Dining Table Leg) and align its holes with the pre-drilled holes at the back side of the Table Top (P1).
- Insert bolts through the aligned holes.
- Tighten the bolts halfway using the tool provided (don't fully tighten yet).
- Repeat this process with the second P2 (Leg).
- Take P3 (Support Bar) and position it between the two P2 Legs.
- Align the holes on P3 with the inner holes on both P2 Legs.
- Insert bolts and tighten them halfway.

STEP 3.

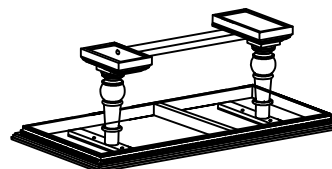

- Once all parts are aligned properly, go back and fully tighten all bolts.
- Ensure the table is stable and all parts are secure.

STEP 4.

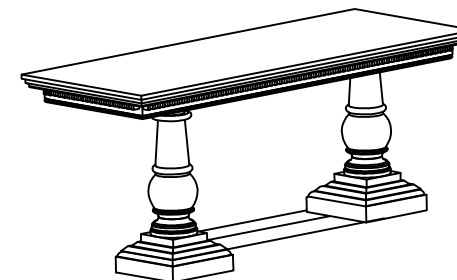

- Final Assembly