 


## OK

Designed by Konstantin Grcic, 2014

 
F4640030

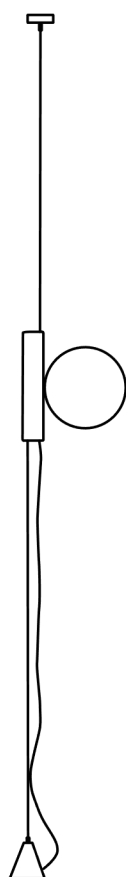

## OK

F4640030

EN

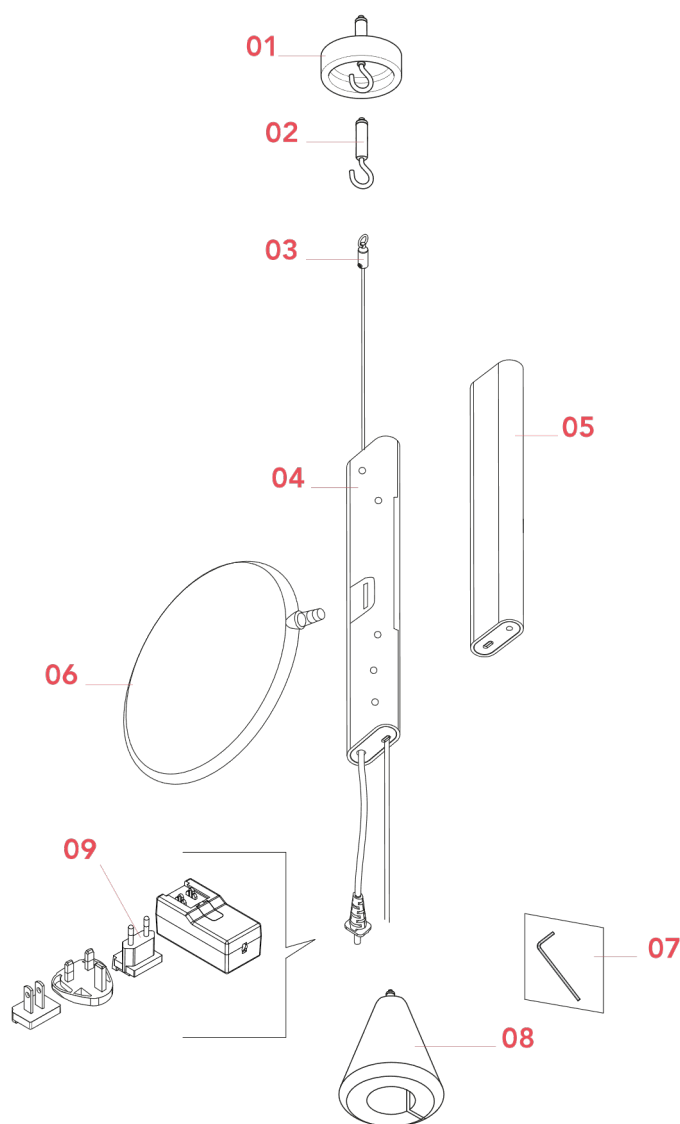

- 01. RF23030 – Black ceiling rose
- 02. RF4640100 – Plug with hook
- 03. RF4640200 – Suspension Steel cable 4 mt.
- 03. RF4640300 – Suspension Steel cable 6 mt.
- 04. RF4640400 – Internal lamp body assembly
- 05. RF22996 – Black extrusion
- 06. RF28254 – Black Led head assembly
- 07. RF06850 – Allen key
- 08. RF23023 – Counterweight
- 09. RF3320100 – Power unit and plug kit

OK F4640030

EN

## RF23030

BLACK CEILING ROSE



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

OK F4640030

EN

**RF23030**

BLACK CEILING ROSE

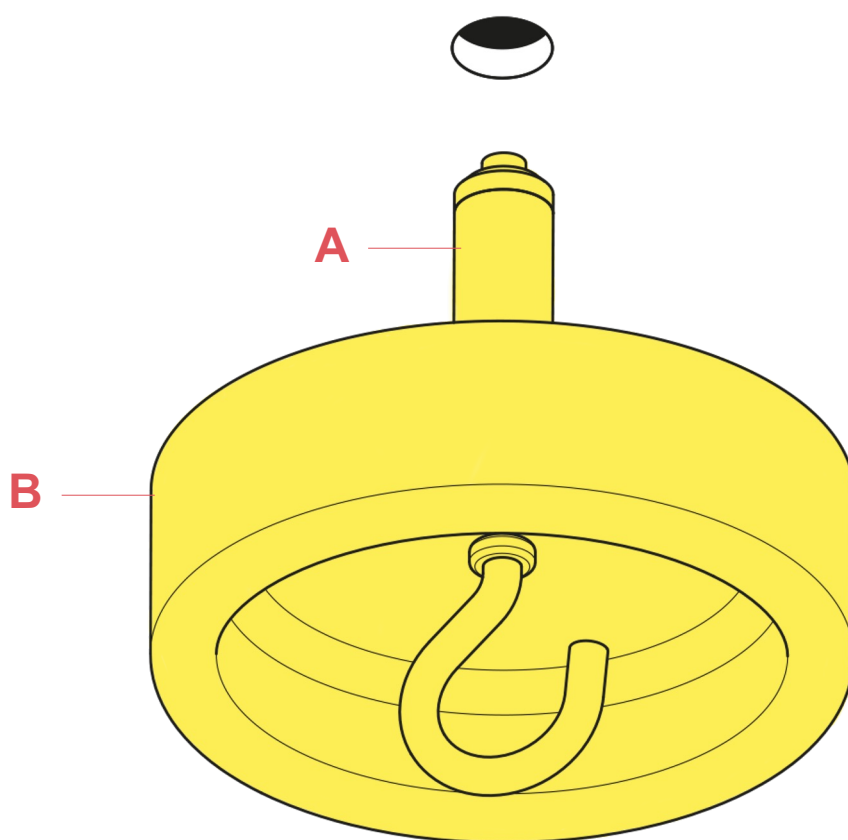 


Fig.1

Drill a hole in the ceiling and insert the expansion plug (A). Tighten and fasten the rose (B).

**REMARKS!** Select and employ screw plugs which are suited to the surface where the appliance is to be installed.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

## RF4640100

ANCHOR WITH HOOK



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

OK F4640030

EN

**RF4640100**

ANCHOR WITH HOOK

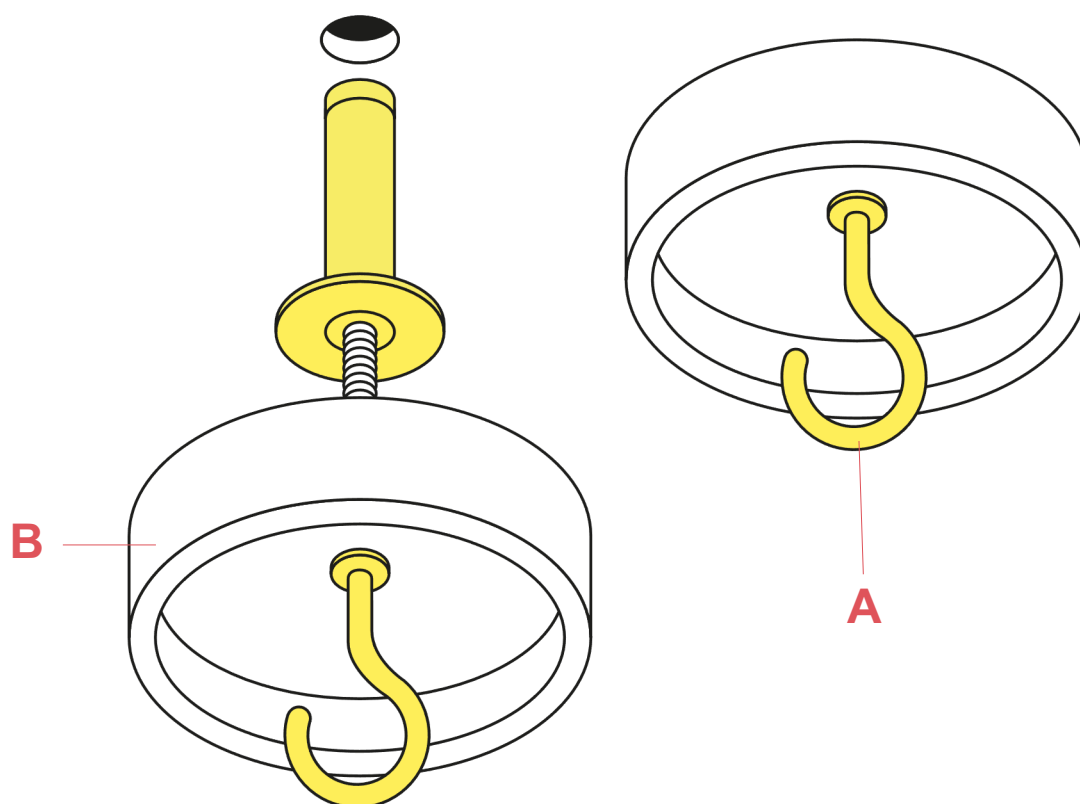 


Fig.1

Unfasten the hook (A) from the plug, pass it through the rose (B). Drill a hole in the ceiling and insert the plug. Screw tight and fix the rose.

**NOTE:** choose the right plug for the mounting surface.

OK F4640030

EN

**RF4640200**

STEEL CABLE 4MT.



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

**RF4640200**

STEEL CABLE 4MT.

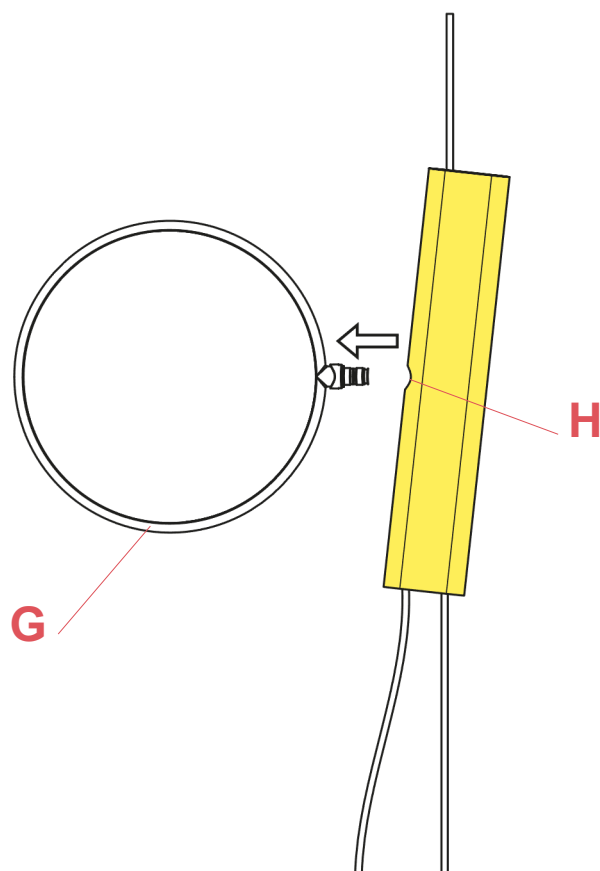 


Fig.1

Remove the LED fixture head (G) from the lamp body (H).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.



OK F4640030

EN

**RF4640200**

STEEL CABLE 4MT.

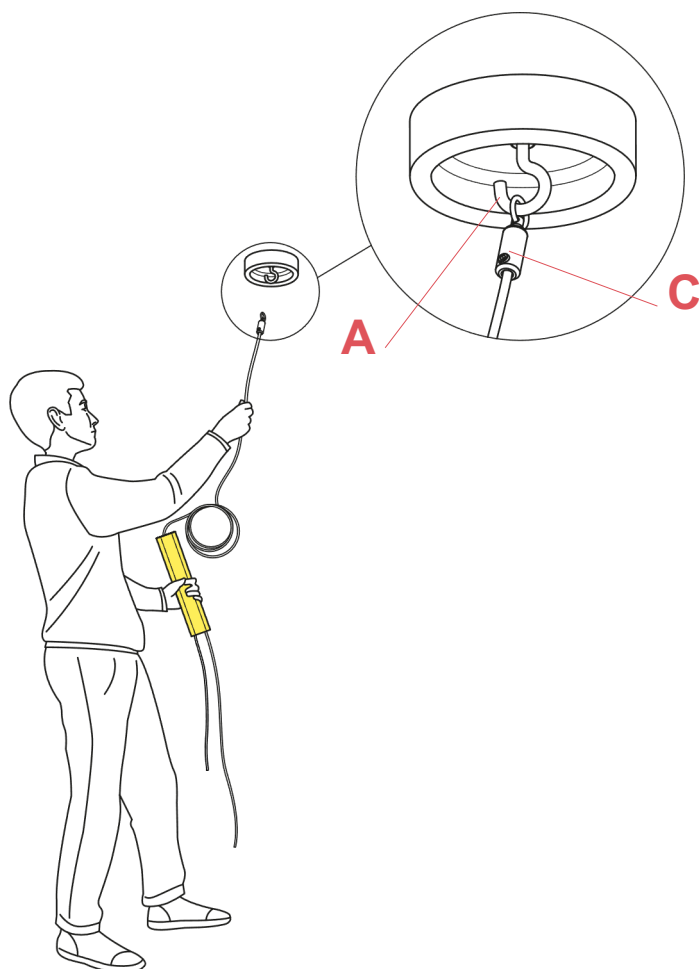 


Fig.2

Unhook the steel wire end (C) from the open ring (A).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

## RF4640200

STEEL CABLE 4MT.

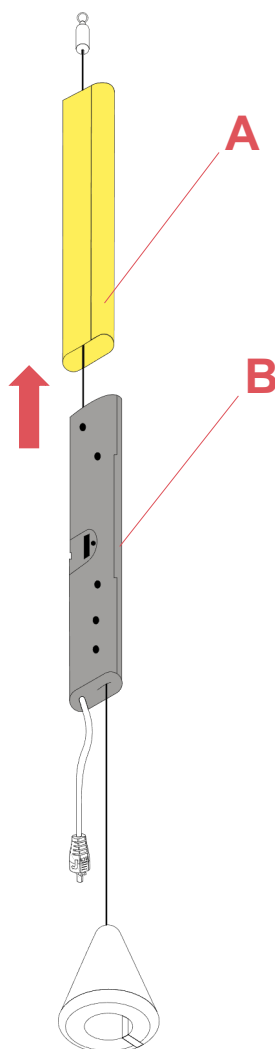 


Fig.3

Unlock the damaged extrusion (A) from the central lamp body (B) and slide it off the suspension steel wire.

Assemble now the new spare-part:

Install the new extrusion (A) by sliding it through the suspension steel wire and locking it on the central body (B).

Hook the steel wire end (C) to the open ring (A).(Fig.2 page 9)

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

**RF4640200**

STEEL CABLE 4MT.

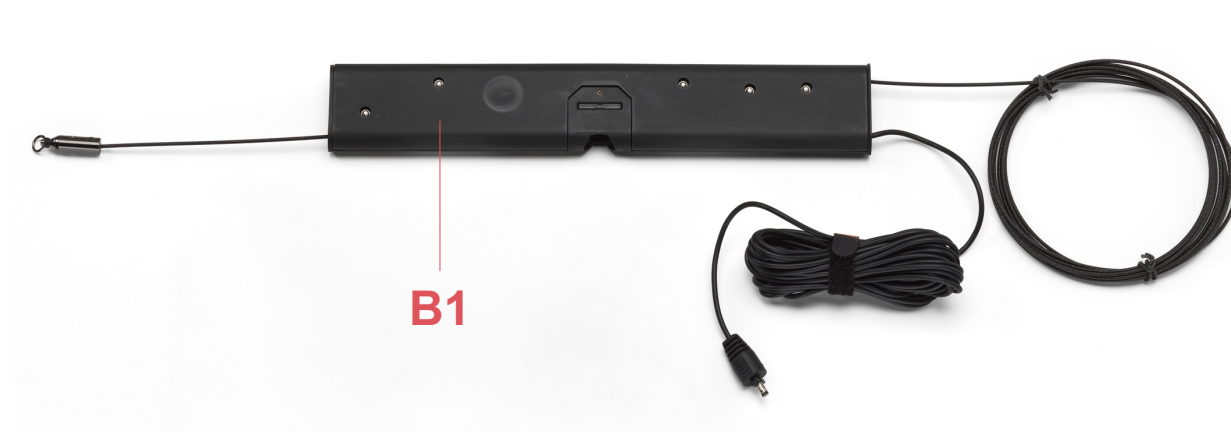 


Fig.4

Remove the cover (B1) from the internal body.

Slide out the steel wire that needs to be replaced starting from the top.

Assemble now the new spare-part:

Install the new steel wire by sliding it through the central body starting from the top as shown in the image (refer to the green line).

Install the new extrusion (A) by sliding it through the suspension steel wire and locking it on the central body (B).(Fig.3 page 10)

Hook the steel wire end (C) to the open ring (A).(Fig.2 page 9)

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

**RF4640200**

STEEL CABLE 4MT.

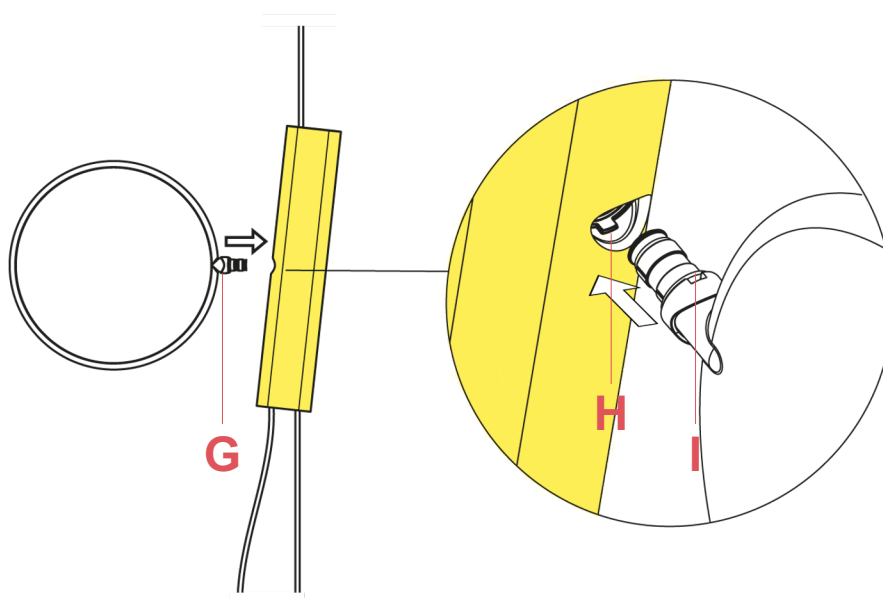 


Fig.5

Assemble the LED fixture head, inserting the pin (G) in the hole (H) of the lamp body, ensuring that the guide (I) are correctly oriented (guide "I" needs to be turned upwards).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

## RF4640300

STEEL CABLE 6MT.



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

OK F4640030

EN

**RF4640300**

STEEL CABLE 6MT.

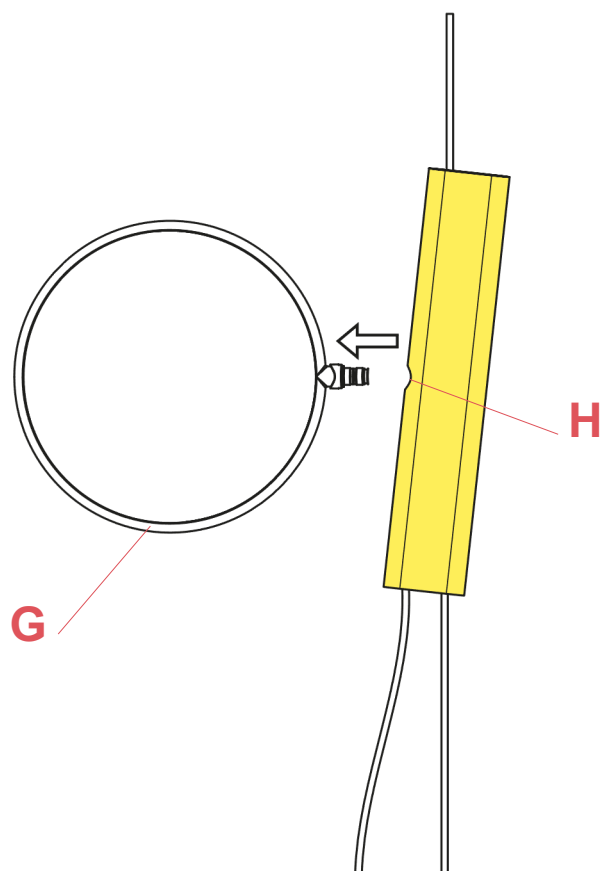 


Fig.1

Remove the LED fixture head (G) from the lamp body (H).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

OK F4640030

EN

**RF4640300**

STEEL CABLE 6MT.

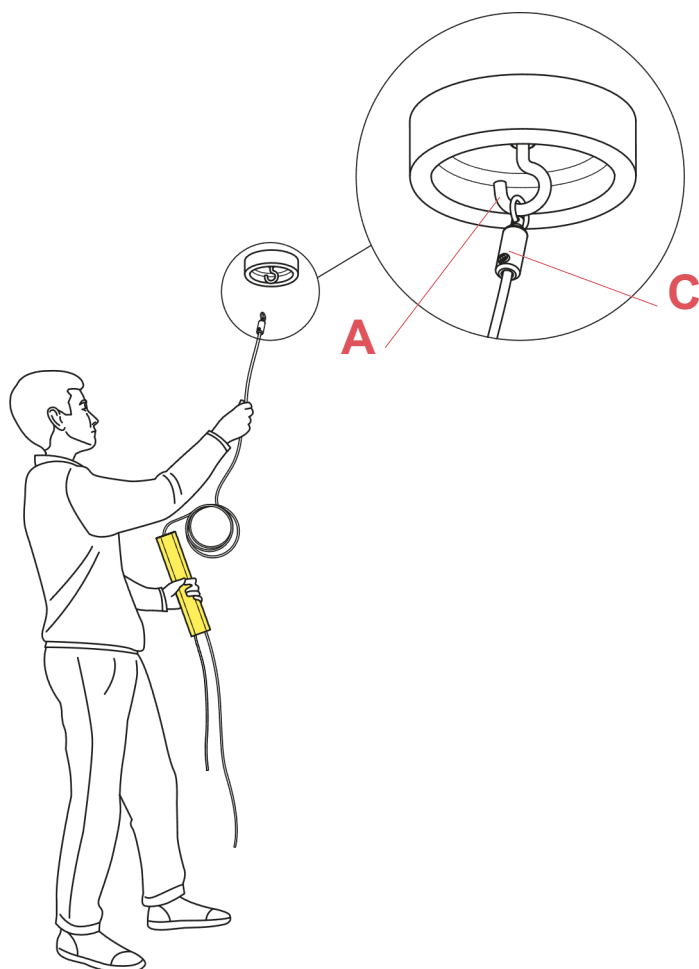 


Fig.2

Unhook the steel wire end (C) from the open ring (A).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

**RF4640300**

STEEL CABLE 6MT.

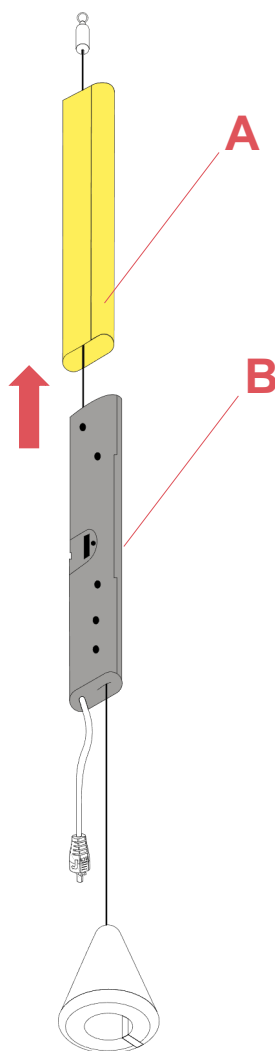 


Fig.3

Unlock the damaged extrusion (A) from the central lamp body (B) and slide it off the suspension steel wire.

Assemble now the new spare-part:  
Install the new extrusion (A) by sliding it through the suspension steel wire and locking it on the central body (B).

Hook the steel wire end (C) to the open ring (A).(Fig.2 page 15)

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.



OK F4640030

EN

**RF4640300**

STEEL CABLE 6MT.



Fig.4

Remove the cover (B1) from the internal body.

Slide out the steel wire that needs to be replaced starting from the top.

Assemble now the new spare-part:

Install the new steel wire by sliding it through the central body starting from the top as shown in the image (refer to the green line).

Install the new extrusion (A) by sliding it through the suspension steel wire and locking it on the central body (B).(Fig.3 page 16)

Hook the steel wire end (C) to the open ring (A).(Fig.2 page 15)

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

**RF4640300**

STEEL CABLE 6MT.

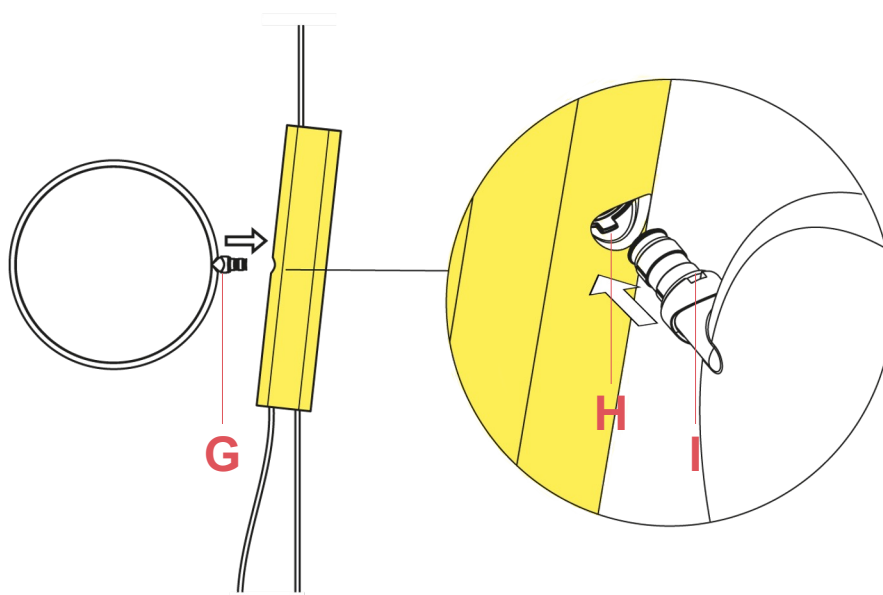 


Fig.5

Assemble the LED fixture head, inserting the pin (G) in the hole (H) of the lamp body, ensuring that the guide (I) are correctly oriented (guide "I" needs to be turned upwards).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

## RF4640400

INTERNAL LAMP BODY ASSEMBLY



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

OK F4640030

EN

**RF4640400**

INTERNAL LAMP BODY ASSEMBLY

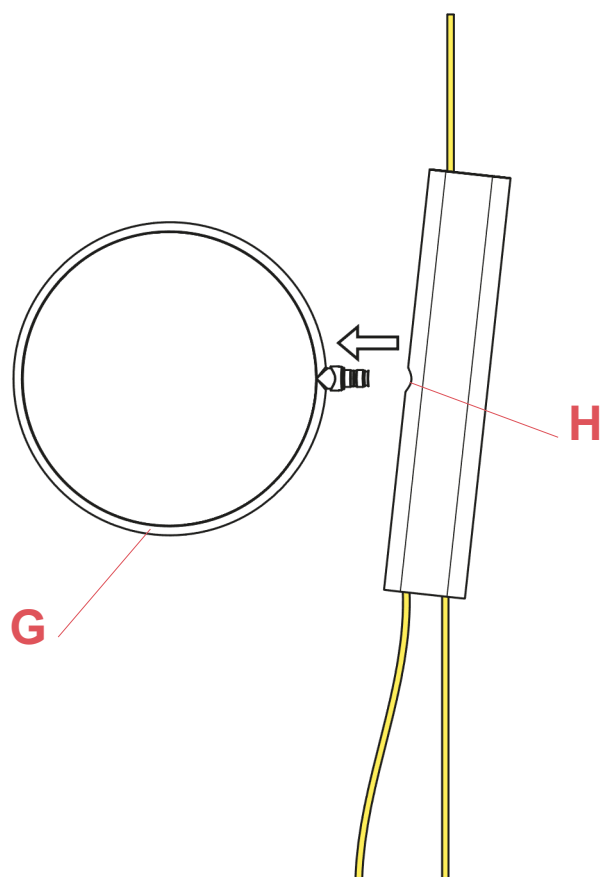 


Fig.1

Remove the LED fixture head (G) from the lamp body (H).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

**RF4640400**

INTERNAL LAMP BODY ASSEMBLY

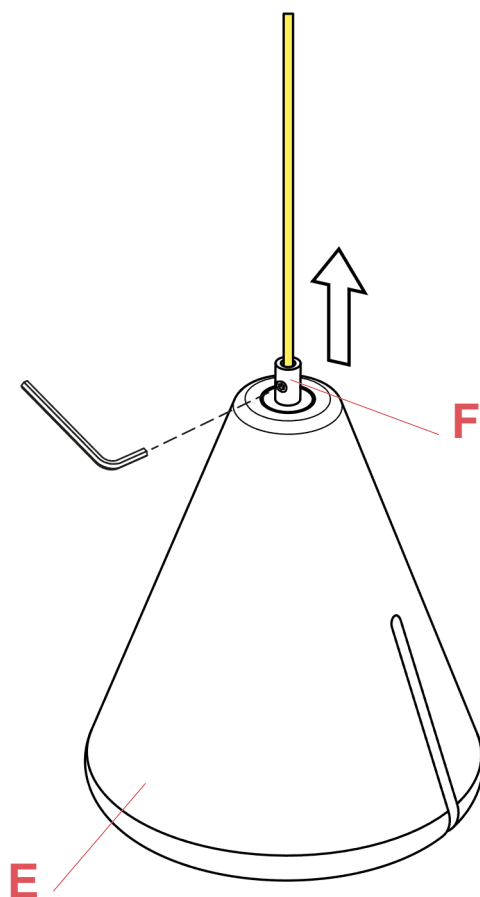 


Fig.2

Free the suspension steel wires from the counterweight (E) by unfastening the headless screw (F).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

OK F4640030

EN

**RF4640400**

INTERNAL LAMP BODY ASSEMBLY

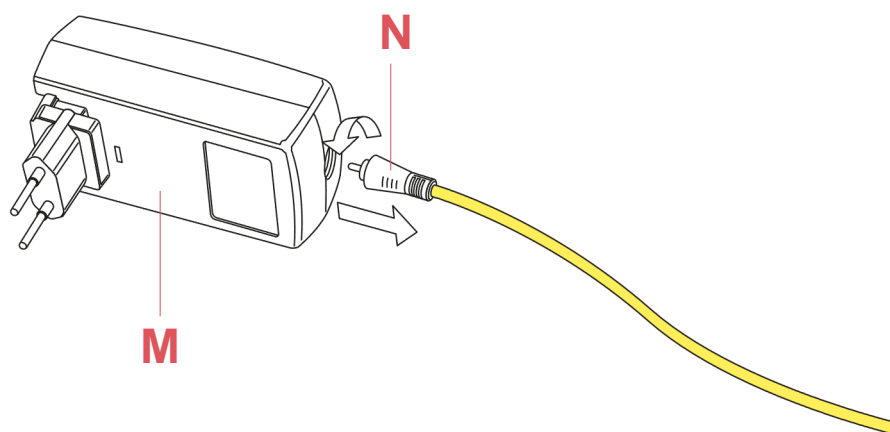 


Fig.3

Unlock (rotate clockwise) and remove the plug (N) from the power unit (M).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

**RF4640400**

INTERNAL LAMP BODY ASSEMBLY

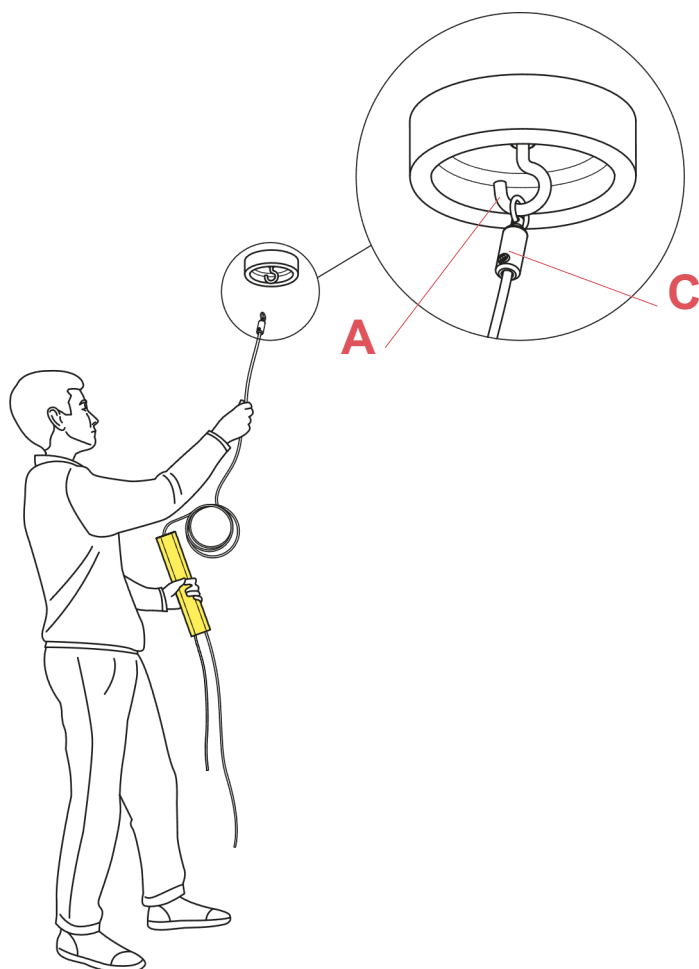 


Fig.4

Unhook the steel wire end (C) from the open ring (A).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

**RF4640400**

INTERNAL LAMP BODY ASSEMBLY

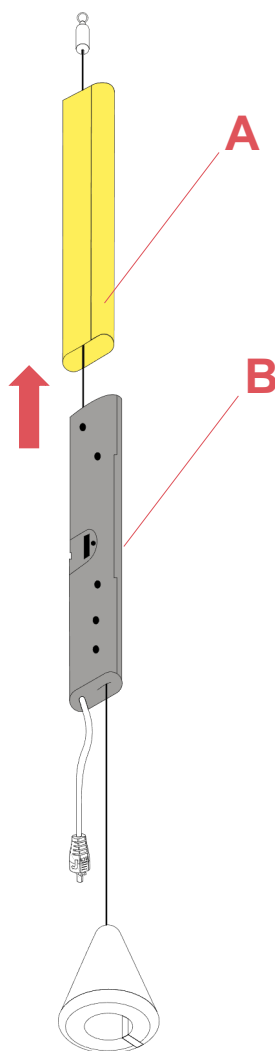 


Fig.5

Unlock the damaged extrusion (A) from the central lamp body (B) and slide it off the suspension steel wire.

Assemble now the new spare-part:  
Insert the extrusion (A) by sliding it through the suspension steel wire and locking it on the central body (B).

Hook the steel wire end (C) to the open ring (A).(Fig.2 page 21)

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.



OK F4640030

EN

## RF4640400

INTERNAL LAMP BODY ASSEMBLY

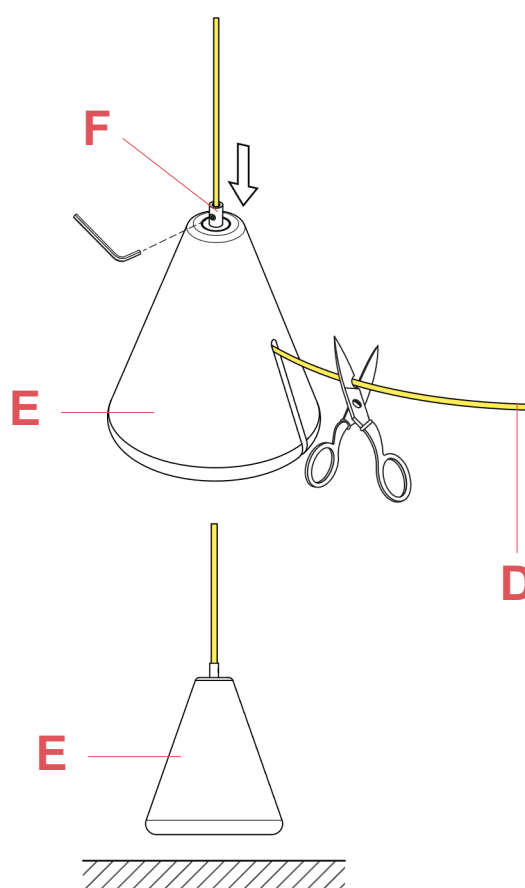 


Fig.6

Pass the steel wire (D) through the counterweight (E) and run it through until the counterweight remains slightly suspended above the floor, then lock the wire by tightening the screw (F) and cut off the excess wire.

**WARNING! Lifting up the counterweight will cause mechanical tension loss of the suspension wire, causing the lamp fixture to fall down.**

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

OK F4640030

EN

**RF4640400**

INTERNAL LAMP BODY ASSEMBLY

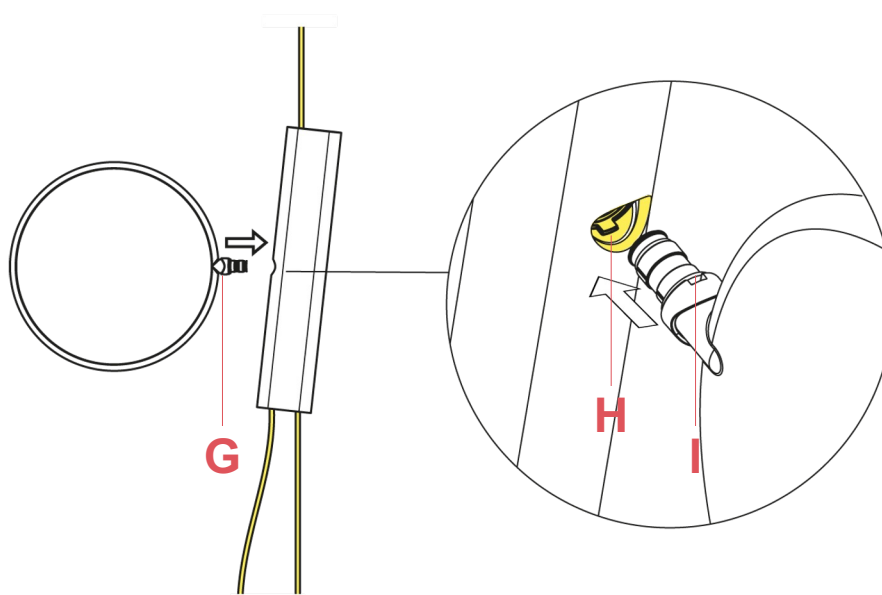 


Fig.7

Assemble the LED fixture head, inserting the pin (G) in the hole (H) of the lamp body, ensuring that the guide (I) are correctly oriented (guide "I" needs to be turned upwards).

Connect the plug (N) to the power unit locking it in by rotating it 90° clockwise.(Fig.3 page 22)

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

## RF22996

BLACK EXTRUSION



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

OK F4640030

EN

**RF22996**

BLACK EXTRUSION

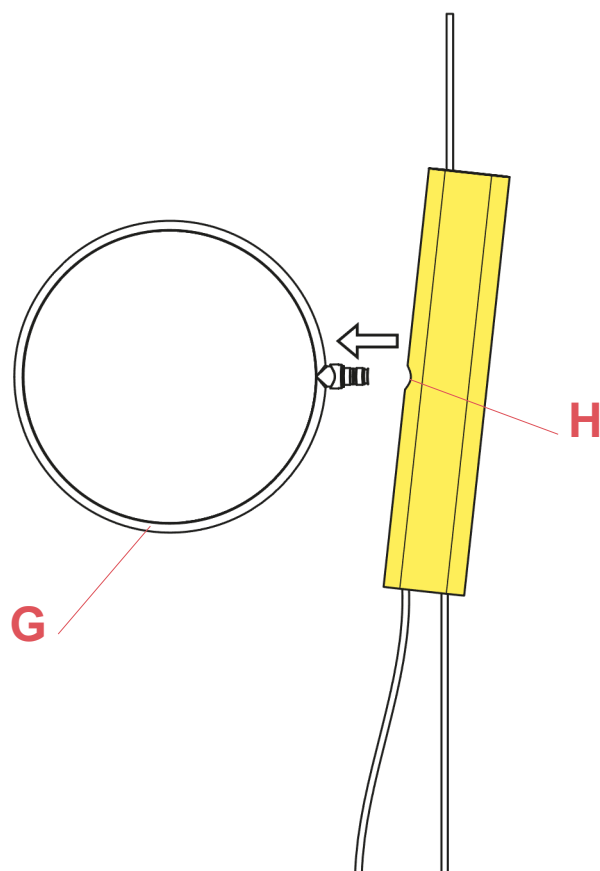 


Fig.1

Remove the LED fixture head (G) from the lamp body (H).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

OK F4640030

EN

**RF22996**

BLACK EXTRUSION

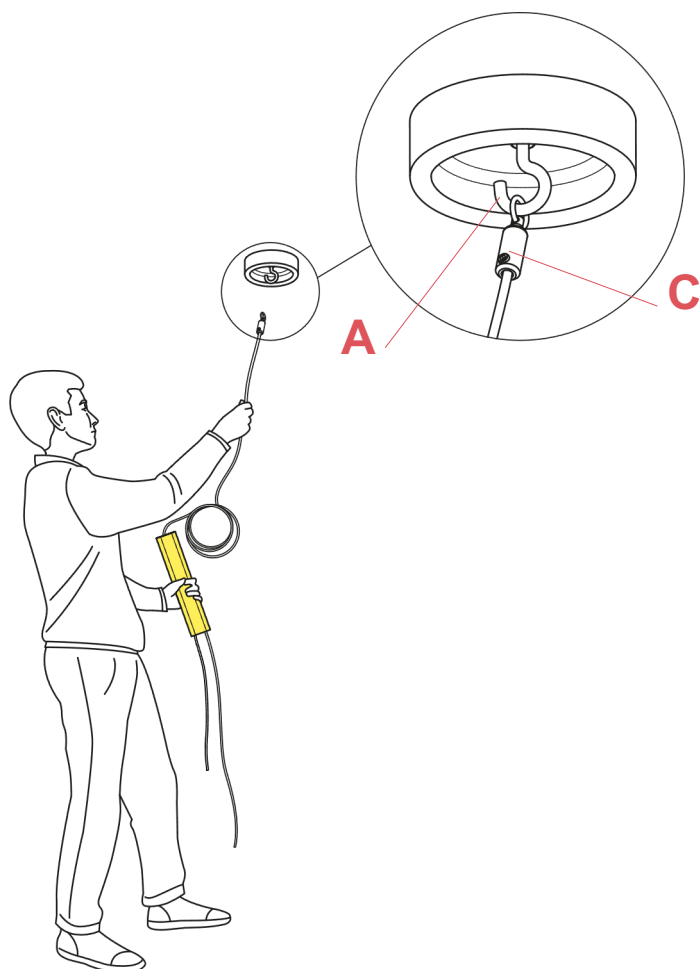 


Fig.2

Unhook the steel wire end (C) from the open ring (A).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

## RF22996

BLACK EXTRUSION

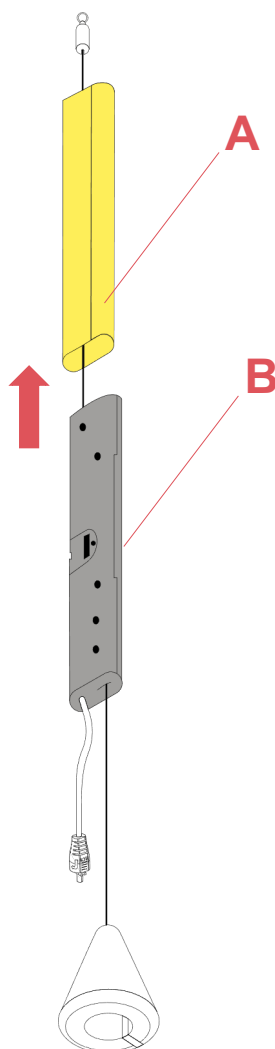 


Fig.3

Unlock the damaged extrusion (A) from the central lamp body (B) and slide it off the suspension steel wire.

Assemble now the new spare-part:

Install the new extrusion (A) by sliding it through the suspension steel wire and locking it on the central body (B).

Hook the steel wire end (C) to the open ring (A).(Fig.2 page 29)

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

**RF22996**

BLACK EXTRUSION

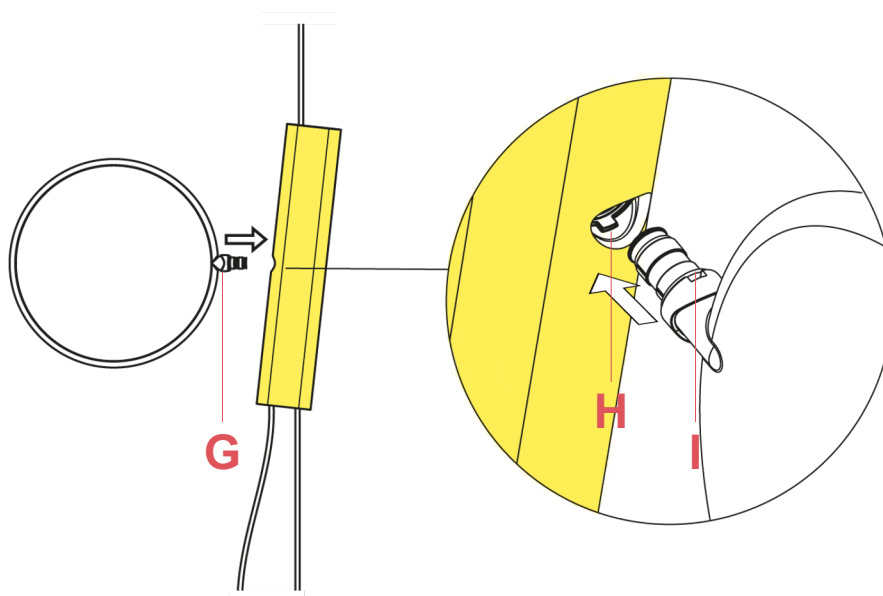 


Fig.4

Assemble the LED fixture head, inserting the pin (G) in the hole (H) of the lamp body, ensuring that the guide (I) are correctly oriented (guide "I" needs to be turned upwards).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

## RF28254

BLACK LED HEAD ASSEMBLY



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.



OK F4640030

EN

**RF28254**

BLACK LED HEAD ASSEMBLY

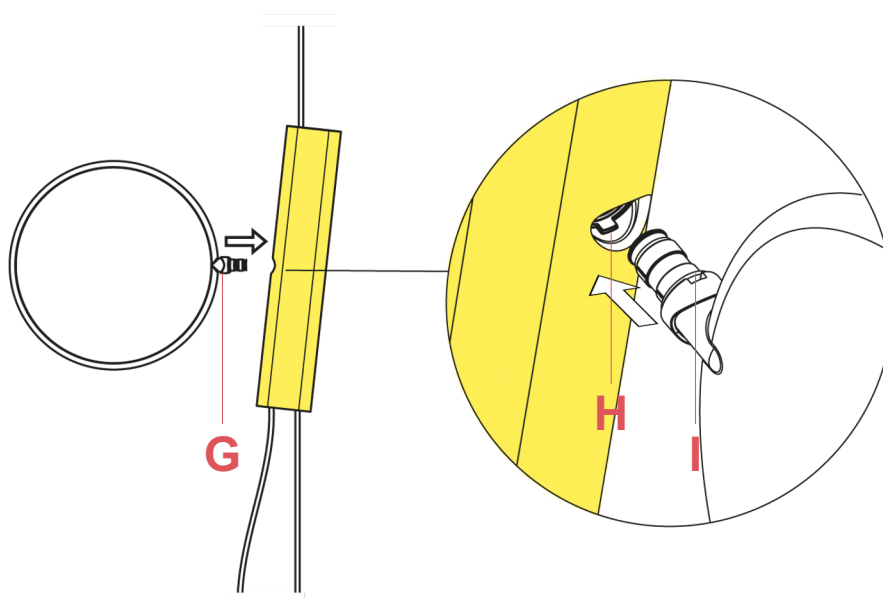 


Fig.1

Assemble the LED fixture head, inserting the pin (G) in the hole (H) of the lamp body, ensuring that the guide (I) are correctly oriented (guide "I" needs to be turned upwards).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

## RF06850

ALLEN KEY



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

OK F4640030

EN

## RF06850

ALLEN KEY

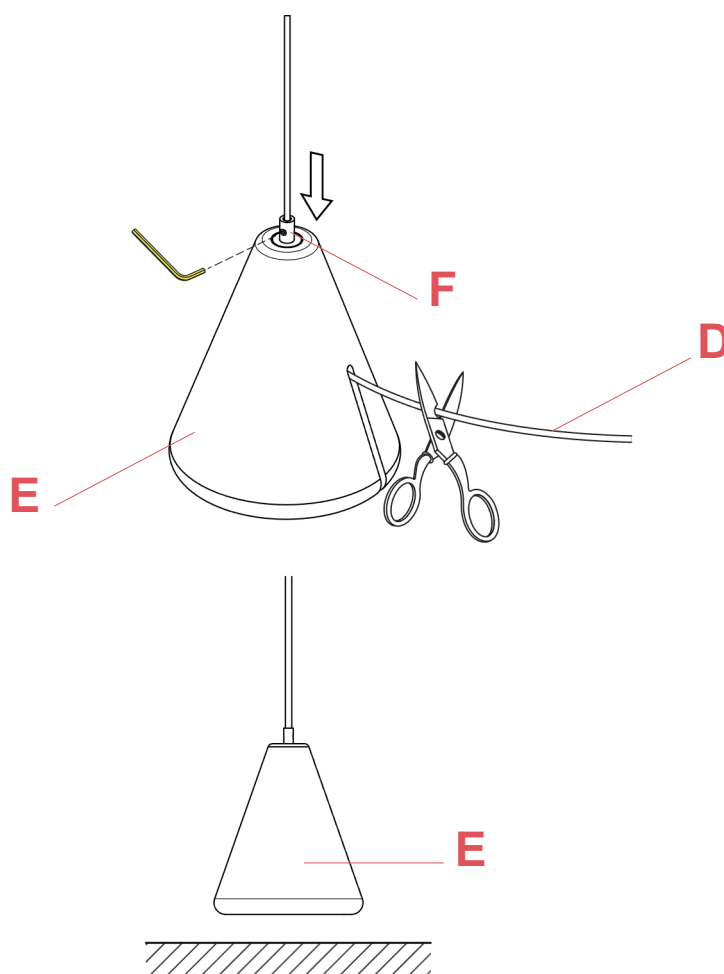 


Fig.1

Pass the steel wire (D) through the counterweight (E) and run it through until the counterweight remains slightly suspended above the floor, then lock the wire by tightening the screw (F) with the Allen Key and cut off the excess wire.

**WARNING! Lifting up the counterweight will cause mechanical tension loss of the suspension wire, causing the lamp fixture to fall down.**

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

OK F4640030

EN

## RF23023

COUNTERWEIGHT



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.

OK F4640030

EN

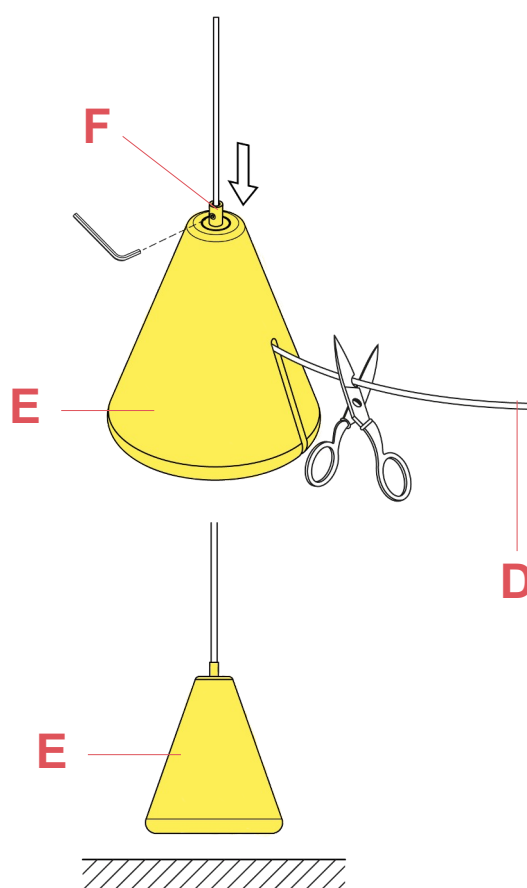 
**RF23023**  
COUNTERWEIGHT

Fig.1

Pass the steel wire (D) through the counterweight (E) and run it through until the counterweight remains slightly suspended above the floor, then lock the wire by tightening the screw (F) and cut off the excess wire.

**WARNING! Lifting up the counterweight will cause mechanical tension loss of the suspension wire, causing the lamp fixture to fall down.**

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

## RF3320100

PLUG KIT + DRIVER SPARE PART



Copycat  
p.05



Goldman  
p.03



Kelvin  
Edge  
p.03



Kelvin  
Led F  
p.03



Kelvin  
Led GM  
p.03



Ok  
p.38



Serena  
p.10



 
Tab F  
p.03



Tab T  
p.03



Taccia  
Small Led  
p.11



To-Tie  
All  
Versions  
p.03



Wirering  
p.20

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

OK F4640030

EN

**RF3320100**

PLUG KIT + DRIVER SPARE PART

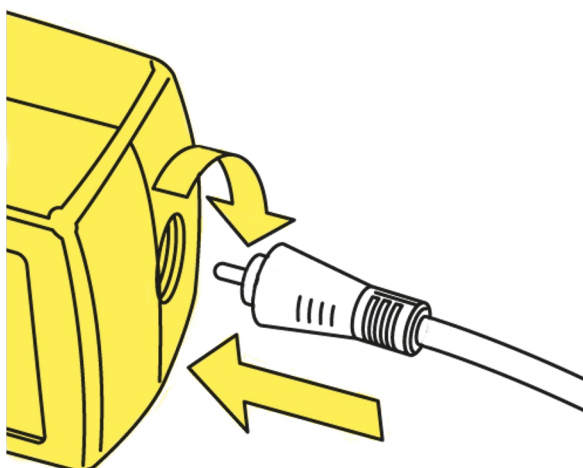 


Fig.4

Insert the plug into the driver unit by using the guides snap it inside its apposite slot (use the correct type of plug for the area in which the device must be installed), connect the plug to the feeder unit locking it in by rotating it 90° clockwise.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - [www.flos.com](http://www.flos.com)  
Flos reserves the right to introduce any changes to its own models, without prior notice.