


GENERATION LIGHTING

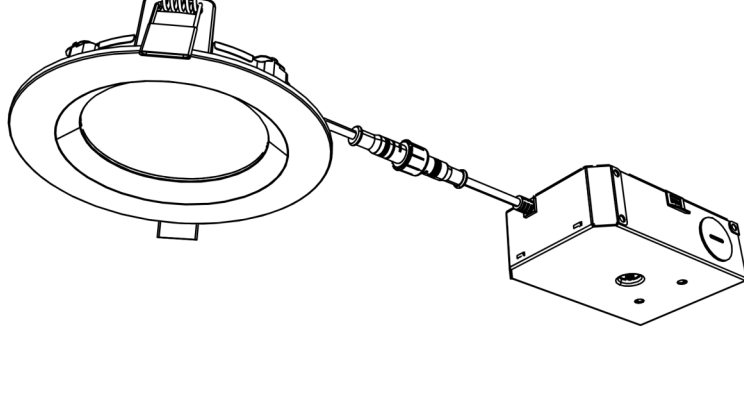

VERRA REGRESSED 4" ROUND 3000K

SKU: 4RR-3000K-WT; V4RR-5CCT-WT

MOBILE-USE PRODUCT INSTALL GUIDE


General Product Information

Please visit www.visualcomfort.com for [product specs](#), [warranty](#), and [FCC](#) information.



Please Note: This fixture can be ceiling or wall mounted.



Suggested/Required Tools

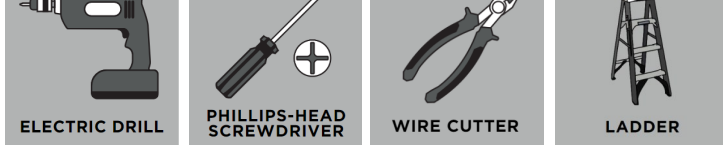


Product Safety

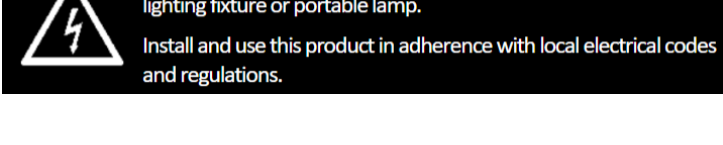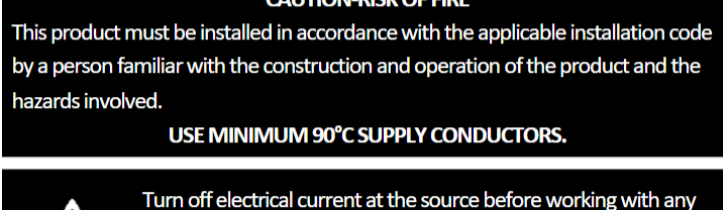


Installation Instructions

I. Preparing the Fixture


1. *Optional:* Install new construction pan (A) to joists. The pan is not required but assists in the accurate placement of the downlight.

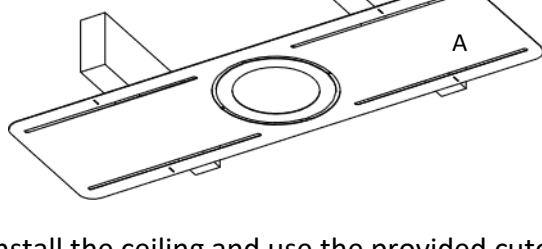


2. Install the ceiling and use the provided cutout template (4-3/16") to cut a hole in the ceiling.

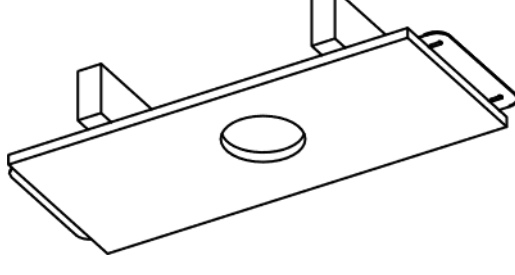

3. For 3000K version, skip this step. For 5CCT version, ensure color temperature switch is set to the desired color temperature. Factory default is 3000K.

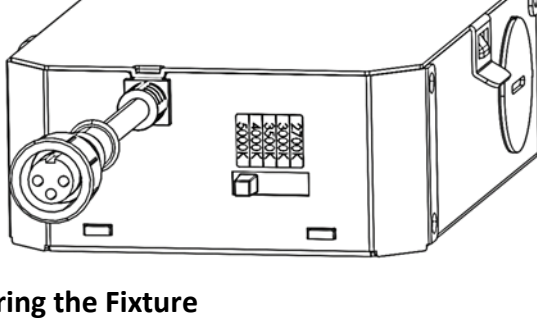



II. Wiring the Fixture

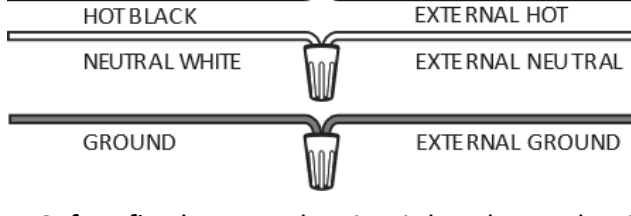

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate or a house wire (green/bare copper wire without insulation).
3. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
 - i. Hot fixture wire (black) and hot power line wire
 - ii. Neutral fixture wire (white) and neutral power line wire
4. Carefully tuck all wires into the driver housing.

III. Installing the Fixture

1. Place the driver housing above the ceiling and secure it through the screw holes.

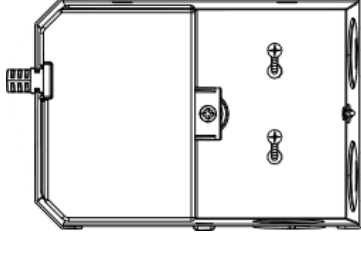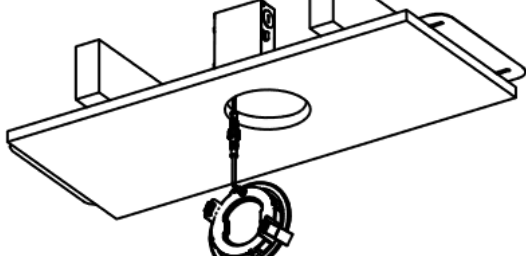

2. Insert the fixture into the ceiling cutout and push up until the fixture is flush and the spring clips snap into place.

