


INSTALLATION INSTRUCTIONS

Ernst Outdoor Wall Sconce

Item No. GLHP564632

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER

Fig. 1

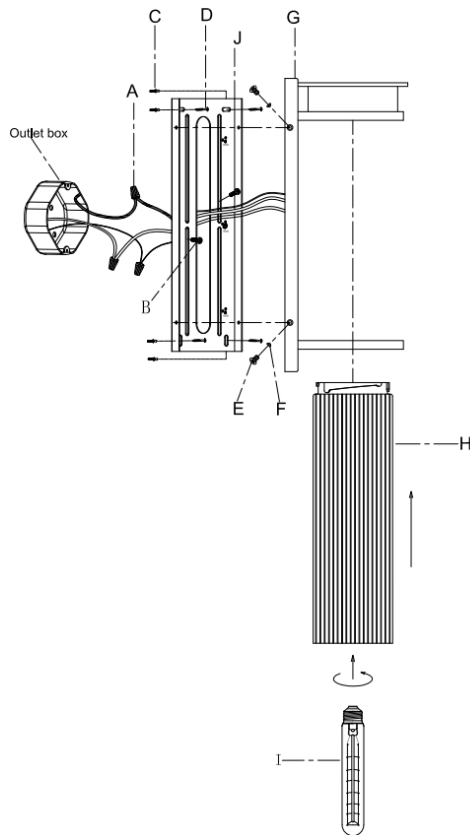

HANGING THE FIXTURE (Fig. 1)

1. Shut off the power at the circuit breaker and remove the old fixture, including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Position mounting plate(J) on wall and mark location of four holes on mounting plate(J) where plastic anchors(C) will be inserted. Drill holes into wall and insert plastic anchor(C).
4. Attach mounting plate (J) to outlet box(not included) with mounting screws (B).And install the four wood screws (D) into the plastic anchors (C).

CONNECTING THE WIRES (Fig. 2).

5. Connect the electrical wires as shown in Fig.2. Making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the circular strap using the green screw provided.

COMPLETING THE INSTALLATION (Fig.1)

6. Align the fixture (G) to mounting plate (J) and secure with screws (E) & washers (F).
7. Install bulb (Medium base, not supplied), T bulb recommended. Secure the glass (H) to the top of the fixture (G).
8. To prevent moisture from entering the outlet box and causing a short, use clear caulking (i.e. Indoor/Outdoor Silicone Sealant) to outline the outside of fixture back. plate where it meets the wall leaving a space at bottom to allow moisture a means to escape. (Fig. 3)

Your installation is now complete. Return power to the junction box and test the fixture.

Fig. 2

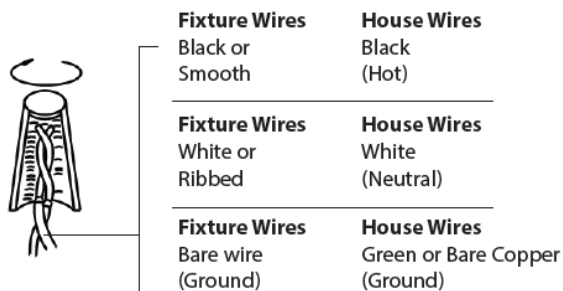


Fig.3 Sealing

