

 
HermanMiller

Land Dining Table Installation Instructions



How to assemble Land Dining Table.

Tool Required



Allen wrench 3/16"


Notice:

Some of the parts have been wrapped to protect them during shipping. Remove the plastic wrap before assembling the table.


Step 1

Land Dining Table 75


1.1 Fix the top to the base using four top connector bolts and washer.

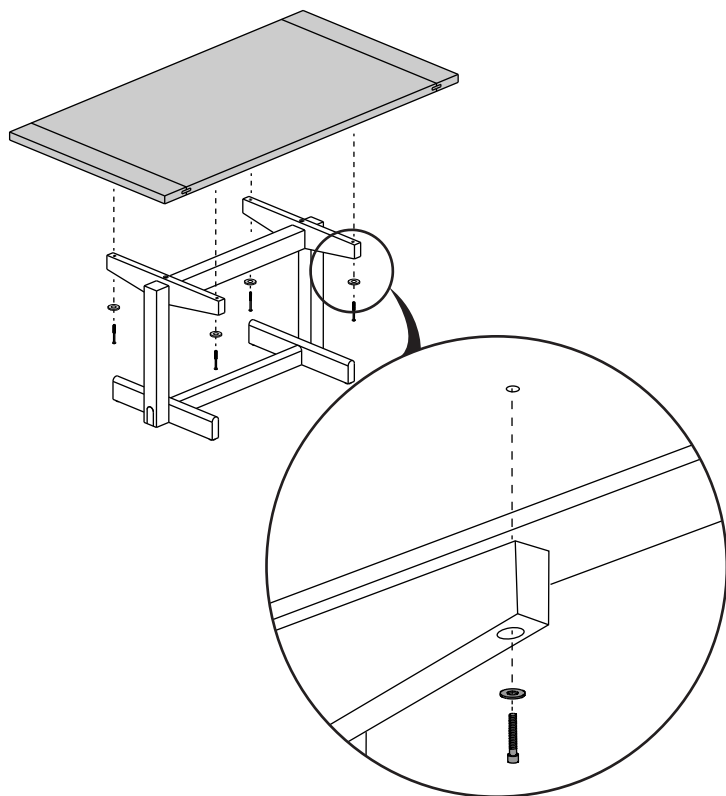

Parts Included

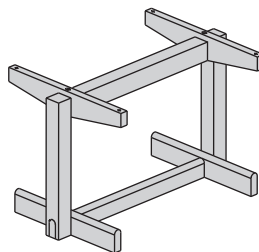

Base Assembly

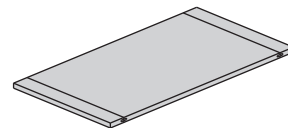

Work Top




Top Connector Bolt
(5/16" x 2 1/2")



Flat steel washer


Land Dining Table 99

Fix the top to the base using six top connector bolts and washer.

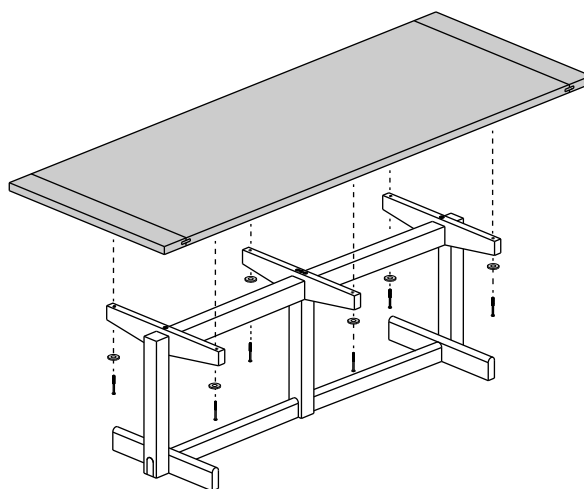


Land Dining Table 126

Fix the top to the base using eight top connector bolts and washer.

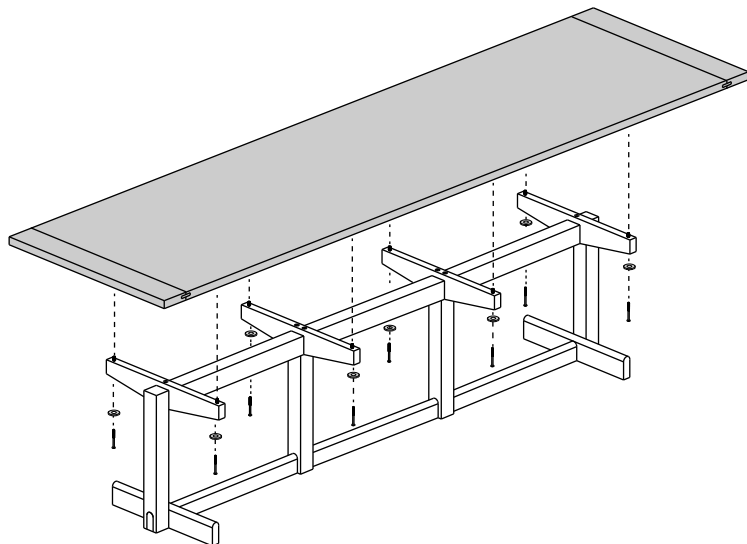

Congratulations!

Your new table is ready to use.

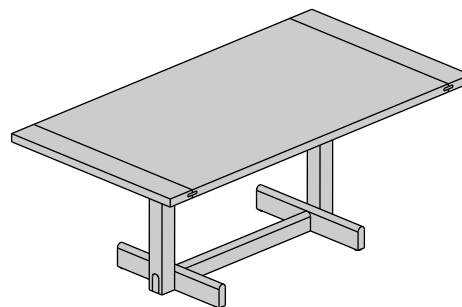

Disassembly for Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse the above installation steps.