


hollis+morris

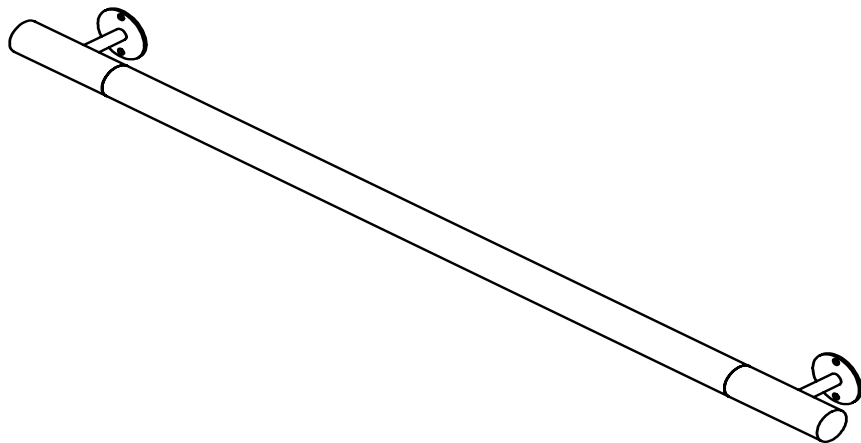

bennington sconce

product installation + specifications




dimensions + installation

See Tearsheet for dimensions and
general specifications


Option A:

Remote Driver

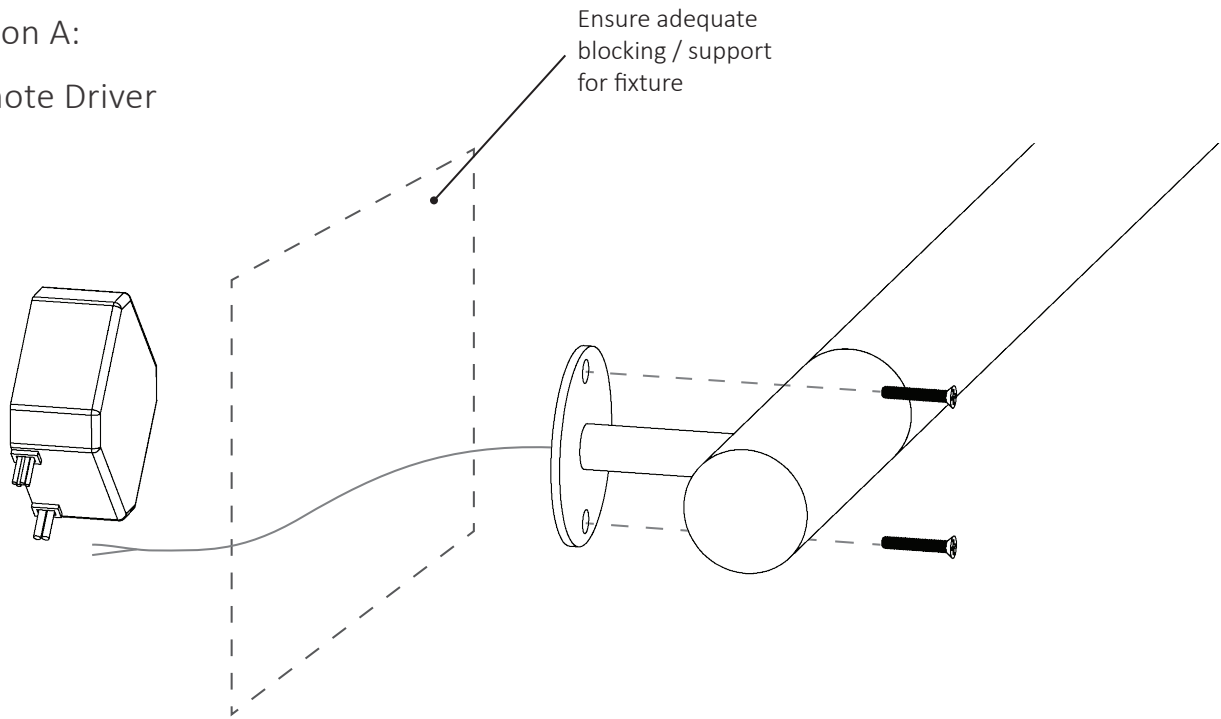


Option B:

Local Driver

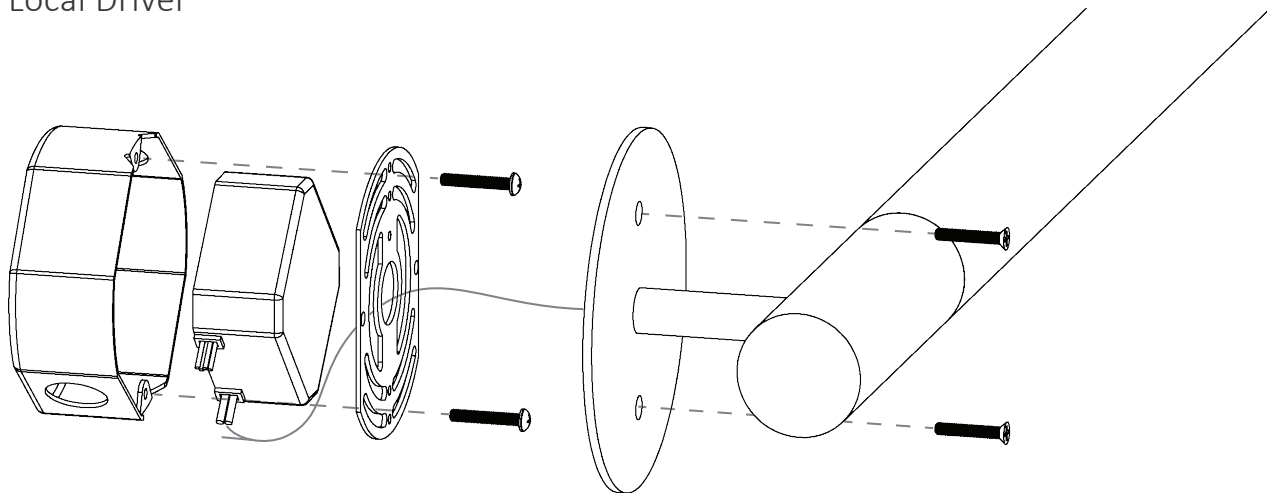

dimensions + installation

End Cap with Standard
Wall Plate

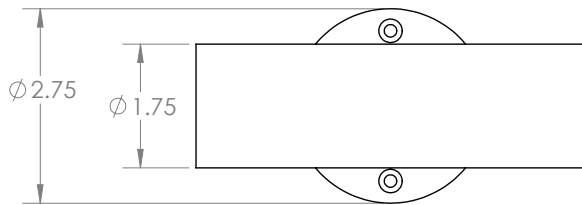

End Cap with Junction
Cover Wal plate

