

# JAMIE YOUNG Cº

## TENSION FLOOR LAMP

### 9 TENSION-FLWH

#### SAFETY, INSTALLATION & CARE INSTRUCTIONS

##### IMPORTANT SAFETY INSTRUCTIONS

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, AND PERSONAL INJURY: This Lighting fixture is for Indoor use only. This Lamp is equipped with a polarized plug. One plug blade is wider than the other. DO NOT MODIFY the plug or power cord in any way. DO NOT EXCEED the recommended bulb wattage. Use only the type of bulb specified. Keep Flammable materials away from bulb. DO NOT OPEN the product or alter the wiring in any manner. Extension cord: Follow precautions provided with power cord.

Use care when unpacking. Locate ALL PARTS INCLUDED before disposing of packaging materials.

##### ASSEMBLY, CARE, AND TROUBLESHOOTING

No tools are required for assembly. Light bulb is not included.

##### Parts Included (refer to figure) :

- A. Harp (styles may vary) NOT INCLUDED
- B. Saddle
- C. Shade (may be packed in separate carton) NOT INCLUDED
- D. Finial
- E. Socket (attached, no assembly required)
- F. Plug Cap

##### Assembly Procedure (refer to figure) :

1. Insert Harp (A) into Saddle (B).
2. Install Shade (C) onto Harp (A).
3. Screw Finial (D) onto Harp (A).
4. Install Light bulb into Socket Saddle (E).
5. Remove Plug Cap (F) from plug.

##### Care and Cleaning:

1. Wipe with a soft dry cloth.
2. AVOID cleaners, scouring pads, etc.
3. Before changing bulb, unplug lamp and allow bulb to cool.

##### TROUBLESHOOTING:

Problem :	Possible Cause :	What to Do :	
Bulb does not light	Bulb is burnt out or damaged	Replace bulb	
	Power to lamp is off	Confirm power is on	
	Lamp is not plugged in	Confirm lamp is plugged in	

After troubleshooting, if the lighting fixture still does not work, contact your  
Local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS

