

Alps Floor Lamp 9ALPSPFLGRAY

IMPORTANT SAFETY INSTRUCTIONS

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, AND PERSONAL INJURY:

This lighting fixture is for indoor use only. This lamp is equipped with a polarized plug. One plug blade is wider than the other. DO NOT MODIFY the plug or power cord in any way. DO NOT EXCEED the recommended bulb wattage. Use only the type of bulb specified. Keep flammable materials away from bulb. DO NOT OPEN the product or alter the wiring in any manner. Extension cord: Follow precautions provided with power cord.

UNPACKING:

Use care when unpacking. Locate ALL PARTS INCLUDED before disposing of packaging materials.

Parts Included: Refer to Figure 1.

1. FINIAL(A)
2. SHADE (B)
3. HARP (C)
4. LIGHT BULB (D) (Not Included)
5. SOCKET (E)
6. SADDLE (F)
7. LAMP BODY (G)
8. 2-PRONG POLARIZED CORD (H)
9. ROCKER SWITCH (I)


Assembly Procedure: Refer to Figure 1.

1. Install Harp (C) to Saddle (F).
2. Fix shade (B) to Harp (C) with Finial (A).
3. Install Light Bulb (D) to Socket (E).
4. Plug in the 2-Prong Polarized Cord (H) into outlet.
5. Turn on the Rocker switch (I) .

Caring for and cleaning your lamp:

1. To clean, wipe with a soft, dry cloth.
2. DO NOT USE cleaners, scouring pads, etc.
3. Unplug lamp and allow bulb to cool before changing bulb.

Figure 1

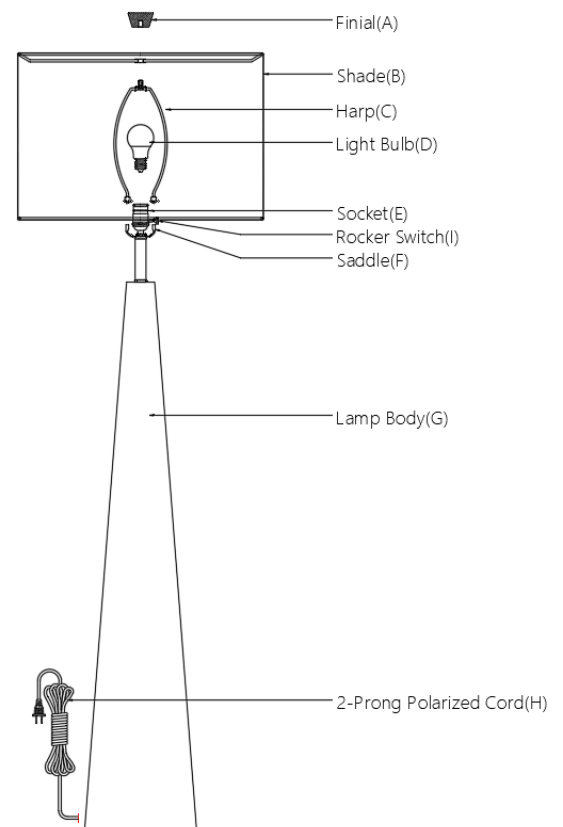

Troubleshooting:

Problem:	Possible cause:	Correct by:
Bulb does not light	Bulb is burnt out or damaged	Replace bulb
	Power to lamp is off	Confirm power is on
	Lamp is not plugged in	Confirm lamp is plugged in

SAVE THESE INSTRUCTIONS