

INSTALLATION INSTRUCTIONS

Item# N1826-732

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.
VERTISEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (Fig.1)

1. Shut off power at the fuse box or circuit breaker box and remove the old fixture including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts in a clean area. Take care not to misplace any small parts necessary for installation.
3. Thread the center rod (Q) onto coupler (1) and secure sub-canopy (P) into swivel of the center rod (Q), then thread fixture loop (O) onto sub-canopy (P).

HANGING THE FIXTURE (Fig.2)

4. Thread all thread (D) with hex nut (E) into ceiling loop (F) until snug.
5. Thread the other end of all thread (D) onto crossbar (A) with lock washer (B) and hex nut (E). Note: The Length of all thread (D) into crossbar (A) maybe adjusted if necessary.
6. Take the crossbar assembly and mount to junction box (JB) (*not provided*) with mounting screws (C).
7. Determine the desired hanging height and discard the excess chain. Note: 2x quick links (K) are provided and they must be attached to both end of chain (M).
8. Open one quick link (K) and connect to fixture loop (O), then close quick link (K).
9. Slip collar ring (N) and canopy (L) over chain (M) and allow them to rest on fixture loop (O). Open another quick link (K) and connect to ceiling loop (F), then close the quick link (K).
10. Feed fixture wires through chain (M), quick link (K), ceiling loop (F) and crossbar assembly.

CONNECTING THE WIRE (Fig. 3)

11. Connect the electrical wire as shown in Fig. 3, making sure that all the wire connectors are secured. If your junction box has a ground wire (green, or bare copper), connect fixture's ground wire to it. Otherwise, connect fixture's ground wire directly to crossbar using green screw provided.
12. Tuck wire connections neatly into junction box (JB). (Fig.2)
13. Raise the canopy (L) over the ceiling loop (F) and secure with collar ring (N). (Fig.2)

ACCESSORIES INSTALLATION (Fig. 1)

14. Attach the hook of 4 stems (R) onto the hook of sub-canopy (P) and the hook of frame (H).
15. To begin installing the accessories unwrap the ceramic wavy disc (I) from the packing.
16. There are 2 types of disc lock as shown in Figure 1.
17. To begin installing the ceramic wavy disc (I), place the hole of the wavy disc into the headless screw and secure with rubber washer provided and ball nuts (G). Do not over tighten.
18. Place the hole of the ceramic wavy disc (I) into the threaded round tube and secure with rubber washers provided and (G1). Do not over tighten.
19. Repeat the process until completed.

FINISHING THE FIXTURE (FIG. 1)

20. Install (6) six candelabra base bulbs (J) up to 60 watts each of CFL or LED equivalent (not included) in accordance to fixture specifications.

DO NOT EXCEED THE MAXIMUM WATTAGE RATING!
(NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)

Your installation is now complete. You can now turn the power ON and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

FIG. 1

Set # A-012A
-Crossbar
-Mounting Screw x 2
-Ground Screw


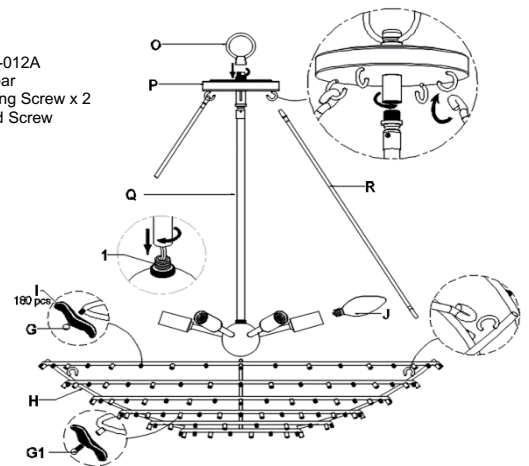


FIG. 2



Chain # HCH3072-732

Fig. 3

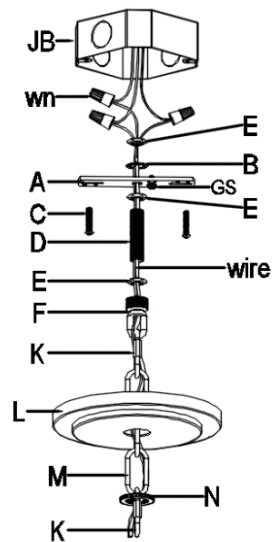

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

