

INSTALLATION INSTRUCTIONS

Item# N3409-870

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.
VERTISEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (Fig.1)

1. Shut off power at the fuse box or circuit breaker box and remove the old fixture including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts in a clean area. Take care not to misplace any small parts necessary for installation.
3. Thread the two center tubes (L) into coupler of the frame and secured with fixture loop (K).

HANGING THE FIXTURE (Fig.2)

4. Thread all thread (D) with hex nut (E) into ceiling loop (F) until snug.
5. Thread the other end of all thread (D) onto crossbar (A) with lock washer (B) and hex nut (E). Note: The Length of all thread (D) into crossbar (A) maybe adjusted if necessary.
6. Take the crossbar assembly and mount to junction box (JB) (*not provided*) with mounting screws (C). The side of crossbar (A) with "GND" marked on it and two convex points must face out.
7. Determine the desired hanging height and discard the excess chain.
8. Open one quick link (G) and connect to fixture loop (K), then close quick link (G).
9. Slip collar ring (J) and canopy (H) over chain (I) and allow them to rest on fixture loop (K). Open another quick link (G) and connect to ceiling loop (F), then close the quick link (G).
10. Feed fixture wires through chain (I), quick link (G), ceiling loop (F) and crossbar assembly.

CONNECTING THE WIRE (Fig. 3)

11. Connect the electrical wire as shown in Fig. 3, making sure that all the wire connectors are secured. If your junction box has a ground wire (green, or bare copper), connect fixture's ground wire to it. Otherwise, connect fixture's ground wire directly to crossbar using green screw provided.
12. Tuck wire connections neatly into junction box (JB). (Fig.2)
13. Raise the canopy (H) over the ceiling loop (F) and secure with collar ring (J). (Fig.2)

ACCESSORIES INSTALLATION (Fig. 1)

14. To begin installing the accessories unwrap the oval swirl glass (O) from the packing. Start on the inner portion of the frame when installing the glass.
15. Place the rubber washer (P) and oval swirl glass (O) into the headless screw of the frame (M) and secure with rubber washer (P) and ball nut (Q). Do not over tighten.

FINISHING THE FIXTURE (FIG. 1)

16. Install (14) fourteen candelabra base bulbs (N) up to 60 watts each or CFL or LED equivalent (not included) in accordance to fixture specifications.

DO NOT EXCEED THE MAXIMUM WATTAGE RATING!
(NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)

Your installation is now complete. You can now turn the power ON and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

FIG. 1



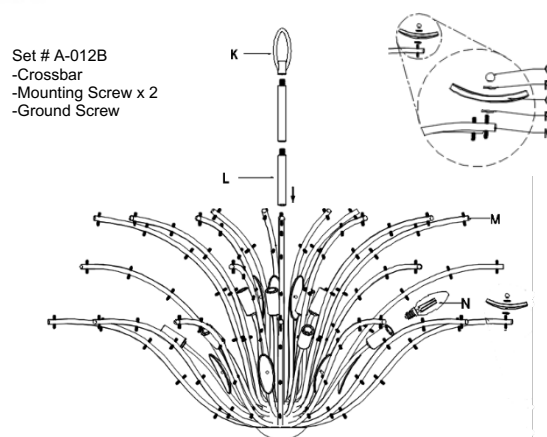


FIG. 2

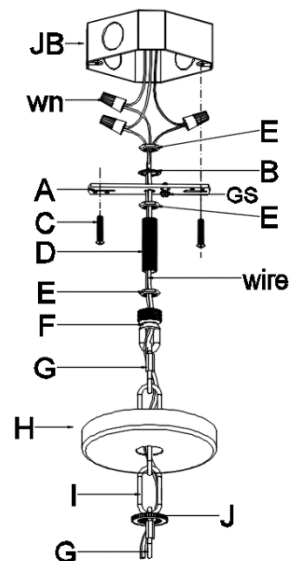

Chain # HCH3072-870

Fig. 3

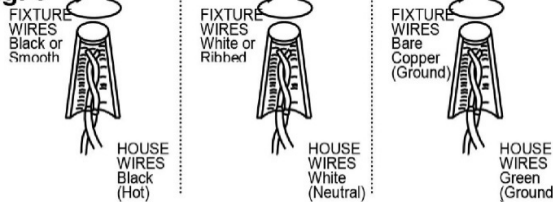

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

