

INSTALLATION INSTRUCTIONS

Item# N1824-732

READ AND SAVE THESE INSTRUCTIONS

ASSEMBLING THE FIXTURE (Fig.1 & Fig.2)

1. Shut off power at the fuse box or circuit breaker box and remove the old fixture including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts in a clean area. Take care not to misplace any small parts necessary for installation.
3. Remove the mounting plate (A) from the canopy (D) by removing the decorative ball nuts (G) located on the front of canopy (D).
4. Attached mounting plate (A) to junction box (JB) (*not provided*) with # 8-32 mounting screws (B). The side of mounting plate (A) marked with "GND" must be face out.

HANGING THE FIXTURE (Fig.1)

5. Thread the center rod (E) onto coupler (1) and secure swivel of canopy (D) into center rod (E) until tight.

CONNECTING THE WIRE (Fig. 3)

6. Connect the electrical wire as shown in Fig. 3, making sure that all the wire connectors are secured. If your junction box has a ground wire (green, or bare copper), connect fixture's ground wire to it. Otherwise, connect fixture's ground wire directly to mounting plate (A) using green screw provided.
7. Tuck wire connections neatly into junction box (JB). Fig.2.
8. Raise the canopy (D) over the screw (C) and secure with decorative ball nuts (G).

ACCESSORIES INSTALLATION (Fig. 1)

9. Attach the hook of 4 stems (F) to the hook of canopy (D) and the hook of the frame (H).
10. To begin installing the accessories unwrap the ceramic wavy disc (I) from the packing.
11. There are 2 types of disc lock as shown in Figure 1.
12. To begin installing the ceramic wavy disc (I), place the hole of the wavy disc into the headless screw and secure with rubber washers provided and ball nuts (G). Do not over tighten.
13. Place the hole of the ceramic wavy disc (I) into the threaded round tube and secure with rubber washers provided and ball nuts (G1). Don't too tighten.
14. Repeat the process until completed.

FINISHING THE FIXTURE (FIG. 1)

15. Install (4) **four candelabra** base bulbs (J) up to 60 watts each of CFL or LED equivalent (not included) in accordance to fixture specifications.

DO NOT EXCEED THE MAXIMUM WATTAGE RATING!
(NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)

Your installation is now complete. You can now turn the power ON and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

The fixture is over 10 lbs, please remove the frame (H) before removing canopy from the mounting plate (A) to inspect wire connectors in the future. This will allow you to hold the fixture body during wire connection or inspection or fixture removal.

FIG. 1

Set # A-020B
-Mounting Plate
-Mounting Screw x 2
-Ground Screw

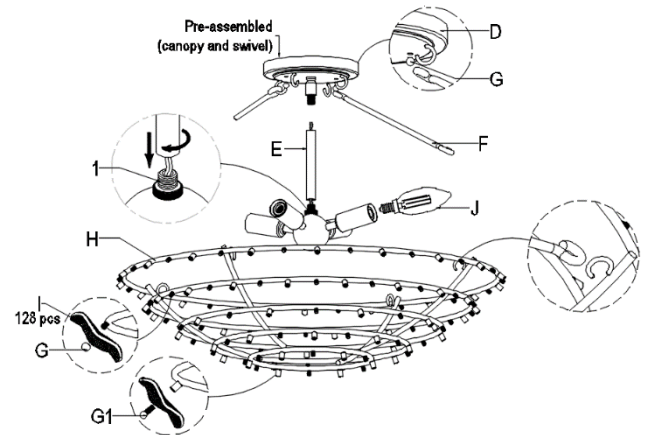


FIG. 2

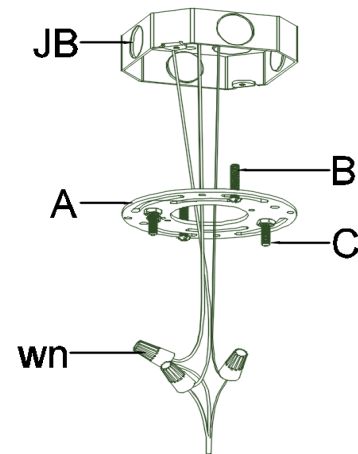


Fig. 3

