

INSTALLATION INSTRUCTIONS

14 - LED OUTDOOR

PM-W1417

MODERN FORMS

CAUTION: To prevent electrical shock, ensure electricity has been turned off at the circuit breaker before beginning.

- Read all instructions before installing.
- System is intended for installation by a licensed electrician in accordance with the National Electrical Code (NEC) and local regulations.
- When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the base only.
- Retain installation instructions for future maintenance reference.

WARNING: All parts must be used as indicated in these instructions. This product is designed for use only with the supplied parts and/or accessories designated for use by Modern Forms. Substitution of parts or accessories not designated for use with this product by Modern Forms could result in personal injury or property damage, and will void the warranty. Contact an authorized dealer or the manufacturer if any parts are damaged or missing.

MAINTENANCE NOTE: Coastal conditions may cause mineral and residue build-up on the fixture. We recommend that customers in coastal areas clean all external surfaces of the fixture once every two weeks with a wet cloth.

MISE EN GARDE: Pour éviter tout choc électrique, assurez-vous que le disjoncteur soit mis hors tension avant de commencer.

- Lisez toutes les instructions avant l'installation.
- Le système doit être installé par un électricien licencié conformément au code national de l'électricité (NEC), et également aux règlements locaux.
- Lors de la manipulation du luminaire, n'appuyez pas sur les LED. Tenez-le uniquement par la base.

ATTENTION: Toutes les pièces doivent être utilisées comme indiqué dans ces instructions. Ce produit est conçu pour être utilisé seulement avec les pièces et/ou accessoires fournis pour être utilisés avec les produits Modern Forms. Remplacer des pièces ou accessoires non conçus pour ce produit Modern Forms pourrait causer des dommages corporels ou matériels et pourrait également causer l'annulation de la garantie. Veuillez contacter un revendeur autorisé ou le fabricant si des pièces manquent ou sont endommagées.

NOTE D'ENTRETIEN: Les conditions côtières peut causer une accumulation de minéraux et de résidus sur le luminaire. Nous recommandons aux clients qui résident dans les zones côtières de nettoyer toutes les surfaces externes du luminaire une fois toutes les deux semaines avec un chiffon humide.

HARDWARE

A



Wire Connector
Qty: 3pcs+1 Extra

B



Allen Screw
Qty: 3pcs+1 Extra

C



Allen Wrench
Qty: 1 Extra

D



Mounting Screw
Qty: 1 Extra

E



Fixed Screw
Qty: 1 Extra

F



Washer
Qty: 1 Extra

modernforms.com
Phone (800) 526.2588
Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive
Port Washington, NY 11050

Central Distribution Center
1600 Distribution Ct
Lithia Springs, GA 30122

Western Distribution Center
1750 Archibald Avenue
Ontario, CA 91760



INSTALLATION INSTRUCTIONS

14- LED OUTDOOR

PM-W1417

MODERN FORMS

Fig.1

 
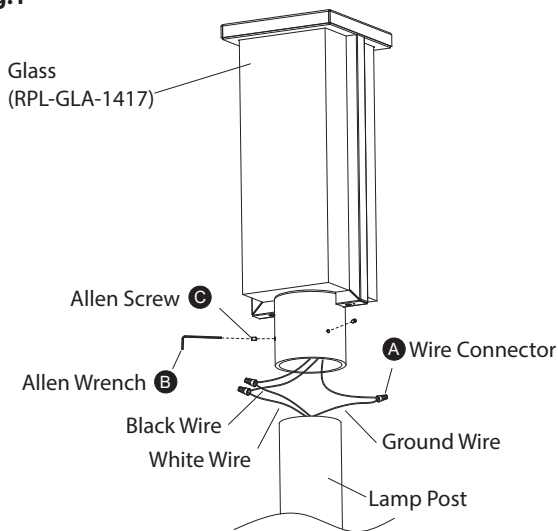 


Fig.2

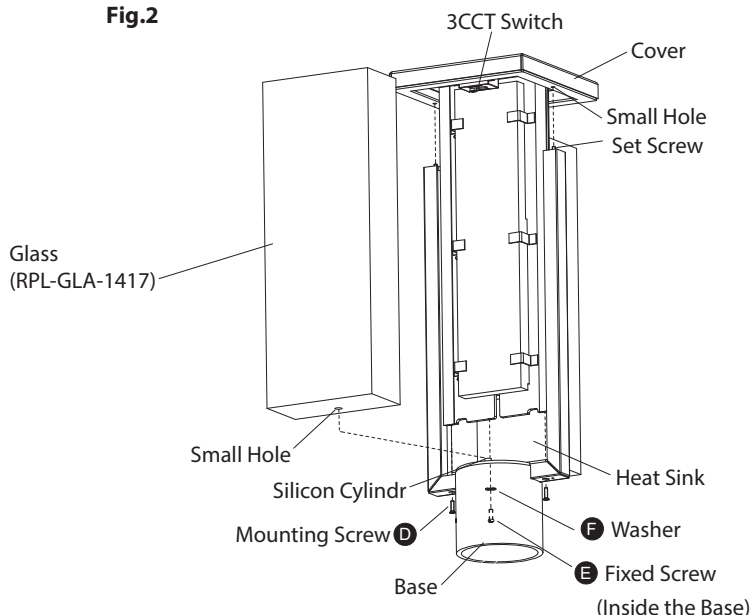

PREPARATION

1. Shut off the power at the circuit breaker and remove existing fixture, including the crossbar.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Be careful not to lose any small parts necessary for installation.

CONNECTING THE WIRES (Fig. 3)

3. Connect the fixture's wires to post wires as shown in Fig. 3. Making sure that all wire connectors (A) are secured. Connect the fixture's ground wire to a green or bare copper ground wire from post, tuck them carefully inside the post.

MOUNTING THE FIXTURE (Fig. 1)

4. Place the fixture onto the post. Secure it with the Allen Screw (B) using Allen Wrench (C).

(OPTIONAL) SETTING THE COLOUR TEMPERATURE (Fig. 2)

The fixture can switch between three color temperatures (2700k, 3000k, 3500k), which can be adjusted to 2700k and 3500k according to the following steps.

5. Remove the mounting screw (D), fixed screw (E), washer (E) and take off the glass, then reset the 3CCT switch (Fig. 4).
6. Place the glass back onto the heat sink, then secure the mounting screw (D), fixed screw (E) and washer (E) to restore the fixture.

NOTE: (i) Set screw on the top must be inserted into the small hole of the cover;
(ii) Silicon cylinder must be inserted into the small hole on the glass.

7. Finally, connect the wires and mount the fixture as the above steps.

FIG. 3 Wiring

 
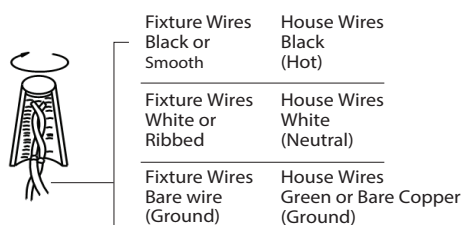 


Fig. 4 Switch

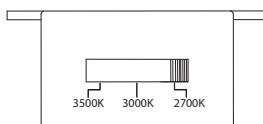

modernforms.com
Phone (800) 526.2588
Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive
Port Washington, NY 11050

Central Distribution Center
1600 Distribution Ct
Lithia Springs, GA 30122

Western Distribution Center
1750 Archibald Avenue
Ontario, CA 91760

