

RAVENHILL STUDIO

2122 Cypress Ave, Los Angeles, CA 90065
323.977.8532, contact@ravenhillstudio.com

We recommend that a professional electrician install our Peek Can Fixture. Please share this guide with them and ensure they read the instructions completely before beginning assembly.

Your Peek Can Fixture comes packaged in (3) individual parts and packets:

(1) Peek Can Fixture

(1) A19 Lightbulb

(1) Misc Contents Envelope

Wire Nuts (2)
Canopy Mounting Screws (2)
Allen Key


(4.5 Canopy Only)
Junction Box Screws (2)
Universal Plate


Included with your Peek Can Fixture is one A19 LED Lightbulb.

The Lightbulb is JA8 certified and has a 15,000-hour lifetime.

60W Max

Your Peek Can Fixture is vulnerable to scratching and staining if care is not taken. Before installing or adjusting your fixture, it is highly recommended that you wear gloves.

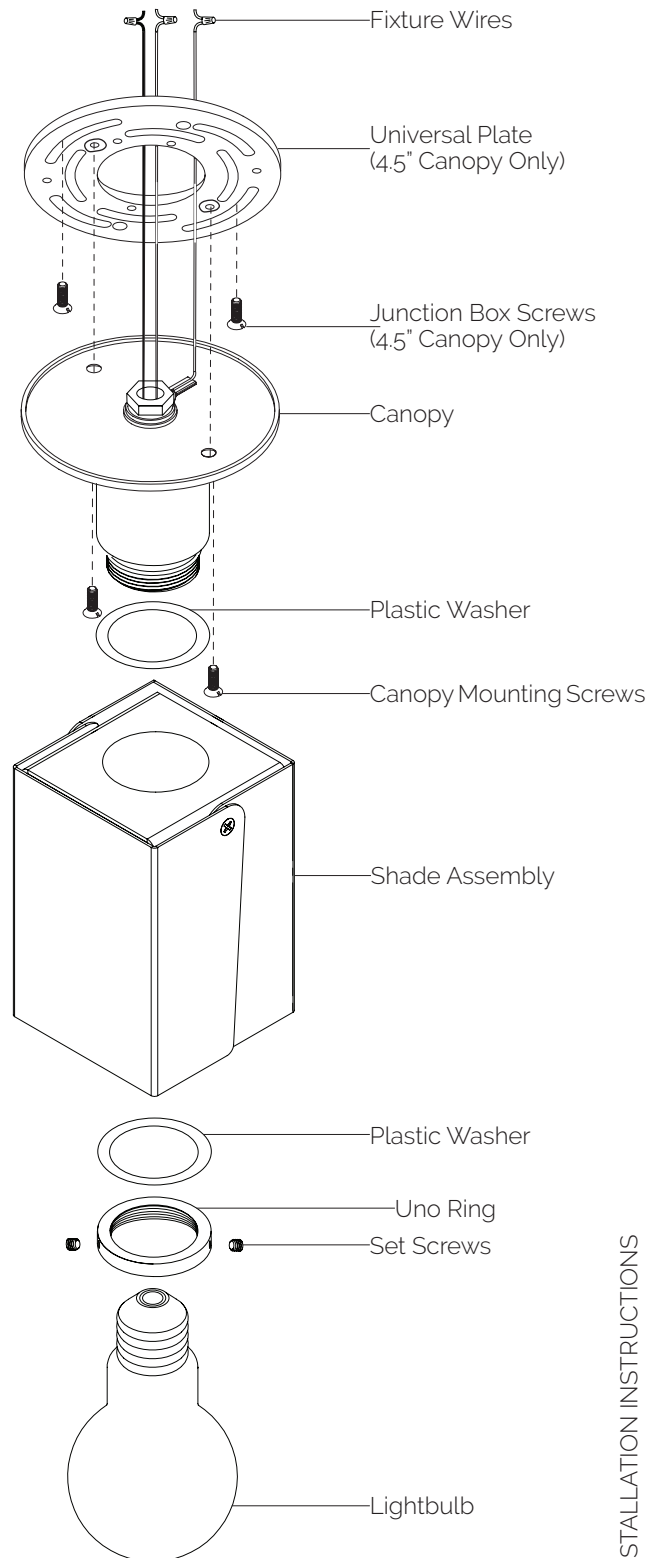

 **CAUTION:** Before starting, turn off power at main circuit power.

1. Unpack your box and open the miscellaneous contents envelope.
2. Pivot the Shades of your Peek Fixture open and use the provided Allen Key to gently loosen the 2 x Set Screws on the Uno Ring. Unthread the Uno Ring and set aside.
3. Carefully remove the 2 x Plastic Washers and Shade Assembly from the Socket and Canopy Assembly and set aside. If installing a 3.5" Canopy, skip to Step # 6.
4. Locate the 2 holes circled in red on the Universal Plate. These are for the Canopy Mounting Screws only and should be oriented to align to the room or existing fixtures.
5. Once desired orientation of the Universal Plate is confirmed, use the provided Junction Box Screws to secure the Universal Plate to the junction box through any of the unmarked holes or slots.
6. Bring the Canopy and Socket Cup Assembly to the ceiling and connect the Fixture Wires to the junction box power using Wire Nuts.
7. Use the provided Canopy Mounting Screws to attach the Canopy. For a 3.5" Canopy, connect directly to the junction box. For a 4.5" Canopy, attach to the marked holes on the Universal Plate.
8. To re-assemble your Peek Fixture, place the components over the Socket Cup threads in this order:
 1. Plastic Washer
 2. Shade Assembly
 3. Plastic Washer
 4. Uno Ring
9. Hand tighten the Uno Ring onto the Socket Cup until snug, being sure not to overtighten. The Shade Assembly should be able to spin but also stay in place when at rest.
10. Once desired tightness is achieved, use the Allen Key to tighten the Set Screws securely. Loose Set Screws may cause the Uno Ring to fall off when adjusting the Shade Assembly. Screw in the Lightbulb, turn on and enjoy!

NOTES / TROUBLESHOOTING

Use a microfiber cloth to clean dust and dirt particles from your Peek Fixture.

Rotate the Shade Assembly clockwise or counterclockwise to achieve the desired orientation. Shades can be opened or closed to control light output.

It is highly recommended to clean your hands (and consider wearing gloves) before installing or adjusting your Peek fixture.

Use Renaissance Wax to remove tarnish on Waxed Brass and Nickel colorways only. For further finishing guidance or techniques, please contact the studio.

A Phillips Head Screwdriver can be used to tighten the shades if needed.