

RAVENHILL STUDIO

2122 Cypress Ave, Los Angeles, CA 90065
323.977.8532, contact@ravenhillstudio.com

We recommend that a professional electrician install our Peek Pendant Fixture. Please share this guide with them and ensure they read the instructions completely before beginning assembly.

Your Peek Pendant Fixture comes packaged in (3) individual parts and packets:

(1) Peek Pendant Fixture

(1) A19 Lightbulb

(1) Misc Contents Envelope


Wire Nuts (2)
Canopy Mounting Screws (2)
(4.5 Canopy Only)
Junction Box Screws (2)
Universal Plate

Included with your Peek Pendant Fixture is one A19 LED Lightbulb.

The Lightbulb is JA8 certified and has a 15,000-hour lifetime.

60W Max

Your Peek Pendant Fixture is vulnerable to scratching and staining if care is not taken. Before installing or adjusting your fixture, it is highly recommended that you wear gloves.

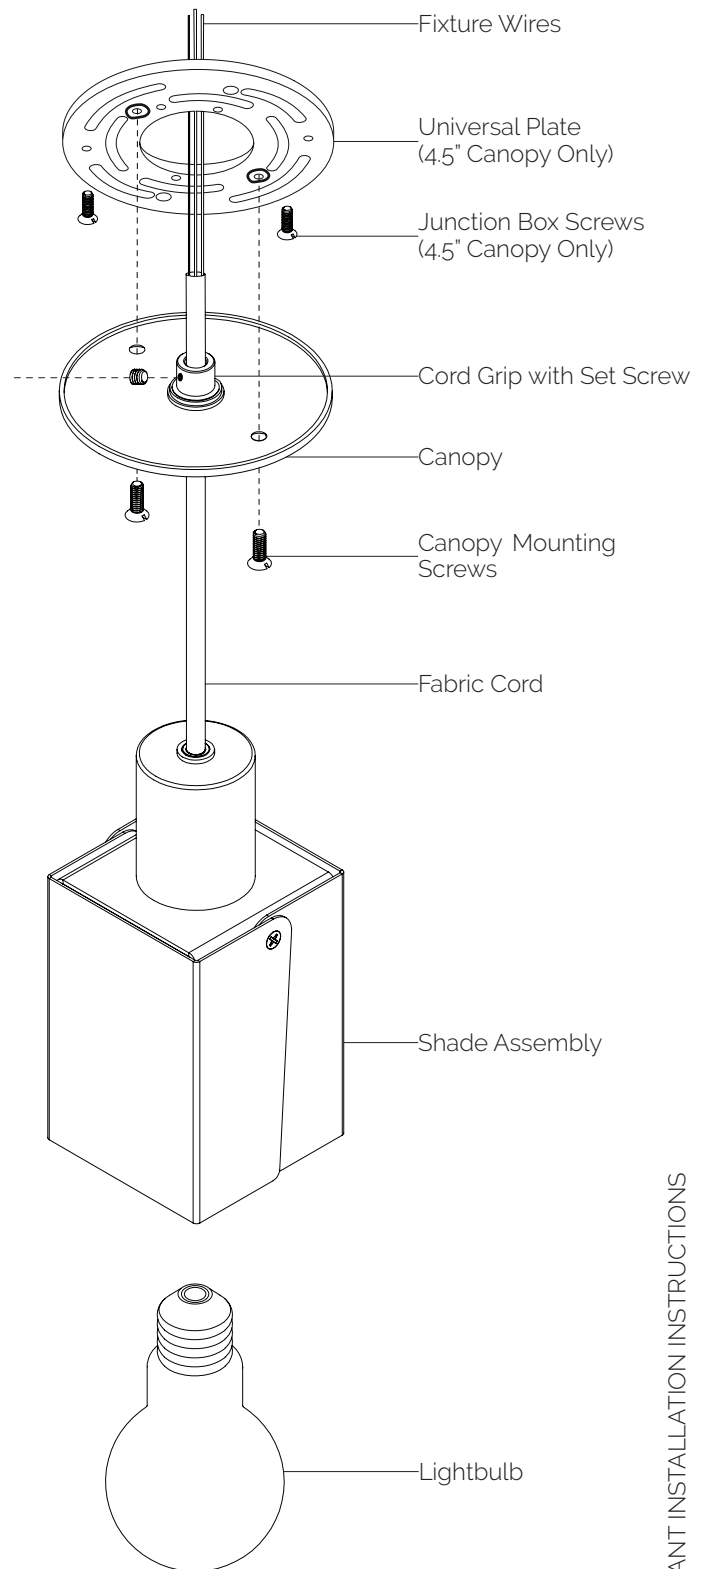

CAUTION: Before starting, turn off power at main circuit power.

1. Unpack your box and open the miscellaneous contents envelope.
2. Determine the hanging length of your Peek Pendant by positioning the assembled fixture in the desired location.
3. Loosen the Set Screw on the Cord Grip, adjust the Cloth-Covered Cord to your desired height, and then tighten the Set Screw. If installing a 3.5" Canopy, skip to Step #6.
4. Locate the 2 holes circled in red on the Universal Plate. These are for the Canopy Mounting Screws only and should be oriented to align to the room or existing fixtures.
5. Once desired orientation of the Universal Plate is confirmed, use the provided Junction Box Screws to secure the Universal Plate to the junction box through any of the unmarked holes or slots.
6. Bring the Canopy to the ceiling and cut any excess cord, strip the wire ends of the cord and attach to your power source with wire nuts.
7. Use the provided Canopy Mounting Screws to attach the Canopy. For a 3.5" Canopy, connect directly to the junction box. For a 4.5" Canopy, attach to the marked holes on the Universal Plate.
8. To straighten the Cloth-Covered Cord, gently run the Cord between your thumb and index finger from the Canopy to the Shade Assembly. The Cord has memory and may retain bends from packaging, so it should be adjusted on site to hang straight. Screw in the Lightbulb, turn on and enjoy!

NOTES / TROUBLESHOOTING

Use a microfiber cloth to clean dust and dirt particles from your Peek Fixture.

Rotate the Shade Assembly clockwise or counterclockwise to achieve the desired orientation. Shades can be opened or closed to control light output.

It is highly recommended to clean your hands (and consider wearing gloves) before installing or adjusting your Peek fixture.

Use Renaissance Wax to remove tarnish on Waxed Brass and Nickel colorways only.

A Phillips Head Screwdriver can be used to tighten the shades if needed.