

LED Product Information and Warnings

Important

- **Always disconnect the power before installing or replacing parts and before cleaning or other maintenance.**
- **Consult a qualified, licensed electrician to ensure correct branch circuit conductor.**
- Please read all included assembly instructions and warnings carefully before installation. Contact Customer Service if you have any questions or concerns. Before installation, please confirm that the fixture is compatible with your supply voltage and dimming system, if present.
- LEDs are highly sensitive electronic devices, and must be treated with care. Do not open any factory sealed compartments, and avoid touching the LEDs with your hands or any object.
- Although all our fixtures are equipped with protective devices, LED fixtures are vulnerable to power surges and supply variations. Do not install LED fixtures on the same circuit as any motors, appliances, or HVAC systems.
- Do not remove or bypass any LED Driver or Transformer that is provided with the fixture, and do not replace or substitute with another power supply.
- Remote LED Driver or Transformer installation must be done by a licensed electrician and in accordance with local codes. Remote installations should be in an accessible location, as close to the fixture as possible.
- Fixtures must be wired in parallel on independent leads; do not "daisy chain" multiple fixtures together or wire them in series.
- All factory-made splices and connections must remain intact. LED circuits are carefully designed and built, and improper connections may damage the fixture.
- The ends of coaxial pendant cords have been precisely stripped and split at the factory and must not be field cut. Excess cord or cable should be neatly coiled and reserved in the fixture canopy.
- Any mounting hardware is provided for your convenience and should be used with discretion. Always use the appropriate hardware for the mounting surface.

Assembly Instructions

INSTRUCTIONS D'INSTALLATION

3074

Mela Series - 3-Light Pendant

Important

- **Always disconnect the power before installing or replacing parts and before cleaning or other maintenance.**
- **Consult a qualified, licensed electrician to ensure correct branch circuit conductor.**
Consulter un électricien qualifié pour vous assurer que les conducteurs de la dérivation sont adéquats.

1. Shut off power to the outlet box. (A).
2. Feed the power cords (B) through the bushings (C) on canopy (D).
3. Determine the height at which the fixture is to be hung. Use the screwdriver (E) to loosen the set screw (F). Adjust the cord (B) to the desired length. Tighten the set screws to set.
4. Connect the fixture wires to the lever nuts (G) by pulling up on the lever for an empty slot (Fig. 1), inserting the wire, and pushing the lever back down to lock. The red inner conductor (H) and black outer conductor (J) on each cord (B) must be connected to separate lever nuts, as shown (Fig. 2). **Note:** this step may not be applicable.
5. Loosen the screws on the safety cable coupling (K) and undo the loop. Pass the safety cable through a hole on the cross bar (L) and insert the end back through the coupling to form a loop. Tighten the coupling screws to secure the safety cable.
6. Make appropriate electrical connections using wire nuts:
 - a. Connect the LED driver's (M) live wire (black) to the outlet box (A) live wire.
 - b. Connect the LED driver's neutral wire (white) to the outlet box neutral wire.
 - c. Connect fixture's ground wire (green or uncoated) to the outlet box ground wire.
 - d. Carefully place connections and LED driver in outlet box.
7. Reserve extra cords and LED driver (M) in canopy (D).
8. Attach cross bar (L) to the outlet box (A), secure with outlet the provided box screws (N).
9. Attach canopy (D) to nipple (P), using canopy washer (Q) and canopy nut (R).
10. Install lens (S) into the pendant (T) and secure by screwing diffuser (U) into the pendant (Fig 3).
11. Carefully hold the pendant (T) while screwing the glass (V) onto the pendant (Fig. 3).
12. Restore power to the outlet box (A).

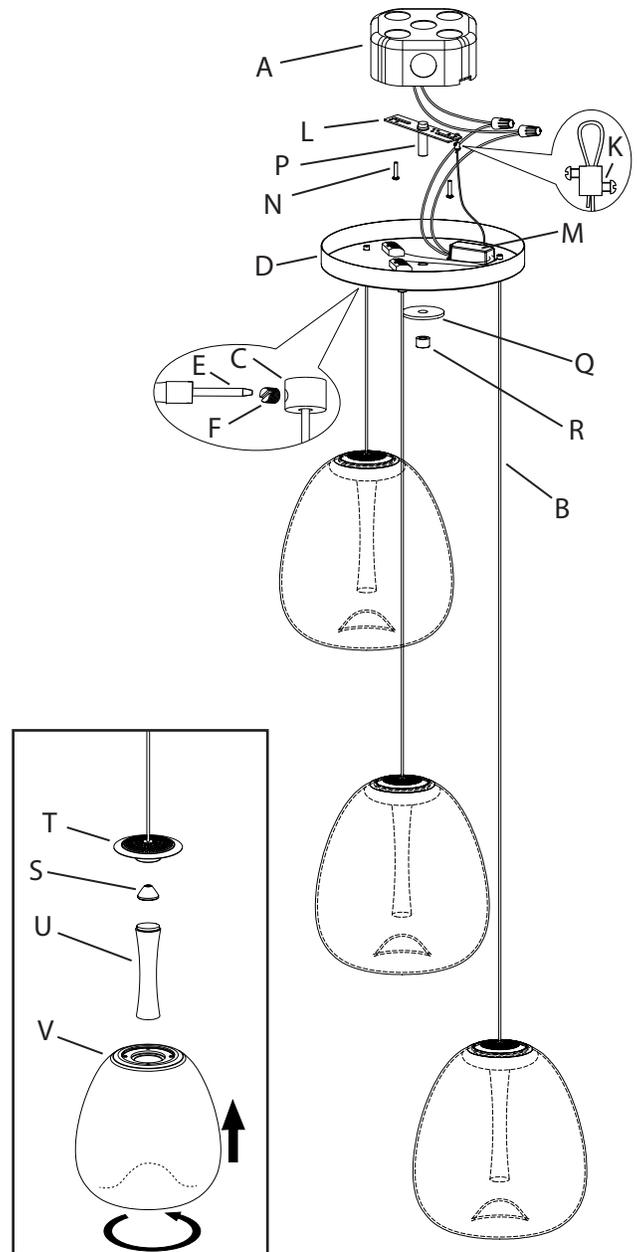


Fig. 3

Note

- **The outlet box must be at least 4" DIA and 1.5" deep to fit the LED driver.**
- **This fixture is dimmable with Electronic Low Voltage (Trailing-Edge), Incandescent (Leading-Edge), and 0-10 V type dimmers.**

Care Instructions

- **Dusting: Use a clean, dry cloth.**
- **Cleaning: To protect the finish, avoid any harsh abrasives or chemicals.**

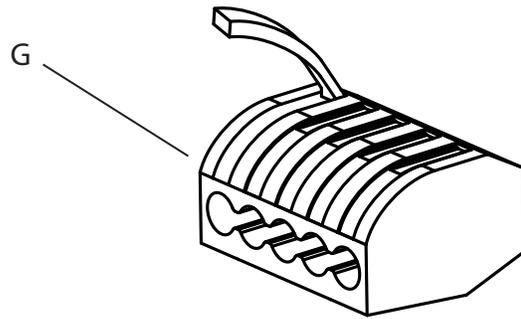


Fig. 1

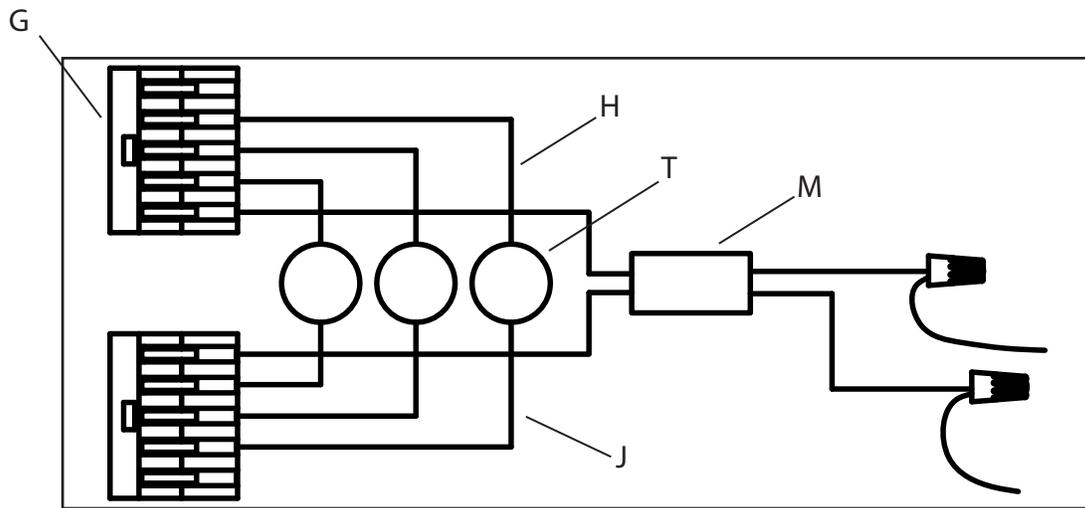


Fig. 2