 

 


464 Leap® WorkLounge Seat Cushion Replacement (Customer Service)

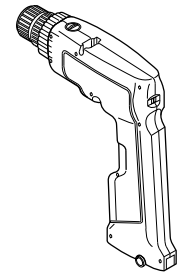

#3 Phillips




If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you. (Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500) Or visit our website: www.steelcase.com

© 2005 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.
Printed in U.S.A.

Underside of Arm

- 1.** Remove arm cap screws from underside of aluminum armrest structure (1a) and remove both arm caps (1b).

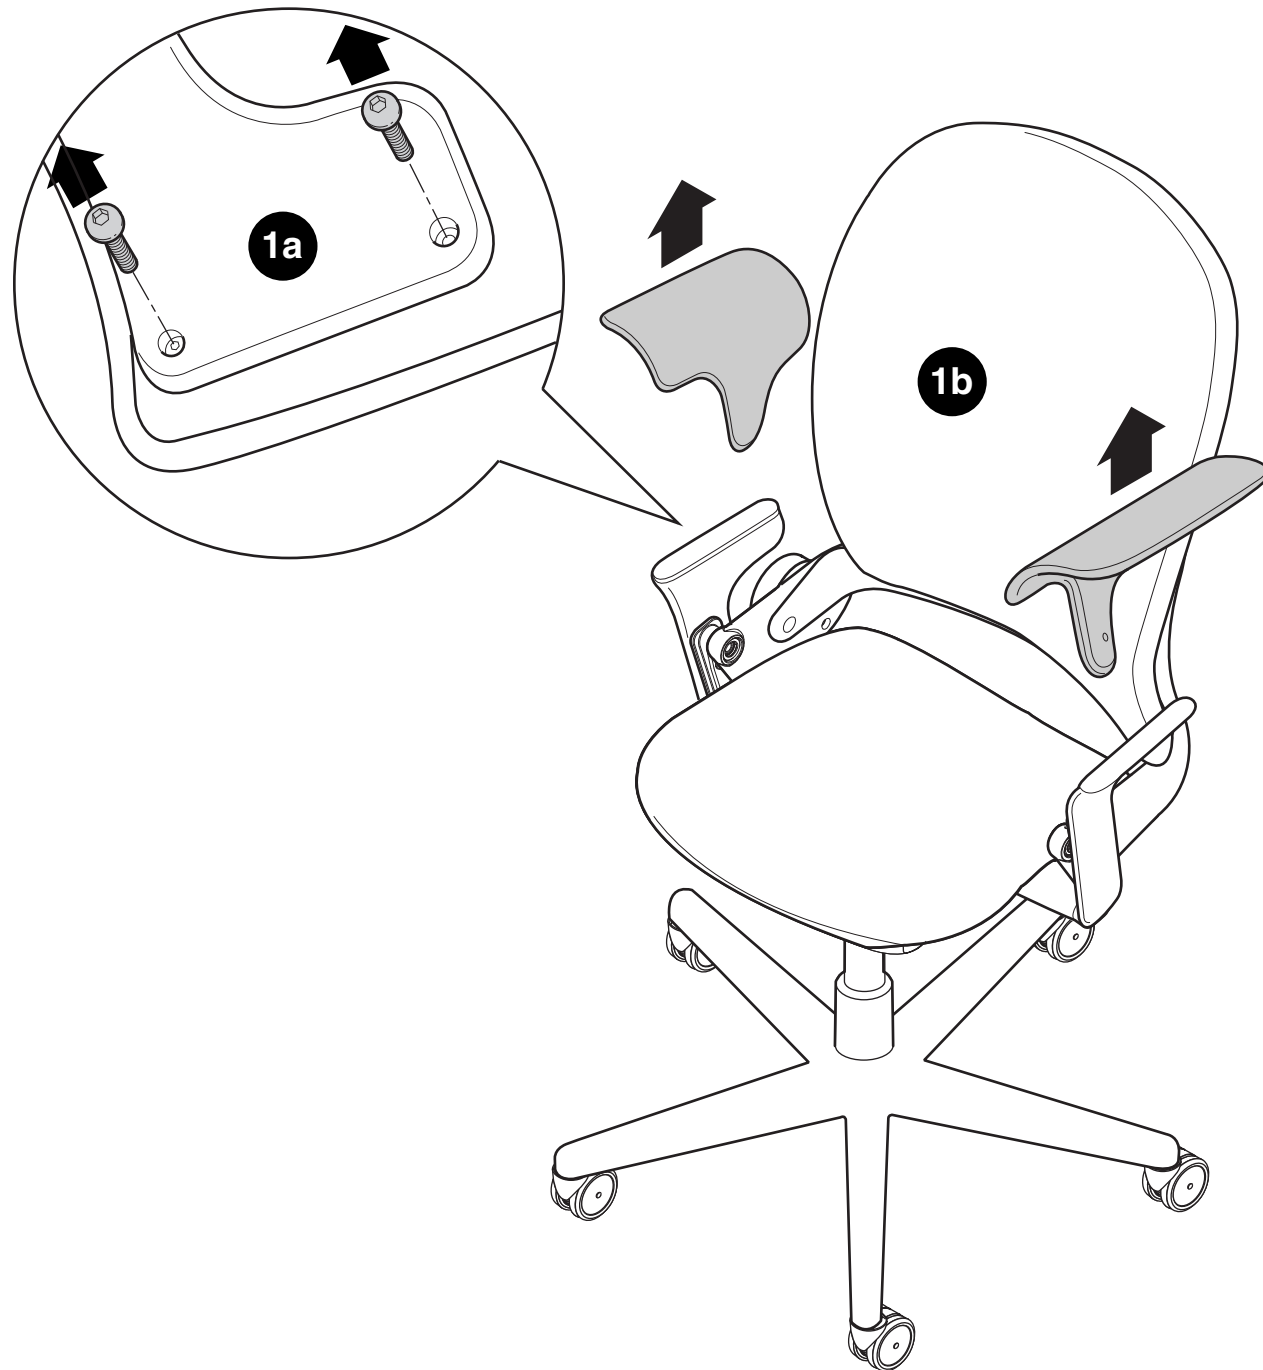

- 2.** Flip chair over. Remove rear seat screws with a #3 phillips (2a) and remove seat by sliding seat forward and lifting (2b).

Reverse step 2 to install new seat cushion.

- 3.** Reverse step 1 to reattach arm caps with arm cap screws.

Underside Rear of Chair

