



If you have a problem, question, or request, call  
your local dealer, or Steelcase Line 1 at  
**888.STEELCASE** (888.783.3522)  
for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico,  
and the U.S. Virgin Islands, call: 1.616.247.2500)

Or visit our website: [www.steelcase.com](http://www.steelcase.com)

© 2013 Steelcase Inc.  
Grand Rapids, MI 49501  
U.S.A.

Printed in U.S.A.

**1.** Lay chair on side as shown, with the control knobs pointing up. Depress seat catch spring (located under the seat). Rotate seat depth knob clockwise until seat stops moving forward.

**2.** Position chair up and pull seat off.

**3.** To install new seat cushion, slide seat on from the front until it stops. Turn seat depth adjust knob counter clock-wise until the seat stops moving backwards.

