 


If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.

 
 
 
(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)

Or visit our website: www.steelcase.com




© 2020 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.
Printed in U.S.A.

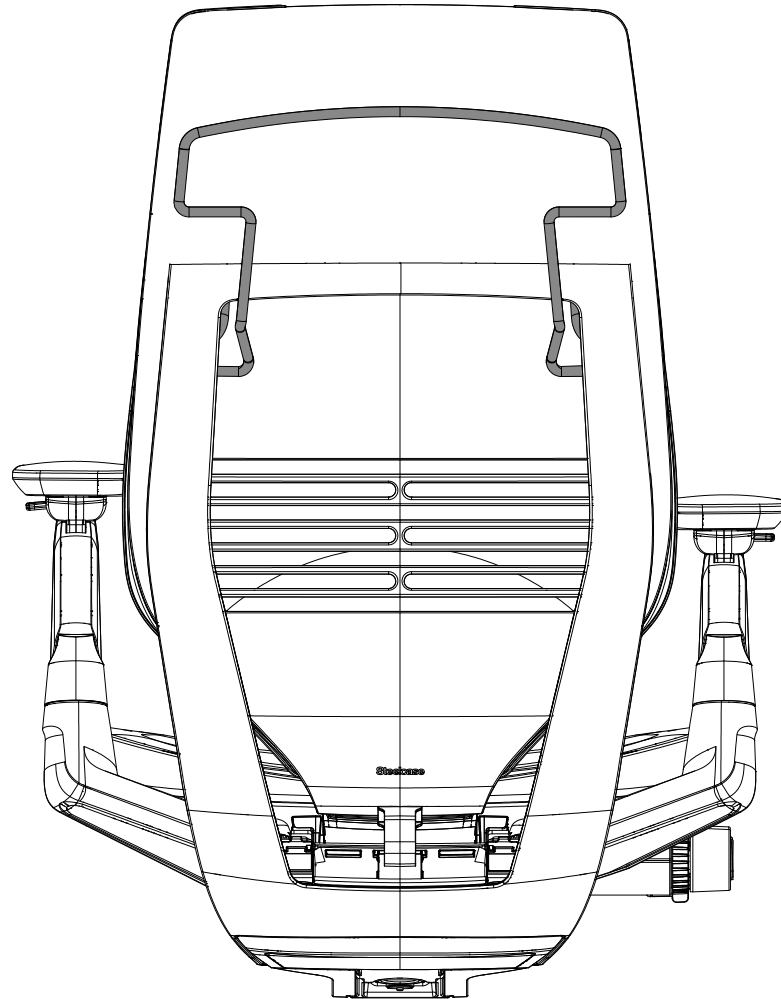


1. Assemble one side onto the frame.
Coat hanger is slanted with ~ 30 degree.
2. Coat Hanger has been position into the specific location as shown.
3. Pull the other side of coat hanger in order to secure the other side onto the frame.

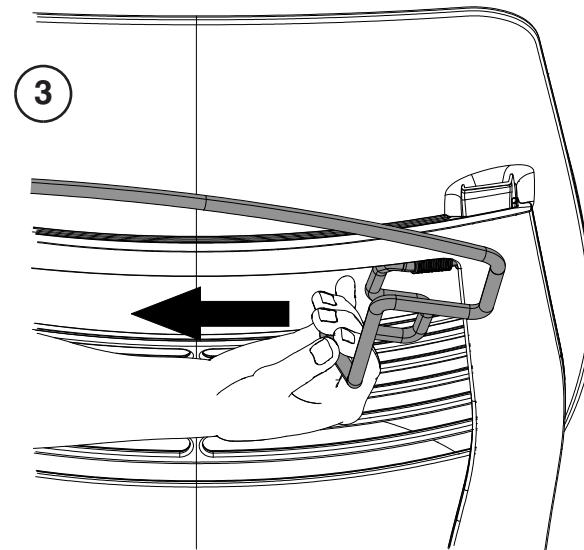
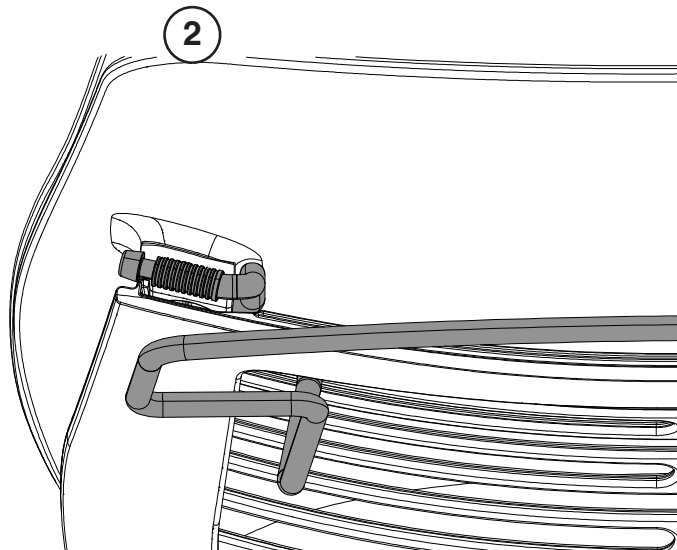
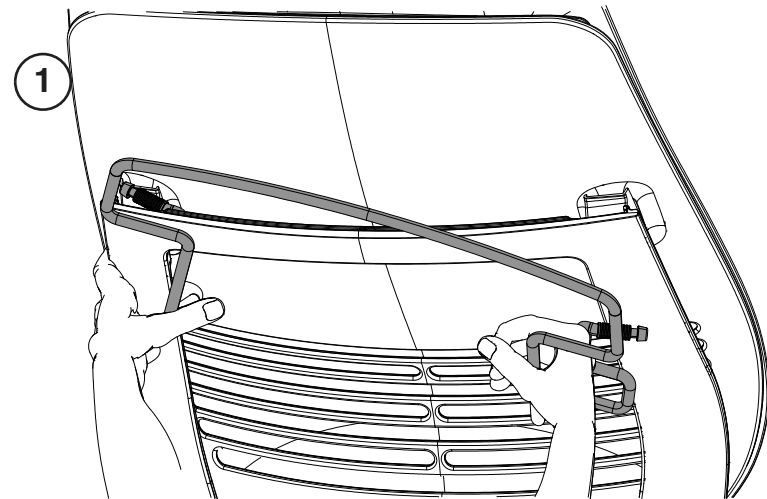


    
4. Ensure the coat hanger ends secure as shown at the right position before moving to step 5.
5. Push/pull as per directions shown in picture. Push/pull both hanger ends to ensure it has been secured into position.
6. Ends of coat hanger need to be secured as shown.

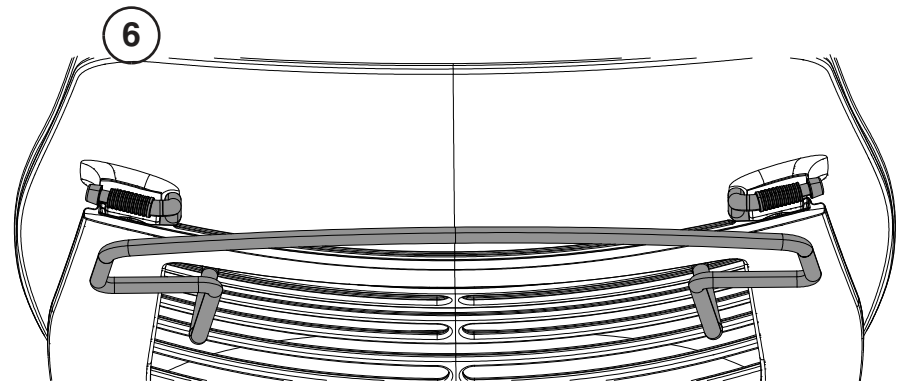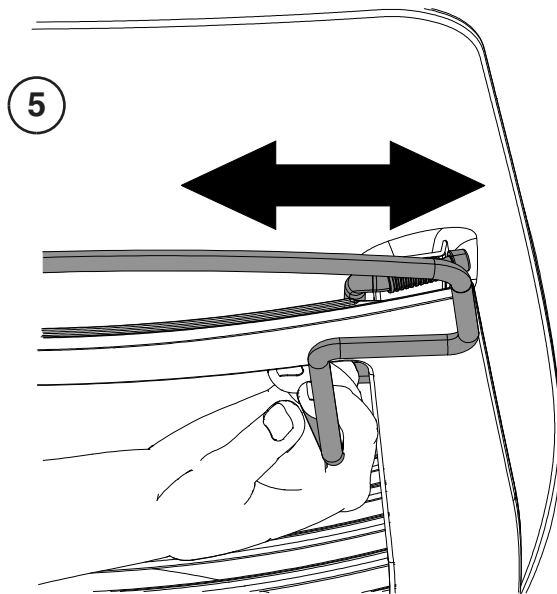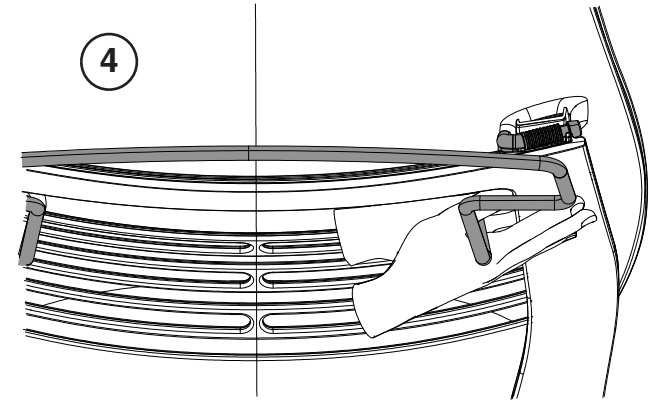

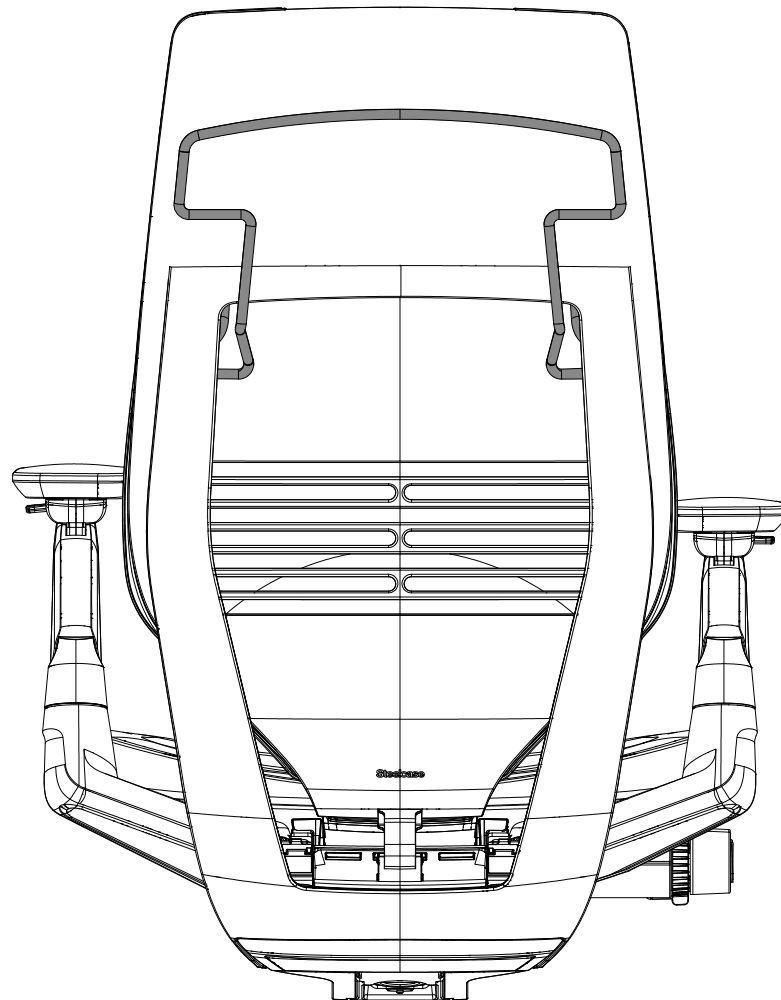

1. Rubber end cap need to be pushed/pulled while pulling the coat hanger out. This is important to protect the frame from scratch. *pulling the coat hanger without pushing the rubber cap will lead the rubber cap being left by the coat hanger.
2. Once the rubber cap has been pushed while moving away the hanger, keep on pulling/pushing the coat hanger until it release from locking position as shown below.
3. Once the other side has been released, drag down the hanger to fully released the coat hanger from frame.

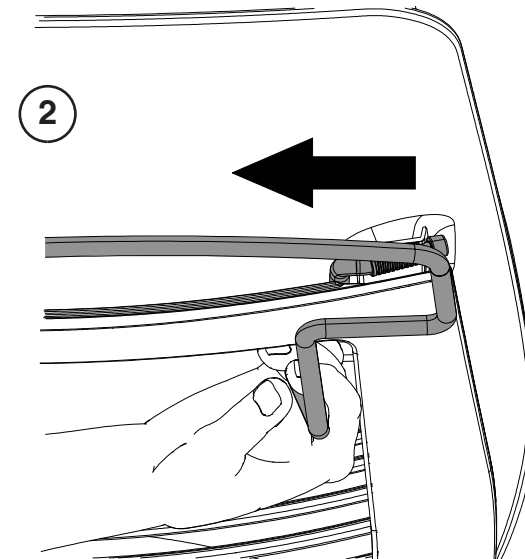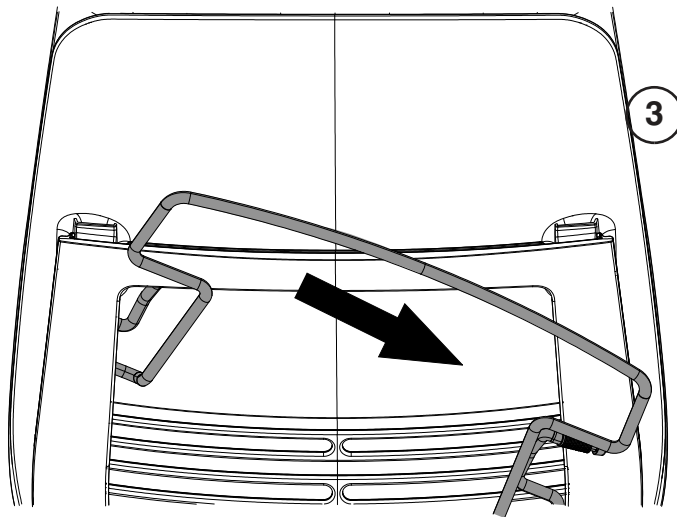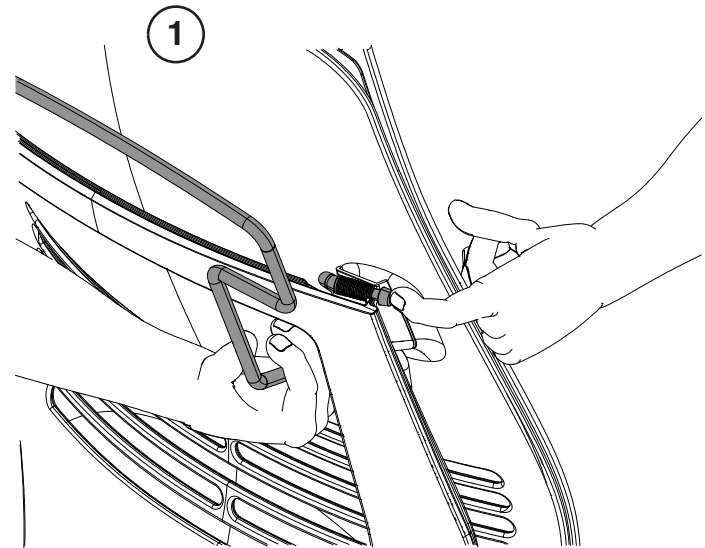


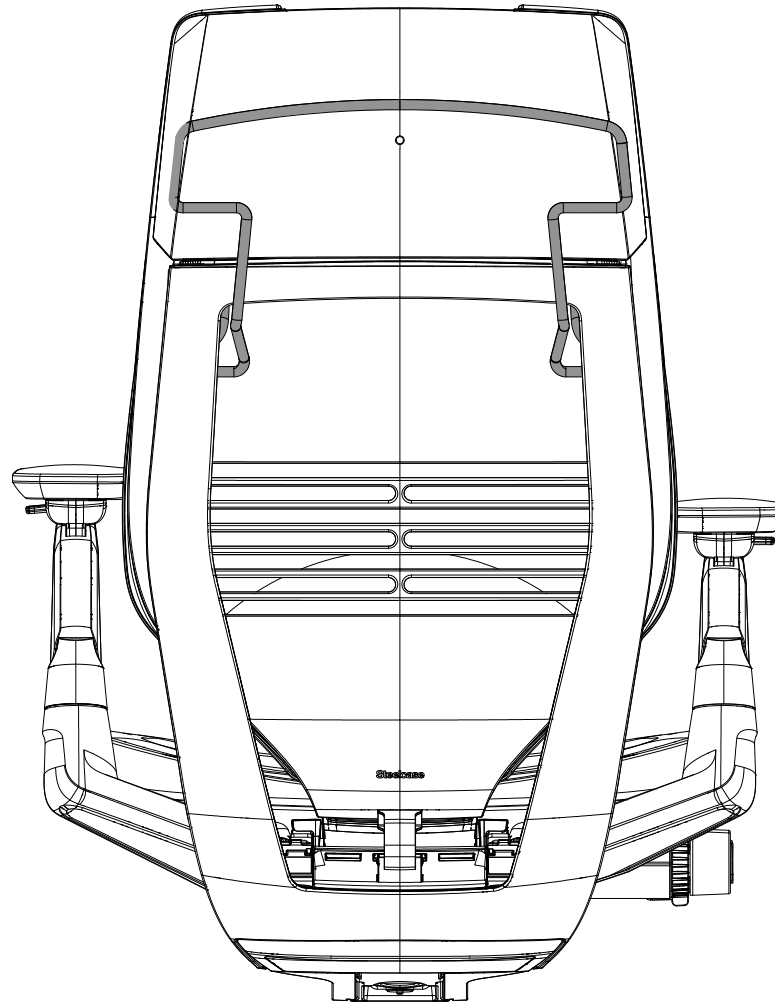


1. Assemble one side onto the frame

Coat hanger is slanted with ~ 30 degree.






- 1.1 Highlighted spot is where the coat hanger need to be slot into. This will need to ensure coat hanger to be slot in that position before securing the hanger. Both side having this slot.

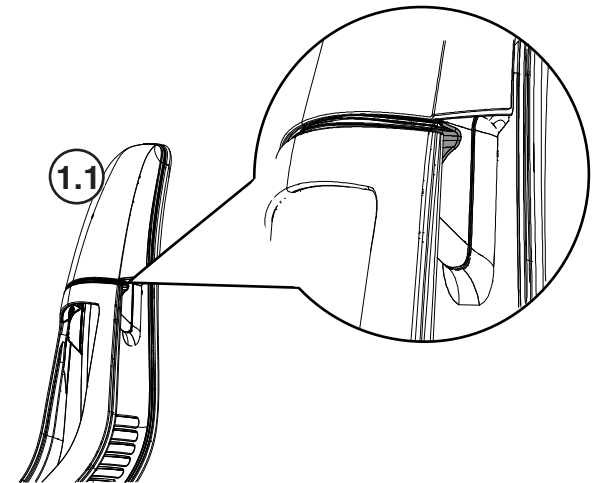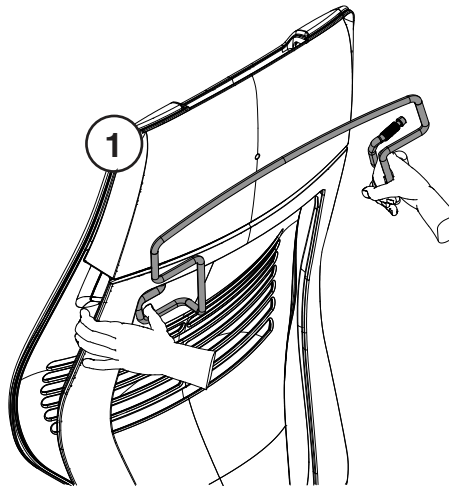





2. Observe the rubber cap before pushing/pulling the coat hanger, this to ensure hanger has been position into the right position before moving to next step.

3. Once rubber cap observed from side clearly, move into step 5. leave as it is, you will need to push/pull the hanger to ensure rubber cap will be lock into position.

4. Once the cap has been in the right position as shown in step 2, pull/push the coat hanger to secure into position.

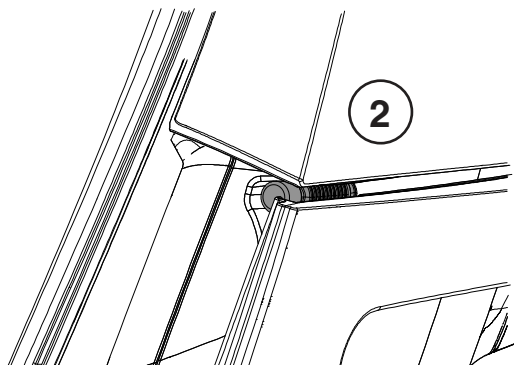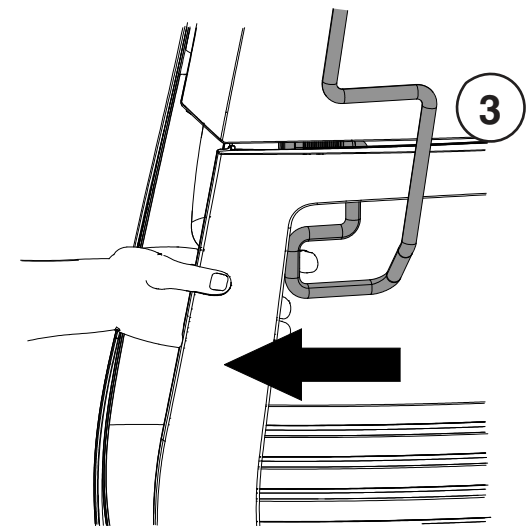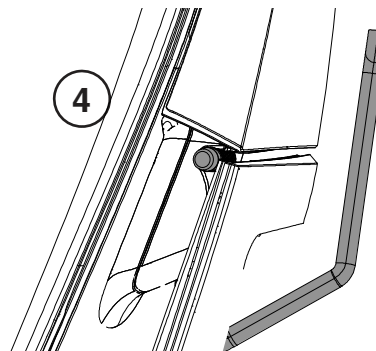




5. Highlighted is where the coat hanger needs to be slot into. This will need to ensure coat hanger to be slot in that position before securing the hanger.
6. Pull/Push the hanger to secure the other side of hanger.
7. Step 8 showing coat hanger has been placed into the correct position.
8. Repeat step 2, Observe the rubber cap before pushing/pulling the coat hanger, this to ensure hanger has been positioned into the right position before moving to next step.

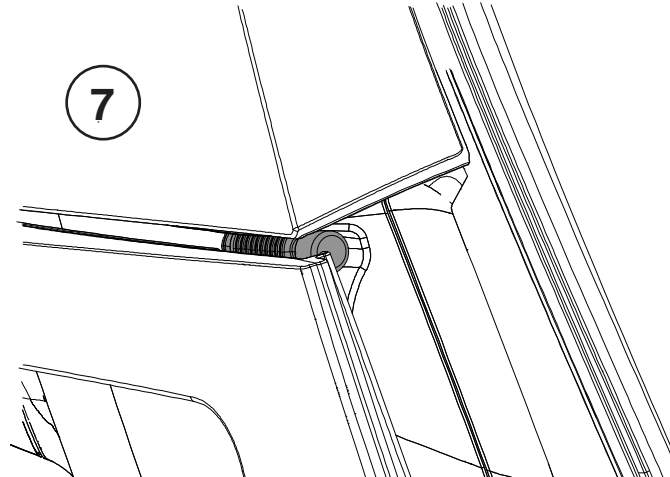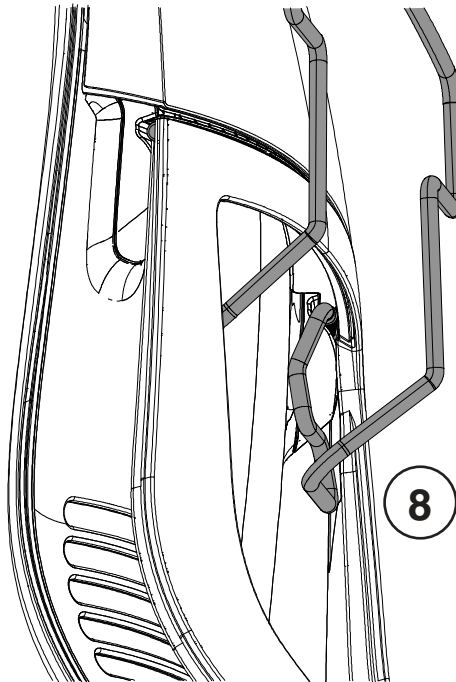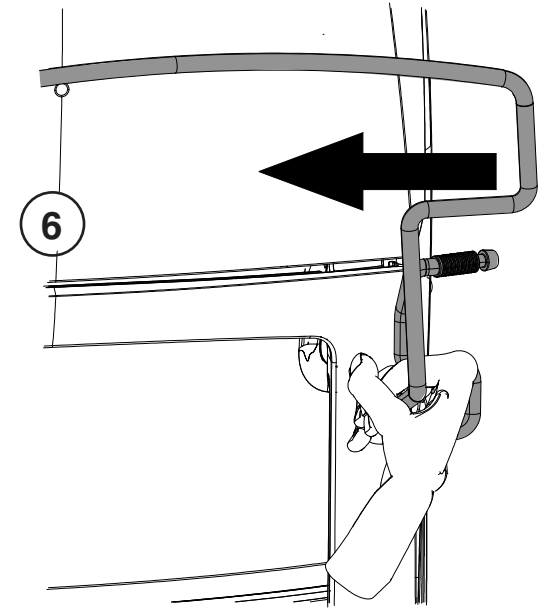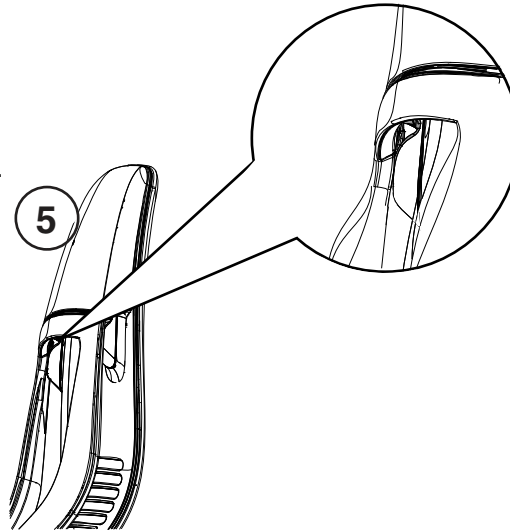


- 9.** End cap will be observed clearly on the side view. Showing hanger has been inserted correctly on the right position

- 10.** Push/pull the hanger to ensure hanger to be locked into position. This step is required on both side .

- 11.** Rubber cap is in secured position for both side.

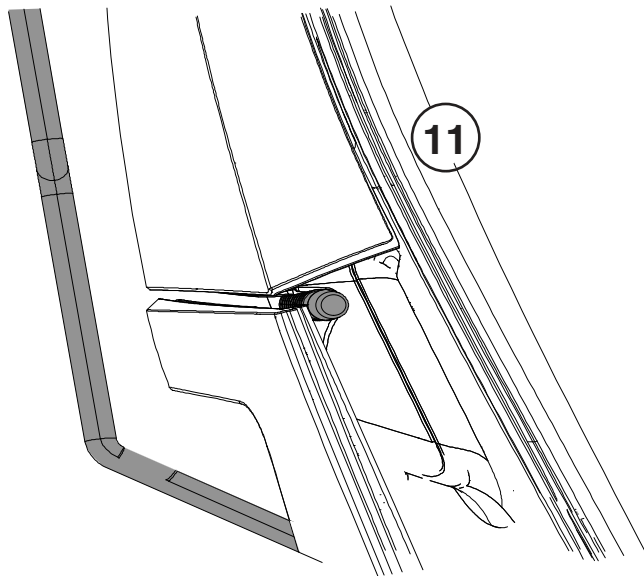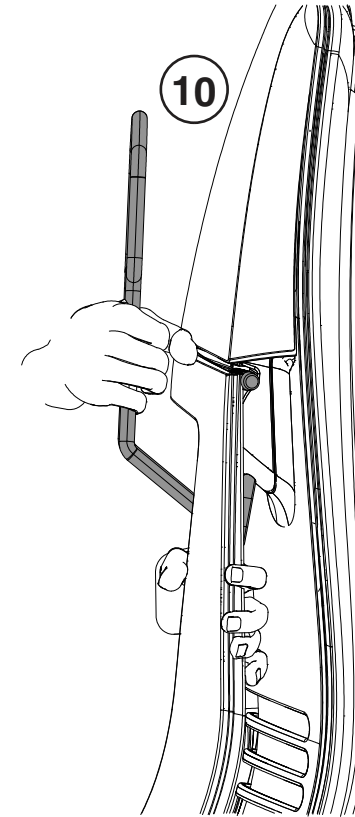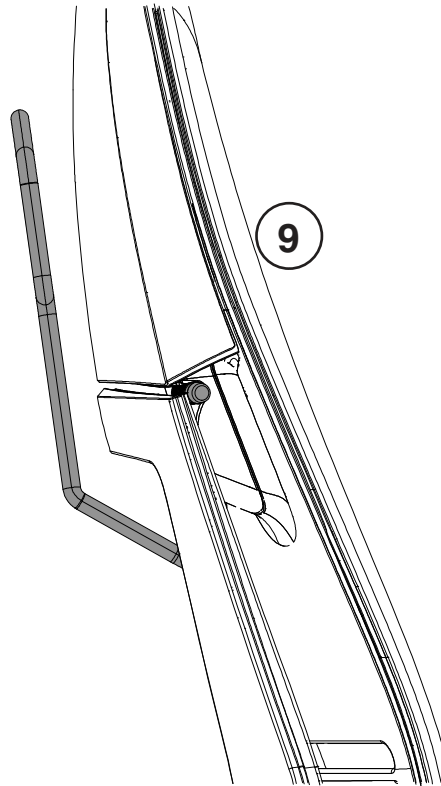

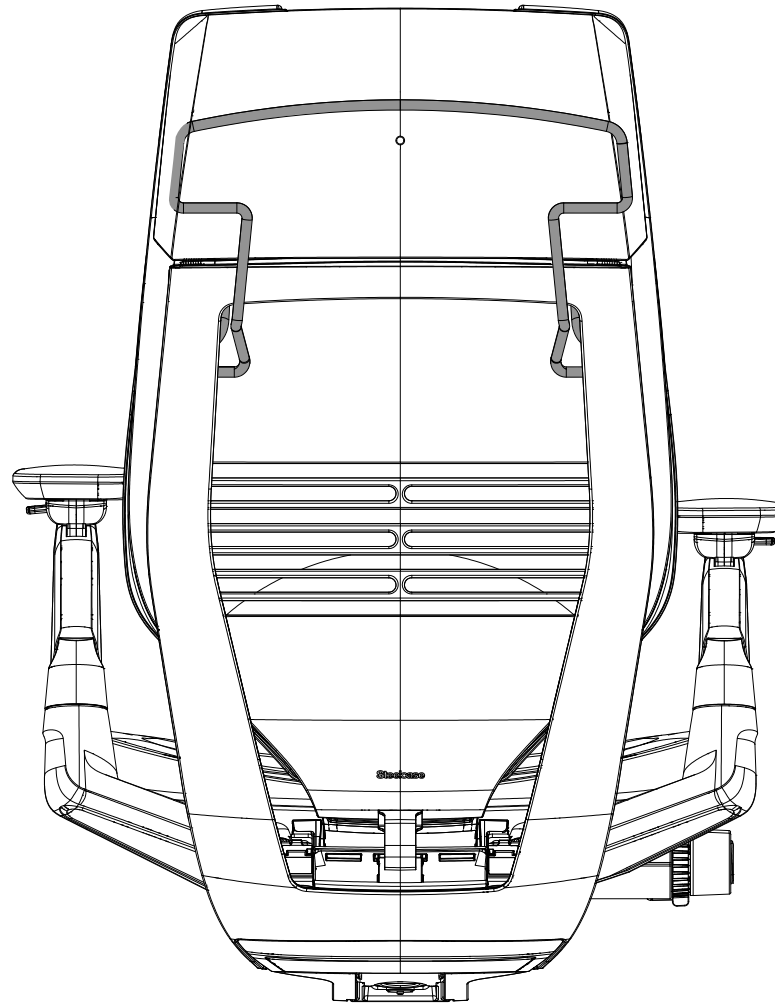

1. To protect the frame, hanger need to be removed together with the rubber cap. Doing that, you will need to pull the hanger and push the end cap at the same time.

NOTE : Repeat step 1-4 on the other side of hanger

