



If you have a problem, question, or request, call
your local dealer, or Steelcase Line 1 at
888.STEELCASE (888.783.3522)
for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico,
and the U.S. Virgin Islands, call: 1.616.247.2500)
Or visit our website: www.steelcase.com

© 2013 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.

1. Rotate seat depth knob clock-wise to extend seat forward.

2. If there is height adjustable lumbar, unhook handles first. Slip fingers between cushion and outer back shell in the center of the back on both sides. Lift cushion up and forward to unhook from top of back.

3. Lay cushion down. Detach two (2) rubber bungees from hooks.

4. To install replacement cushion, attach bungees at the bottom. Pull top of cushion slightly past top of back shell. If chair has lumbar option, attach handles. Hold cushion tight against the back shell and slide down onto hooks. Make sure all hooks are engaged and the cushion and shell look seamless.

