

# Manual of Fan Remote Controller

This unit is mainly for fan and its lighting function. This product has an FCC ID certificate. Adopted frequency: 315MHz. Please turn off the power first, then refer to the manual for installation instruction.

## 1. Setting up the remote

The wireless control is designed to operate both the light and speed of the fan. The remote uses a 23A 12V battery. Remove the remote's back cover and insert the battery. Please make sure the battery is inserted in the right direction or the remote may not function. The installation direction of the battery is shown in the battery identification on the back of the remote control, and the negative pole of the battery is installed towards the spring end. If the keystroke indicator does not light, it means that the battery direction is wrong or the battery has no power.

Connect the ceiling fan wire. Turn on the power switch and long press the "OFF" key for code matching. When the receiver makes a "BEEP" sound, it indicates that the codes are successfully matched.

In case of code matching failure, turn off the power and repeat the above operations.

Remove the battery from the remote if you do not plan to use the remote for a long time.

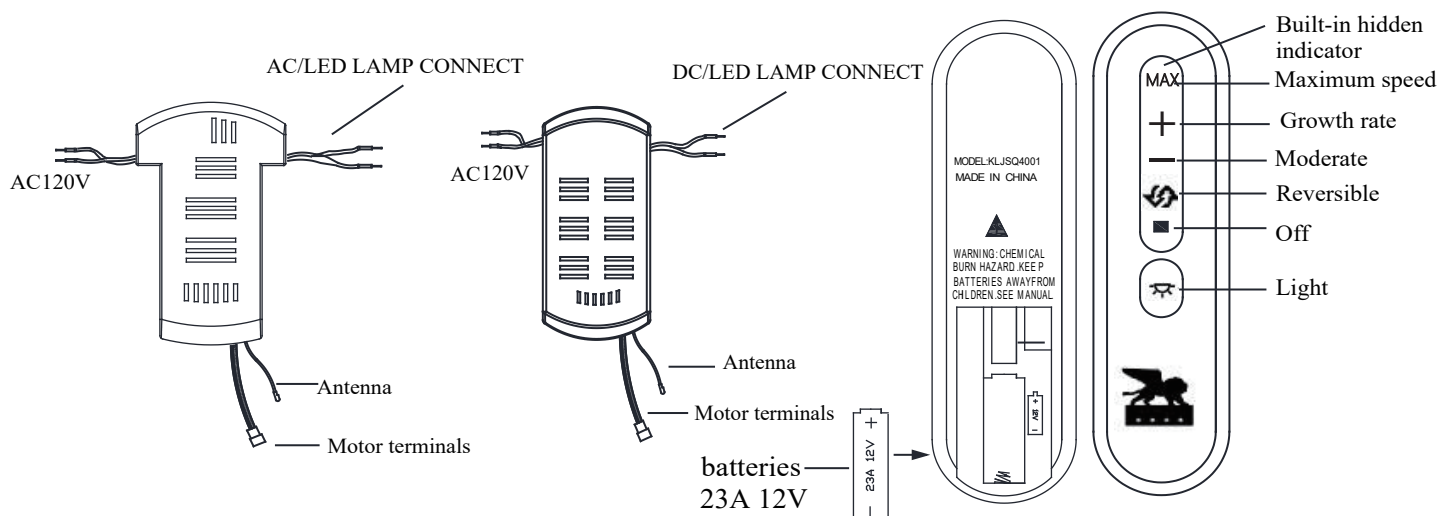


Fig.1 Controller

Fig.3 Remote Front view

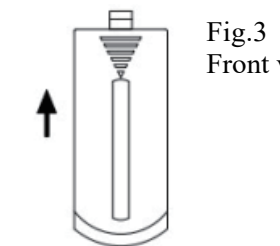


Fig.2 Inserting battery Rear view

## 2. Operating instructions

- A. Turn on power and press (light) key on the remote to turn on the lights. Press the key again to turn off. Press this key and hold to turn the light to the brightest or darkest.



- B. (Two speed buttons) These are the two keys for adjusting fan speed. Press + to increase fan speed. Press - to decrease fan speed.



- C. Press (Reverse) to reverse the fan direction.