Ceiling Canopy

CKCD 1.4




This product is suitable for damp locations.


CAUTION - RISK OF FIRE This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.


Preparing the Canopy

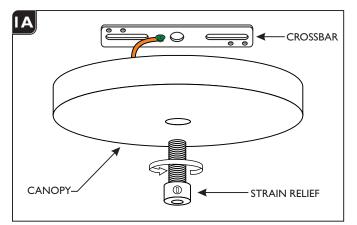

Remove the crossbar from the canopy by completely unscrewing the strain relief.

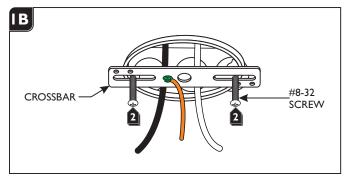

Mount the crossbar assembly to the electrical box with the two provided #8-32 screws.

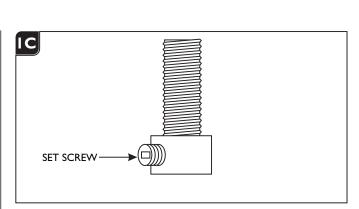

Doosen (Do Not Remove) the set screw on the strain relief.




06

6

060


Install the Fixture (No Suspension Cables)

Note: For canopies with suspension cables, skip section 2 and continue on section 3.

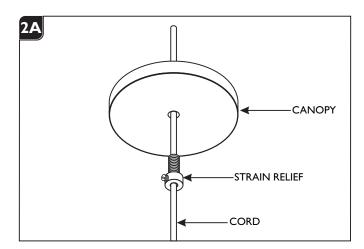

Feed the cord through the primary strain relief and the canopy.

Note: If the fixture has a cord with a cloth cover, taping down the frayed end of the cloth may assist in feeding it through the strain relief.

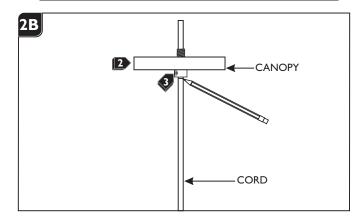


- Adjust the fixture height (from bottom of the fixture shade to top of the canopy) by moving the canopy and strain relief up or down.
- When the desired height is achieved, tighten the set screw on the strain relief.

Mark the cord underneath the strain relief.

I Move on to section 4.


Install the fixture (With Suspension Cables)

NOTE: Make sure to support the fixture while adjusting the aircraft cables. An assistant is recommended to complete the remaining steps.

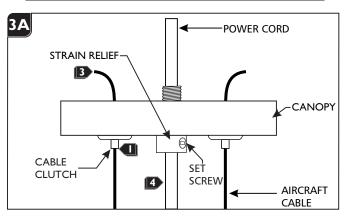

- Feed the aircraft cable(s) through the cable clutch in the canopy.
- Evenly pull the aircraft cable up through the canopy to raise the fixture to the desired length.
- Cut off the excess aircraft cable leaving enough for fine leveling later.
- If necessary loosen the set screw in the strain relief and feed the power cord from the fixture into the canopy port.

Note: If the fixture has a cord with a cloth cover, taping down the frayed end of the cloth may assist in feeding it through the strain relief.

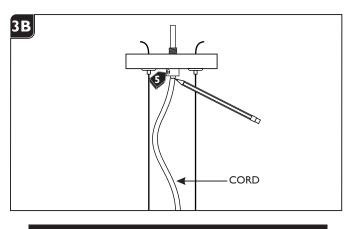



NOTE: The power cord does not support the fixture. For a casual "lazy cord" look, cut the power cord several inches longer that the drop height of the fixture.

Once the desired look is determined, tighten the set screw on the strain relief.


16 Mark the cord underneath the strain relief.

Install the Canopy

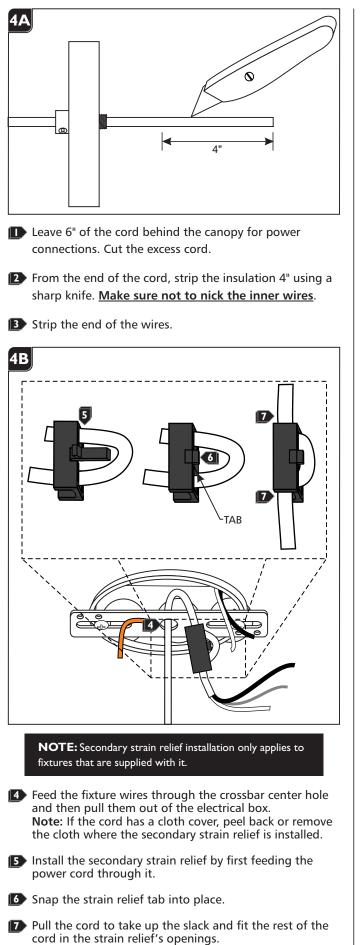

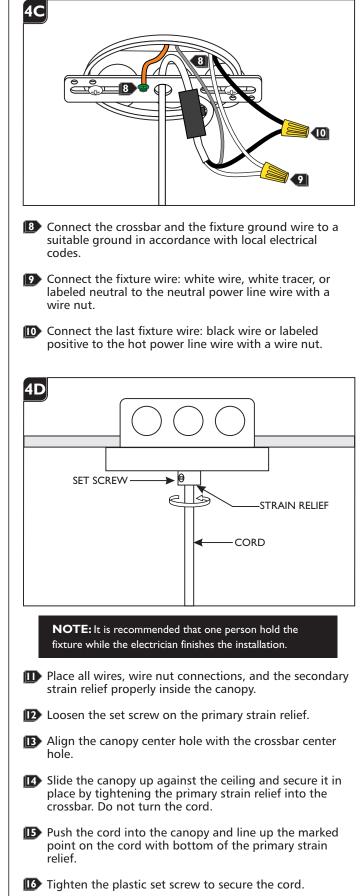

Adjust the Suspension Cables (Optional for Multiple Suspension Cable Canopies)

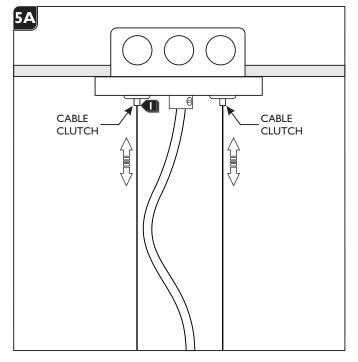

Adjust the aircraft cables until the fixture is level; feed the cable into the cable clutch to raise the fixture and push in on the cable clutch nipple to release the cable and lower the fixture.

SAVETHESE INSTRUCTIONS!



© 2019 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification. A Generation Brands Company