

## Hanea

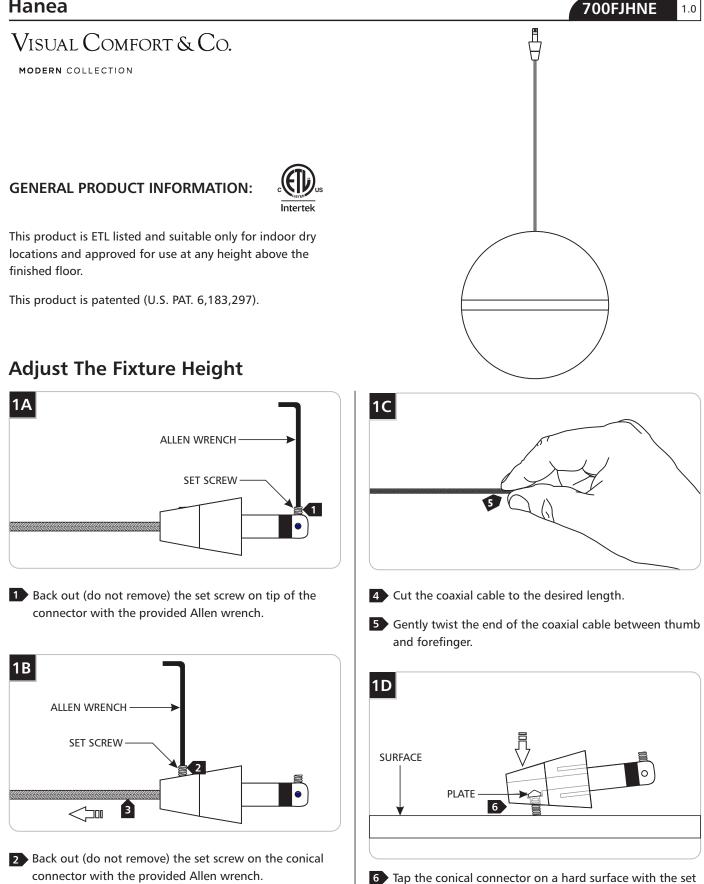


**3** Pull the coaxial cable out.


screw facing down, so the plate inside drops into place.

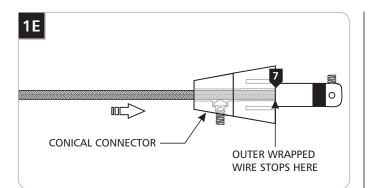


Feed and push the coaxial cable into the conical connector. The coaxial cable will come to a stop point after being inserted 3/4" into the conical connector.

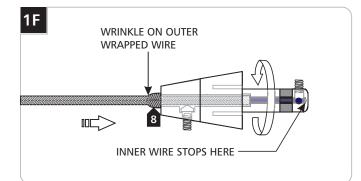


8 Keep pushing the coaxial cable into the connector while rotating the connector to ease feeding the inner wire into the tip of the connector. The outer wrapped wire will start wrinkling while being inserted another 1/2" into the connector.

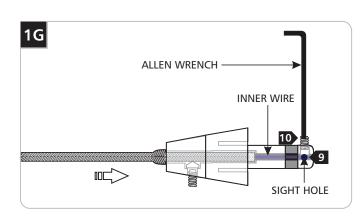

- Dook into the sight hole on the top of the connector to make sure that the inner wire is contacting the end of the connector.
- Hold the coaxial cable in place and tighten the set screw on tip of the connector with the provided Allen wrench. <u>Make sure this set screw connection is tight.</u>

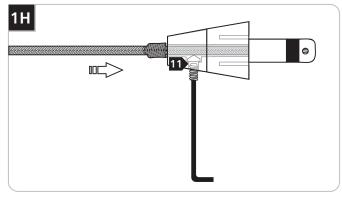


Firmly tighten the set screw on the conical connector.

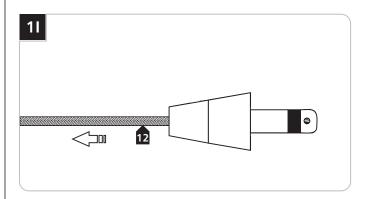

Pull the coaxial cable toward the fixture to smooth the wrinkles.

## **Replacing the Lamp**

**CAUTION:** To reduce the risk of a burn or electric shock during relamping, disconnect the power to the fixture.

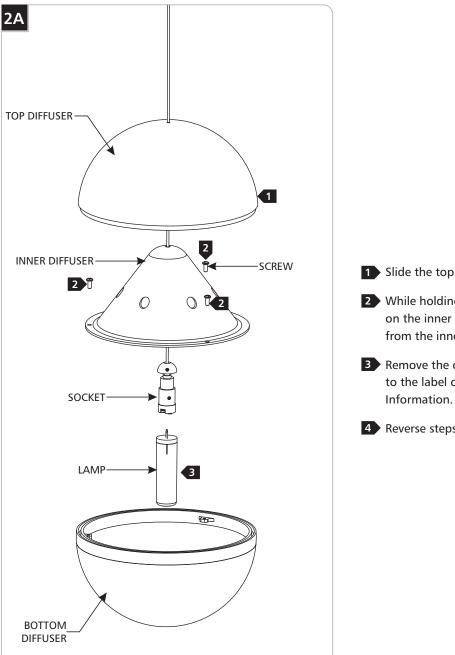

1 Slide the top diffuser up to expose the inner diffuser.

2 While holding the bottom diffuser, remove the screws on the inner diffuser to separate the bottom diffuser from the inner diffuser.

Remove the old lamp and replace with new one. Refer to the label on the socket for Max Wattage Information.

4 Reverse steps 1 and 2 to reassemble the fixture.

## SAVE THESE INSTRUCTIONS!

VISUAL COMFORT & CO.

7400 Linder Ave, Skokie, IL 160077 800.969.3347

## www.visualcomfort.com

©2023 Visual Comfort & Co.. All rights reserved. The Visual Comfort & Co. logo is a registered trademark of Visual Comfort & Co. Visual Comfort & Co. reserves the right to change specifications for product improvements without notification