

MONETA SHORT ACCENT RECHARGEABLE TABLE LAMP

SLTB53327

General Product Information



SAVE THESE INSTRUCTIONS!



INDOOR/OUTDOOR



WET LOCATION SAFE



INTEGRATED LED
NO BULBS REQUIRED



USB RECHARGEABLE



TOUCH DIMMER



PLEASE SEE
visualcomfort.com
FOR PRODUCT
SPECS



BEST PRACTICE:
HANDLE FIXTURE
WITH GLOVES



CLEAN WITH SOFT,
DRY CLOTH ONLY. NO
HARSH CHEMICALS!



Product Warranty



FCC Statement



Avertissement

Safety Information



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.

CAUTION: Ensure that the silicone USB cover/plug is re-installed after charging to keep dust/moisture out of USB plug area.

Battery 3.8V 7000mah, not replaceable.

1) The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

2) Battery disposal should be in compliance with any local regulations that address the disposal of hazardous materials and the following or equivalent: "Do not incinerate."

3) **WARNING:** When using outdoor use portable luminaires, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following:

a) Use only three-wire outdoor extension cords that have three-prong grounding plugs and grounding receptacles that accept the appliance's plug.


b) Ground Fault Circuit Interrupter (GFCI) protection is to be provided on the circuit(s) or outlet(s) to be used for the wet location portable luminaire. Receptacles are available having built-in GFCI protection and are able to be used for this measure of safety.

c) Use only with an extension cord for outdoor use, such as an extension cord of cord type SEW, SEOW, SEOW, SOW, SOOW, STW, STOW, STOW, SJEW, SJEOW, SJEOW, SJW, SJOW, SJOW, SJTW, SJTOW, or SJTOW. READ ALL INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

visualcomfort.com

© 2024 Visual Comfort & Co. All rights reserved.

1

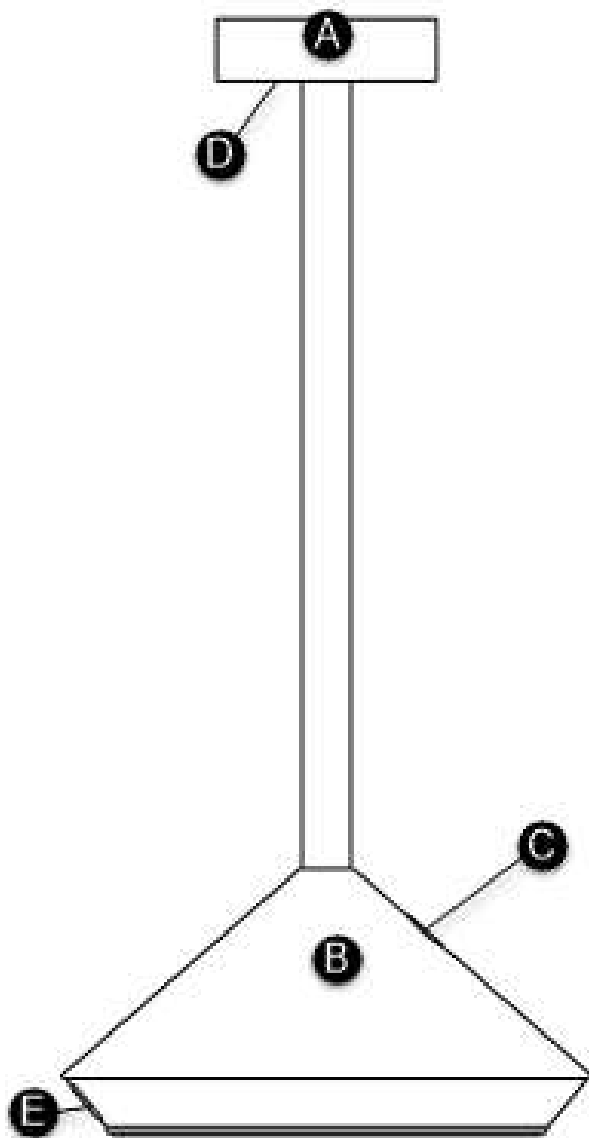

FIXTURE PARTS

- A. Lamp Shade
- B. Lamp Base
- C. Touch Switch
- D. LED (Under Shade)
- E. USB Port
- F. USB Charger
- G. USB Cord



INSTRUCTIONS

1. Carefully remove the lamp from the product packaging.
2. Plug the provided USB cord/plug into a suitable USB charging port to fully charge the fixture, prior to initial use.
3. Use the indicator light located next to the USB-C port on the lamp as a guide.

Note: This fixture takes approximately five hours to fully charge.

- a. **Solid Red:** Requires Charging
 - b. **Green Flashing:** Currently Charging
 - c. **Solid Green:** Fully Charged
4. Once the fixture is fully charged, turn it on.
 5. Use the touch-sensitive switch to turn the lamp on/off and to change the brightness settings.