

UTTERMOST

ASSEMBLY INSTRUCTIONS

21381

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

We suggest a licensed electrician for all fixture installations

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on a clear surface.
2. If needed , assemble the swivel onto the canopy and secure with steel washer, washer & hex nut tightly.
3. Assemble the Stem together using the Nipple as needed, then attach the bottom end of Stem onto the Coupling tightly, then secure the Swivel onto the Stem. adjust wire length needed for install, remove excess.
4. Thread the Mounting screws into the matching holes of the Mounting bar, and tighten with the Hex nut. Thread the Ground screw into the hole of the Mounting bar. Secure the Mounting bar to the outlet box with the Outlet box screws.
5. Make Wire connections with Wire Connector:
 - The smooth wire (w/ marking) from fixture to Black Wire from power source.
 - The ribbed wire (w/o marking) from Fixture to White Wire from power source.
 - Attach the Ground Wire and house ground wire to the Mounting bar with the green Ground screw. Carefully tuck wires back into the Outlet Box.
6. Place the fixture Canopy over the two Mounting screws so they protrude through the holes in the Canopy. Thread the Ball nut onto the Mounting screws and continue turning until the fixture is snug against the ceiling.
7. Put the rubber washer, glass panel (A) or (B), rubber washer, steel panel over the screws in order and secure with ball nuts.
8. Install the light bulb in accordance with the fixture's specifications.
DO NOT EXCEED THE MAXIMUM WATTAGE RATING!
9. Turn on the power at fuse or Circuit Box.

