

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE NO.: 21633 PARTS LIST& HARDWARE LIST:

1	Canopy	1pc	6	Wire Connector	3pcs
2	Universal Bar	1pc	7	Quick Link	2pcs
3	Outlet Box Screw(1-1/8")	2pcs	8	5 Feet Chain	1pc
4	Green Ground Screw	1pc	9	Ring	1pc
5	Mounting Screw(2-3/4")	2pcs	10		

*Please make sure you have all the parts indicated above before you begin assembling this item. We suggest a professional electrician for all lighting fixture installations. Please read wiring instructions before you begin assembling and installing your Ceiling Lamp

WARNING: Before installing,make sure electricity supply is shut off to avoid a possible electric shock.

ASSEMBLY INSTRUCTIONS

1.Take the parts carefully out of the carton,Place them on a flat surface, and make sure the parts will not be damaged.

2.Fasten the Cross bar to the outlet box .Secure the Nipple onto the Canopy with Loop .

3.Adjust chain and wire length as needed, remove excess. Thread Quick Link into Loop on the Canopy, then Quick Link

into Ring on the top of Pendant body. Hand tighten until snug.

4.Pull the wire from the Canopy and through the center hole in the Cross Bar. The power supply wire consists of three wires,one black wire, one white wire and one green ground wire.

5.Connect the wires as shown :

A.Connect the House Ground Wire to the Fixture Ground Wire.

B.Connect the House White Wire to the Fixture Supply Wire (White).

C.Connect the House Black Wire to the Fixture Supply Wire (Black).

D.Wrap each connected wire with Wire Nut and carefully stuff all of the connected wires into the Outlet Box.

7.Install 4*60W,E12 bulbs type-B(Not Included) into the socket of the fixture.

DO NOT EXCEED THE MAXIMUM WATTAGE RATING!

UTTERMOST

ASSEMBLY INSTRUCTIONS

