
## **TOB5030**

## **ASSEMBLY & INSTALLATION GUIDE**

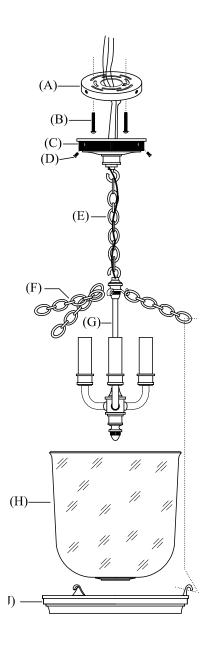

VISUAL COMFORT & CO. Est. 1987

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

## ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- 1. Slide ring (J) on top lip of glass shade (H), raise the glass shade and metal ring, hook side chains (F) to ring (J) to hang glass shade (H), letting the finial on the lamp stem (G) goes through the bottom hole of glass shade (H), hook side chains (F) to lamp stem (G).
- 2. Attach chain (E) to lamp stem (G) with glass shade, feed wires through chain and canopy base (C).
- 3. Attach chain (E) to canopy base (C).
- 4. Attach ground (silver or copper in color) fixture wire to ground wire from ceiling outlet box (usually green or copper in color), and fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape so the end of the connector is sealed. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- Connect the neutral (RIBBED, without any marking) fixture wire to the neutral (usually white) wire from ceiling outlet box. Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape.
- Repeat the procedure with the hot (ROUND, with UL marking on) to hot (usually black) outlet wire. Always make sure that no wire strands are left outside of the connections. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
- 7. Remove back plate (A) from canopy base (C) by unscrewing base
- 8. Attach back plate (A) to ceiling outlet box and secure with mounting screws (B).
- 9. Attach canopy base (C) to affixed back plate (A) and secure with base screws (D).
- 10. Insert light bulbs into sockets (E).