


ASSEMBLY INSTRUCTIONS

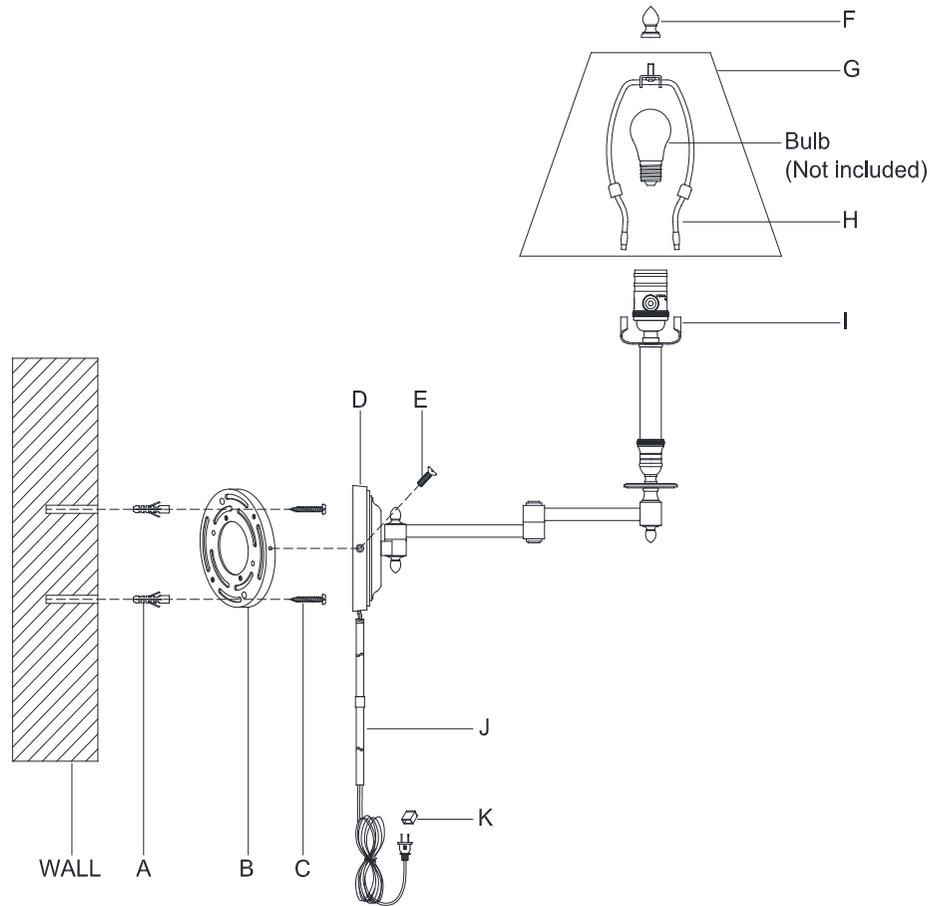

Candlestick Swing Arm

Item # S 2010

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

1. Carefully remove all parts from the box.
2. Remove the mounting plate (B) from fixture body (D) by loosening side screws (E).
3. Drill 2 holes on the wall and make sure the hole distance will match to the mounting plate (B) holes.
4. Knock the anchors (A) into the wall holes.
5. Affix mounting plate (B) onto the wall and secure with mounting screws (C).
6. Attach the fixture body (D) onto mounting plate (B) and secure with side screws (E).
7. Thread the cord cover (J) to the bottom of fixture body (D).
8. Attach the harp (H) to the saddle (I).
9. Place shade (G) to the top of harp (H) and secure with finial (F).
10. Insert bulb (not included) into the socket.
11. Remove protective plug cover (K) from the plug.
12. Plug into a proper electrical outlet and test the fixture.
13. Installation is complete, turn on power at fuse or circuit breaker.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.