


## ASSEMBLY INSTRUCTIONS

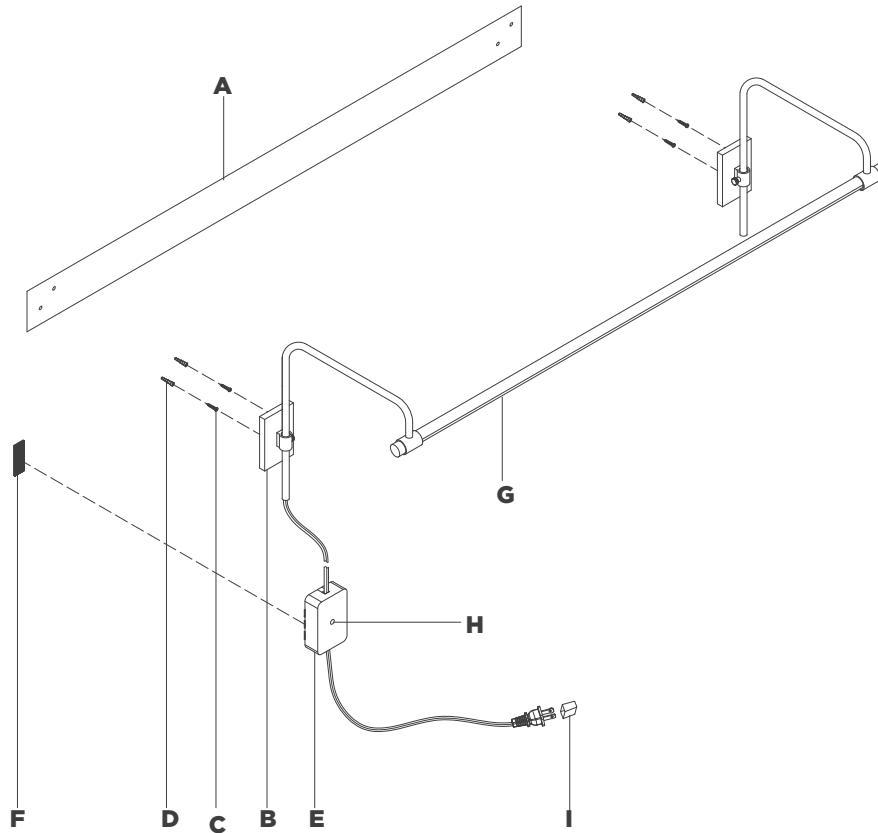

### Kidd 30" Frame Mount Picture Light

Item # TOB2613

#### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

#### TOOLS REQUIRED (NOT INCLUDED):

Pencil

Hammer

Drill

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Using card template **(A)** as a guide, mark anchor positions.
3. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors **(D)** into the holes using a hammer.
4. Secure wood screws **(C)** to anchors **(D)**, leaving 1/8" of exposed thread in order to hang fixture.
5. Hook fixture **(B)** to wood screws **(C)**.
6. Remove backing sheet from velcro **(F)**, then neatly apply to wall.
7. Attach driver **(E)** to velcro **(F)**.
8. Adjust shade **(G)** to desired angle.
9. Remove protective cover **(E)** from plug.
10. Plug into electrical outlet and test the fixture.
11. Test the lamp.

**Dimmer switch operation:** Touch dimmer **(C)** to adjust between high, medium, low and off settings.

**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.