


## ASSEMBLY INSTRUCTIONS

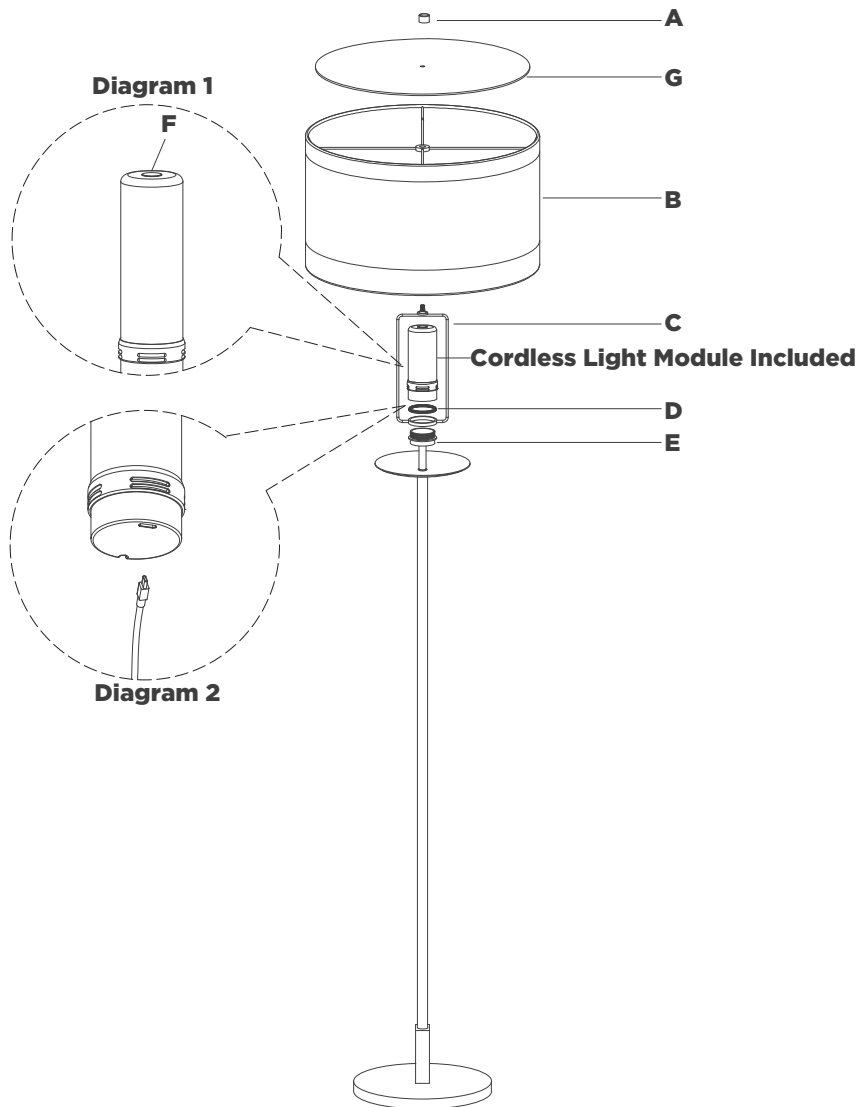

## Walker 58" Cordless Floor Lamp

Item # KS1069

### NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.


1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove threaded ring (D) from cordless module holder (E).
3. Install harp (C) to cordless module holder (E) and secure with threaded ring (D).
4. Remove finial (A) from harp (C).
5. Remove shade (B) from packaging, then install shade (B) and diffuser (G) to harp (C) using finial (A).
6. Place cordless light module into cordless module holder (E).
7. For best results fully charge battery before use.
8. Test the lamp.

**NOTE:** If shade has additional packaging, carefully cut from interior of shade to avoid damage.

**Dimmer switch operation:** Touch dimmer (F) to adjust between high, medium, low and off settings (See diagram 1).

**Charging Instructions:** Remove cordless light module from lamp and charge using provided USB-C cord (See diagram 2).

**NOTE:** For convenience, USB-C to USB-A adapter is included.

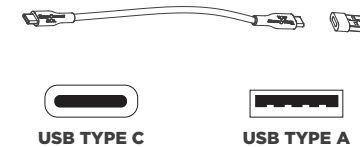

**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

VISUAL COMFORT & Co.

