


ASSEMBLY INSTRUCTIONS

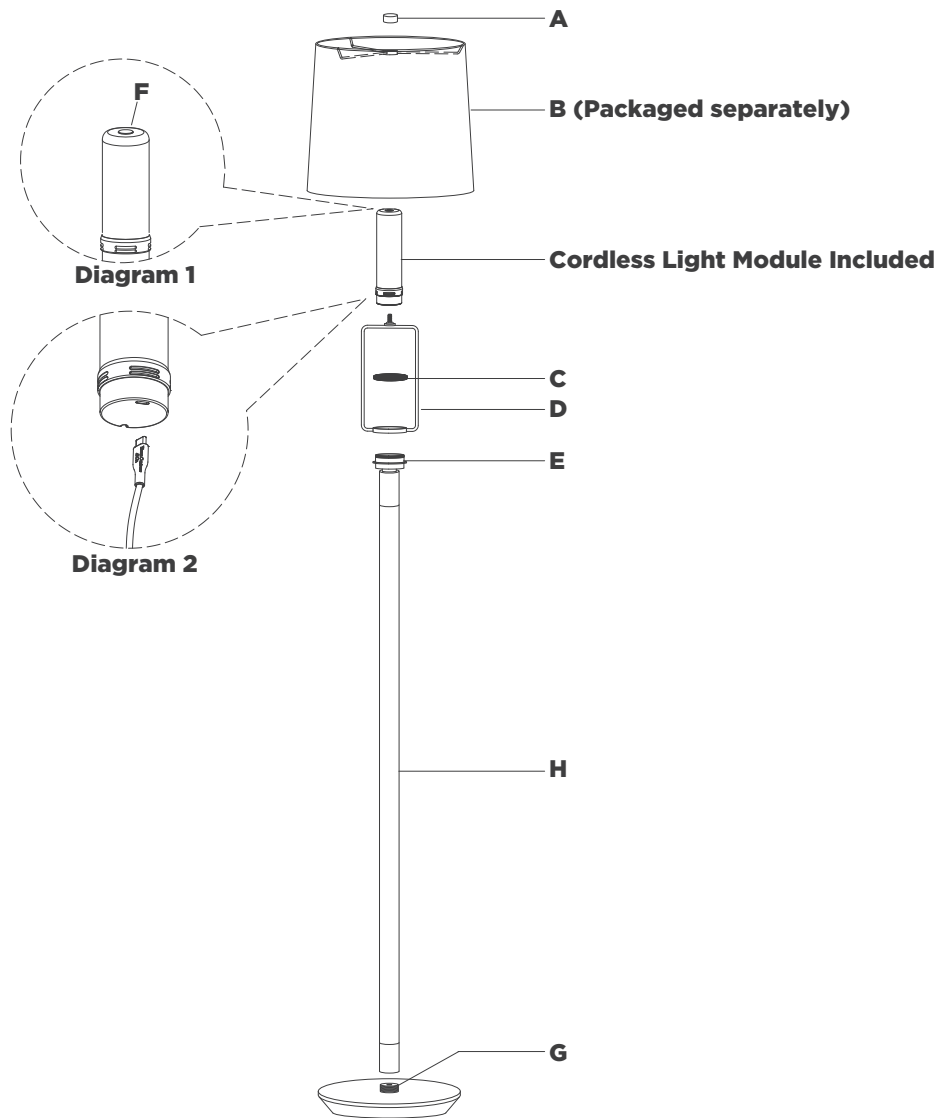

Riga 53" Cordless Floor Lamp

Item # ARN1017

NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Thread lamp body **(H)** to fixture base **(G)**.
3. Remove socket ring **(C)** from cordless module holder **(E)**.
4. Install harp **(D)** to cordless module holder **(E)** and secure with socket ring **(C)**.
5. Remove finial **(A)** from harp **(D)**.
6. Remove shade **(B)** from packaging and install to harp **(D)** and secure with finial **(A)**.

NOTE: If shade has additional packaging, carefully cut from interior of shade to avoid damages.

7. Place cordless light module into cordless module holder **(E)**.

8. For best results fully charge battery before use.

NOTE: 10W minimum USB power source recommended.

9. Test the lamp.

Dimmer switch operation: Touch dimmer **(F)** to adjust between high, medium, low and off settings (see diagram 1).

Charging Instructions: Remove cordless light module from lamp and charge using provided USB-C cord (see diagram 2).

NOTE: For convenience, USB-C to USB-A adapter is included.



USB TYPE C



USB TYPE A

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

VISUAL COMFORT & CO.

