 
 
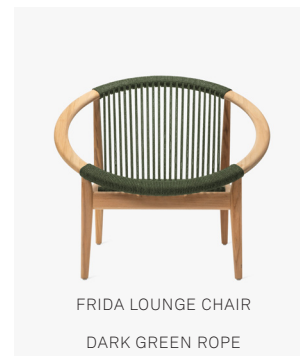 
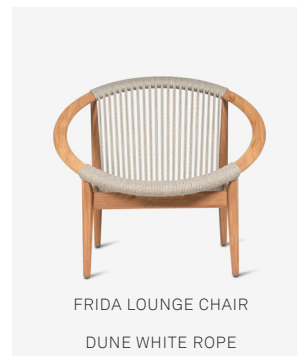 
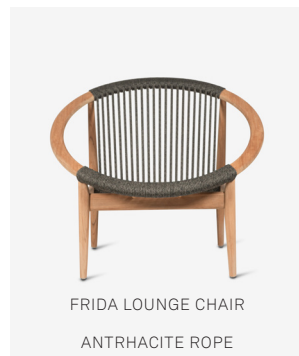 
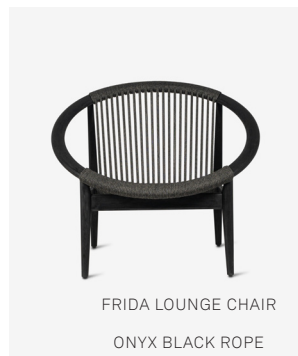 
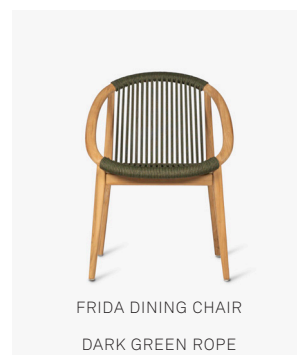 


# VINCENT SHEPPARD

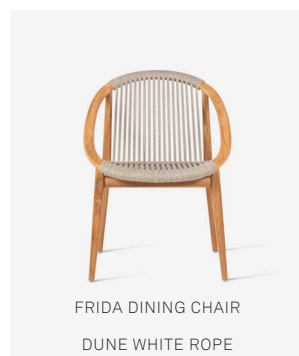

## FRIDA COLLECTION

PRODUCT DATA SHEET

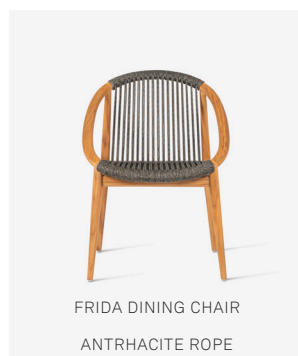

## FRIDA

<b>frame</b>	teak
<b>frame finish</b>	untreated teak / brushed black stained
<b>rope</b>	polypropylene rope
<b>rope colour</b>	anthracite / onyx black / dune white / dark green
<b>glides</b>	white nylon / black nylon

## DIMENSIONS

	<b>l x d x h</b>	<b>seat height</b>	<b>seat depth</b>
<b>dining chair</b>	61 x 60 x 86 cm	45 cm	45 cm
<b>lounge chair</b>	91 x 81 x 80 cm	39 cm	46 cm

## CUSHION

<b>foam</b>	2 cm polyether foam
<b>removable</b>	dining chair
<b>non-removable</b>	lounge chair
<b>fabrics</b>	see fabric data sheet for more info

## PROTECTIVE COVERS

 
 
We recommend using protective covers only on **dry teak furniture**.

<b>dining chair</b>	PC001
<b>lounge chair</b>	PC008

## CERTIFICATION

<b>EN 161392013AC 2013</b>	seat strength test non-domestic
----------------------------	---------------------------------

## ROPE COLOURS

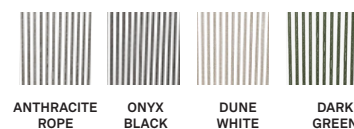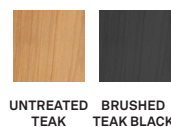

## FRIDA VARIANTS

FRIDA	ITEM CODE	FINISH	PACKAGE DIMENSION (cm/inch)		CBM (m³/ft³)		WEIGHT (kg/lb)	
dc untreated teak	GD250W002S026	anthracite rope	89 x 66 x 64	35 x 26 x 25	0,38	13.42	8,9	19.62
dc untreated teak	GD250W002S045	dune white rope	89 x 66 x 64	35 x 26 x 25	0,38	13.42	8,9	19.62
dc untreated teak	GD250W002S050	dark green rope	89 x 66 x 64	35 x 26 x 25	0,38	13.42	8,9	19.62
lc brushed teak black	GC250W006S034	onyx black rope	83 x 93 x 83	33.5 x 25.2 x 24.5	0,64	20	12,26	27.03
lc untreated teak	GC250W002S026	anthracite rope	83 x 93 x 83	33.5 x 25.2 x 24.5	0,64	20	12,26	27.03
lc untreated teak	GC250W002S045	dune white rope	83 x 93 x 83	33.5 x 25.2 x 24.5	0,64	20	12,26	27.03
lc untreated teak	GC250W002S050	dark green rope	83 x 93 x 83	33.5 x 25.2 x 24.5	0,64	20	12,26	27.03

## MAINTENANCE AND CARE

## TEAK

**Daily care**

Use a moist towel or sponge with a mild solution of water and natural, non-aggressive soap.

**Stubborn stains**

If your furniture is stained, consider one of the following options:

- Grease spots have appeared on the furniture**  
 This is a natural feature of the wood and grease spots should gradually disappear after being exposed to sunlight. However, should you wish to remove these blemishes, we recommend using a degreasing agent and gentle scrubbing with a brush. Rinse off with clean water.
- The furniture has developed mildew spots or black blemishes**  
 This is usually the result of rainwater or sometimes sap dripping from the leaves of trees onto the wood leaving dark marks and spots. Ideally, we recommend the furniture is not placed under trees. However, these marks can be removed by lightly sanding with fine sandpaper.
- You spilled wine or something else leaving persistent stains**  
 For wine and other stains, we recommend using a weak solution of bleach and water combined with a dishwashing agent to wipe the area clean.

**POLYPROPYLENE ROPE**

Another material used for our all-weather furniture, is rope. Our rope is made of polypropylene fibres or acrylic. Just like our other synthetic materials, the rope is designed to withstand any weather condition and can be left outside all year long.

For maintaining your rope furniture, we recommend using the fabric and upholstery protector to give optimal stain resistance.

To clean spots on the rope, we suggest applying a mist of soapy water with a spray bottle and then work the solution into the rope with a soft cloth by patting or rubbing lightly. Rinse the solution thoroughly and then blot excess moisture from the rope using a soft cloth and allow air-drying.

Never use a high-pressure hose on acrylic rope.