 


# VINCENT SHEPPARD



## Fika collection

Product data sheet

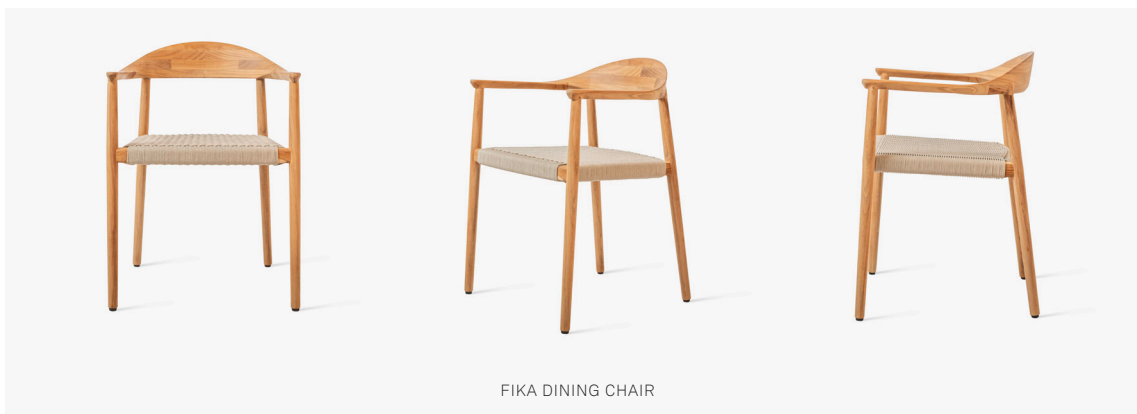

## FIKA

frame	teak
frame finish	untreated
rope	polypropylene rope
rope colour	flax S049
glides	black nylon

## CUSHION

foam	2 cm quickdry foam
removable	yes
fabrics	see <a href="#">fabric data sheet</a> for more info

## PROTECTIVE COVER

dining chair (1 x)	PC075
--------------------	-------

## IN THIS COLLECTION

FIKA	ITEM CODE	FINISH	PACKAGE DIMENSION (cm/inch)	CBM (m³/ft³)	GROSS WEIGHT (kg/lb)
dining chair	GD029W002S049	untreated teak rope flax	63 x 59 x 83 * 25 x 23 x 33 *	0,31 * 10,9 *	15,16 * 33,44 *

\* packed per 2

## MAINTENANCE AND CARE

### TEAK

#### Daily care

Use a moist towel or sponge with a mild solution of water and natural, non-aggressive soap.

#### Stubborn stains

If your furniture is stained, consider one of the following options:

- Grease spots have appeared on the furniture  
This is a natural feature of the wood and grease spots should gradually disappear after being exposed to sunlight. However, should you wish to remove these blemishes, we recommend using a degreasing agent and gentle scrubbing with a brush. Rinse off with clean water.
- The furniture has developed mildew spots or black blemishes  
This is usually the result of rainwater or sometimes sap dripping from the leaves of trees onto the wood leaving dark marks and spots. Ideally, we recommend the furniture is not placed under trees. However, these marks can be removed by lightly sanding with fine sandpaper.
- You spilled wine or something else leaving persistent stains  
For wine and other stains, we recommend using a weak solution of bleach and water combined with a dishwashing agent to wipe the area clean.

## COLOURS

### FRAME



 
Untreated  
teak  
W002

### ROPE



Flax  
S049

## DIMENSIONS

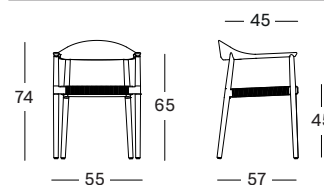

### POLYPROPYLENE ROPE

Another material used for our all-weather furniture, is rope. Our rope is made of polypropylene fibres or acrylic. Just like our other synthetic materials, the rope is designed to withstand any weather condition and can be left outside all year long.

For maintaining your rope furniture, we recommend using a fabric and upholstery protector to give optimal stain resistance.

To clean spots on the rope, we suggest applying a mist of soapy water with a spray bottle and then work the solution into the rope with a soft cloth by patting or rubbing lightly. Rinse the solution thoroughly and then blot excess moisture from the rope using a soft cloth and allow air-drying.

Never use a high-pressure hose on acrylic rope.