INSTALLATION INSTRUCTION Silo X20 LED Track Luminaires

H/L/J-2020

WAC LIGHTING

Responsible Lighting®

WARNING

IMPORTANT: NEVER attempt any work without shutting off the electricity.

- Read all instructions before installing.
- System is intended for installation by a qualified electrician in accordance with the National Electrical Code and local regulations.
- Go to the main fuse box, or circuit breaker. Place the main power switch in the "OFF" position and unscrew the fuse(s) or
 - switch "OFF" the circuit breaker switch(es) that control the power to the fixture or room that you are working on. Place the wall switch in the "OFF" position.

AVERTISSEMENT

IMPORTANT : Coupez l'électricité avant TOUTE manipulation.

- Lisez toutes les instructions avant d'installer.
- Système est destiné à être installé par un électricien qualifié en conformité avec le code national de l'électricité et les règlements locaux.
- Accédez au panneau central de disjoncteurs ou de fusibles de votre demeure et placez l'interrupteur principal en position d'arrêt (« OFF »).
- Placez l'interrupteur mural en position d'arrêt (« OFF »).

Overview:

Fixtures are designed for use on WAC Lighting's track systems. Dimmable with compatible electronic low voltage (ELV) dimmer.

| LED TRACK LUMINAIRE | TRACK SYSTEM |
|---------------------|--------------------|
| H-2020 Series | 120V H Track |
| L-2020 Series | 120V L Track |
| J-2020 Series | 120V J or J2 Track |



Note: All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken. Failure to follow this instruction could invalidate the UL/CUL listing of this fixture.

waclighting.com Phone (800) 526.2588 Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050 **Central Distribution Center** 1600 Distribution Ct Lithia Springs, GA 30122 Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760

INSTALLATION INSTRUCTION Silo X20 LED Track Luminaires

WAC LIGHTING Responsible Lighting®

H/L/J-2020

Fixture installation for H/L/J Track: (Fig.1)

- The track has a groove running its length to indicate polarity and the locking tab has an arrow indicating locking direction. 1.
- Insert adapter into track slot. The arrow should point away from the grooved side of the track. 2.
- Push up and rotate the adapter into the lock position. 3.
- Reverse procedure to remove. The fixture may be positioned anywhere along the track. 4.
- Fig.1



FIXTURE POSITIONING: (Fig.2)

Power on fixture, rotate the luminaire's body horizontally or vertically to aim it properly.

The fixture can rotate ±90° vertically and 355 °horizontally.

Fig.2



waclighting.com Phone (800) 526.2588 (800) 526.2585 Fax

Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050

Central Distribution Center 1600 Distribution Ct Lithia Springs, GA 30122

Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760

INSTALLATION INSTRUCTION Silo X20 LED Track Luminaires H/L/J-2020

WAC LIGHTING Responsible Lighting®

Fig.3

BEAM ANGLE ADJUSTMENT : (Fig.3)

- 1. Hold fixture body with one hand and front cap with another.
- Grip the front cap with two fingers and rotate it gently clockwise or counter clockwise until desired beam angle is achieved. 2.
- Cease rotation when you feel resistance as beam angle is reaching its minimum or maximum 3.



ACCESSORIES:

- With fixture powered off and front cap facing toward you, rotate the front cap clockwise just passed the position you feel a "click" (Fig. 4) 1.
- Gently, while holding fixture body secure, rock front cap assembly back and forth while pulling it away from fixture body to remove 2. front cap assembly (Fig. 5)



waclighting.com Phone (800) 526.2588 (800) 526.2585 Fax

Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050

Central Distribution Center 1600 Distribution Ct Lithia Springs, GA 30122

Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760

ACCESSORIES:

3. Use a flat-tip-screwdriver to remove the accessory holder by rotating it counter clockwise. (Fig. 6)

Fig.6



4. Fixture accommodates one lens and one glare control accessory. Refer to spec sheet for list of compatible accessories. Install accessories between the front cap and accessory holder. Tighten accessory holder after accessories are installed. (**Fig.7**)

Fig.7



waclighting.com Phone (800) 526.2588 Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050 **Central Distribution Center** 1600 Distribution Ct Lithia Springs, GA 30122 Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760

INSTALLATION INSTRUCTION Silo X20 LED Track Luminaires H/L/J-2020

WAC LIGHTING Responsible Lighting®

5. Ensure internal fixture lens is still at the top position, and lens holder slots align with fixture body slots.Align the front cap tabs with the fixture body slots and insert the front cap assembly back into the fixture.Once fully inserted, rotate the front cap assembly counter clockwise passed the "click" and to the desired beam angle. (Fig. 8)

Fig.8



waclighting.com Phone (800) 526.2588 Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050 **Central Distribution Center** 1600 Distribution Ct Lithia Springs, GA 30122 Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760