WAC LIGHTING

R3CRR-16-WD, R3CSR-16-WD, R3CRRL-16-WD, R3CSRL-16-WD

#### SAFETY INSTRUCTION

IMPORTANT: NEVER attempt any work without shutting off the electricity.

- Read all instructions before installing.
- System is intended for installation by a qualified electrician in accordance with the National Electrical Code and local regulations.
- Go to the main fuse box, or circuit breaker. Place the main power switch in the "OFF" position and unscrew the fuse(s) or switch
  - "OFF" the circuit breaker switch(es) that control the power to the fixture or room that you are working on.
  - Place the wall switch in the "OFF" position.

## AVERTISSEMENT

IMPORTANT : Coupez l'électricité avant TOUTE manipulation.

- Lisez toutes les instructions avant d'installer.
- Système est destiné à être installé par un électricien qualifié en conformité avec le code national de l'électricité et les règlements locaux.
- Accédez au panneau central de disjoncteurs ou de fusibles de votre demeure et placez l'interrupteur principal en position d'arrêt (« OFF »).
- Placez l'interrupteur mural en position d'arrêt (« OFF »).

#### CAUTION:

All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken. Failure to follow this instruction could invalidate the UL/cUL listing of this fixture.

#### **OVERVIEW:**

Housing is remodel Non-IC. Housing requires a trim for finished look. Refer to specification sheets for compatible trim options.

### **INSTALLATION REQUIREMENT**

Ceiling Thick- ness	Minimum Required Plenum Height	
	Trim	Trimless
1⁄2″	4″	6″
1″	3½″	5½″





**OVERALL HOUSING DIMENSION** 



SPECIFICATIONS		
Input:	120-277V, 50/60HZ	
Installation:	Non-IC	
Dimming:	Triac / ELV / 0 -10V	

waclighting.com Phone (800) 526.2588 Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050 **Central Distribution Center** 1600 Distribution Ct Lithia Springs, GA 30122 Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760

WAC LIGHTING

R3CRR-16-WD, R3CSR-16-WD, R3CRRL-16-WD, R3CSRL-16-WD

### HOUSING INSTALLATION:

FIG. 1



1. At the point of installation, cut a 3 13/16" round hole for a round trim/trimless or a 3 13/16" X 3 13/16" square hole for a square trim/trimless (See **FIG. 1**)



- Pull building supply wires through ceiling cutout and open fixture junction box door (See FIG. 2).
  Remove desired housing knockout and feed building wires into housing using appropriate connector.
- Remove spring latched fixture junction box door and connect fixture wires to building wires: Insert each supply wire into appropriate junction box wire connector. This fixture features electronic low voltage (ELV) or TRIAC or 0-10V dimming capabilities (See FIG. 3).

To utilize ELV or TRIAC, wire black (line hot), white (line neutral) and green(ground) in accordance to dimmer specifications. To utilize 0-10V dimming, wire purple (dim+), gray (dim-), black (line hot), white (line neutral) and green (ground) in accordance to dimmer specifications.

When not using a dimmer, connect black fixture wire to hot, white fixture wire to neutral and green fixture wire to ground. Leave all other wires capped individually.



waclighting.com Phone (800) 526.2588 Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050 **Central Distribution Center** 1600 Distribution Ct Lithia Springs, GA 30122 Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760

FIG. 4

4. Place all wiring and connectors back in junction box and replace the junction box's cover (See **FIG. 4**)





5. Guide junction box through the cut hole and secure appropriately using either internal mounting slots or external key hole (See **FIG. 5**).

WAC Lighting retains the right to modify the design of our products at any time as part of the company's continuous improvement program. FEB. 2021

WAC LIGHTING

R3CRR-16-WD, R3CSR-16-WD, R3CRRL-16-WD, R3CSRL-16-WD

6. Prior to installing the light engine into housing, adjust fixture to desired beam angle. Light engine comes factory installed with narrow flood optic. To adjust to flood, add "F" optical film. Films install behind optical holder and in front of lens, the glossy side facing outward. (See Fig. 5A).





waclighting.com Phone (800) 526.2588 Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050

**Central Distribution Center** 1600 Distribution Ct Lithia Springs, GA 30122

WAC LIGHTING

R3CRR-16-WD, R3CSR-16-WD, R3CRRL-16-WD, R3CSRL-16-WD

### FOR FLAGED INSTALLATION



- FIG. 8
- Raise the module to ceiling and connect power connector. Secure cap on top of heat sink by locking wing nut (See FIG.6 & 7).



### FIG. 7



UNLOCK



LOCK





3. Refer to installation instructions for appropriate trim to complete the installation (See **FIG. 9 & 10**).

waclighting.com Phone (800) 526.2588 Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050 **Central Distribution Center** 1600 Distribution Ct Lithia Springs, GA 30122

FIG.9

Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760

CUL US

## INSTALLATION INSTRUCTIONS

# **Ocularc 3.5 Dim-to-Warm Remodel**

WAC LIGHTING

R3CRR-16-WD, R3CSR-16-WD, R3CRRL-16-WD, R3CSRL-16-WD

### FOR TRIMLESS INSTALLATION

#### FIG. 11



1. Insert upper frame through ceiling opening. Angling maybe required (See **FIG. 11**)



3. With upper frame and invisible trim frame flush with both ceiling surfaces, hand bend the alignment bars parallel to ceiling (See **FIG. 13**).

#### FIG. 12

FIG. 14



2. Raise invisible trim frame to ceiling cut out and insert alignment bars into upper frame alignment slots (See **FIG. 12**).



4. Raise the module to ceiling and connect power connector. Secure cap on top of heat sink by locking wing nut (See **FIG. 14**).

waclighting.com Phone (800) 526.2588 Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050 **Central Distribution Center** 1600 Distribution Ct Lithia Springs, GA 30122 Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760

WAC LIGHTING

R3CRR-16-WD, R3CSR-16-WD, R3CRRL-16-WD, R3CSRL-16-WD

### FOR TRIMLESS INSTALLATION (CON'T)

### FIG. 15



5. Insert plaster shield inside trim opening. Apply plaster or spackle over invisible trim frame and sand surface dry for finished look (See **FIG. 15**).



- 6. Remove the plaster shield when finishing is complete (See FIG. 16).
- 7. Refer to installation instructions for appropriate trim to complete the installation.

waclighting.com Phone (800) 526.2588 Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050

**Central Distribution Center** 1600 Distribution Ct Lithia Springs, GA 30122 Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760