

INSTALLATION INSTRUCTIONS

Liselle Rechargeable LED Picture Light

PIC-2-14/PIC-2-24

ALDER & ORE

CAUTION: To prevent electrical shock, ensure electricity has been turned off at the circuit breaker before beginning.

- Read all instructions before installing.
- System is intended for installation by a licensed electrician in accordance with the National Electrical Code (NEC) and local regulations.
- When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the base only.
- Retain installation instructions for future maintenance reference.

WARNING: All parts must be used as indicated in these instructions. This product is designed for use only with the supplied parts and/or accessories designated for use by Lumens. Substitution of parts or accessories not designated for use with this product by Lumens could result in personal injury or property damage, and will void the warranty. Contact an authorized dealer or the manufacturer if any parts are damaged or missing.

MAINTENANCE NOTE: Coastal conditions may cause mineral and residue build-up on the fixture. We recommend that customers in coastal areas clean all external surfaces of the fixture once every two weeks with a wet cloth.

MISE EN GARDE: Pour éviter tout choc électrique, assurez-vous que le disjoncteur soit mis hors tension avant de commencer.

- Lisez toutes les instructions avant l'installation.
- Le système doit être installé par un électricien licencié conformément au code national de l'électricité (NEC), et également aux règlements locaux.
- Lors de la manipulation du luminaire, n'appuyez pas sur les LED. Tenez-le uniquement par la base.

ATTENTION: Toutes les pièces doivent être utilisées comme indiqué dans ces instructions. Ce produit est conçu pour être utilisé seulement avec les pièces et/ou accessoires fournis pour être utilisés avec les produits Lumens. Remplacer des pièces ou accessoires non conçus pour ce produit Lumens pourrait causer des dommages corporels ou matériels et pourrait également causer l'annulation de la garantie. Veuillez contacter un revendeur autorisé ou le fabricant si des pièces manquent ou sont endommagées.

NOTE D'ENTRETIEN: Les conditions côtières peut causer une accumulation de minéraux et de résidus sur le luminaire. Nous recommandons aux clients qui résident dans les zones côtières de nettoyer toutes les surfaces externes du luminaire une fois toutes les deux semaines avec un chiffon humide.

HARDWARE

A



Mounting Screw
Qty:1 Extra

B




Anchor Screw
Qty:2pcs+1 Extra

C



Plastic Anchor
Qty:2pcs+1 Extra

Fig. 1

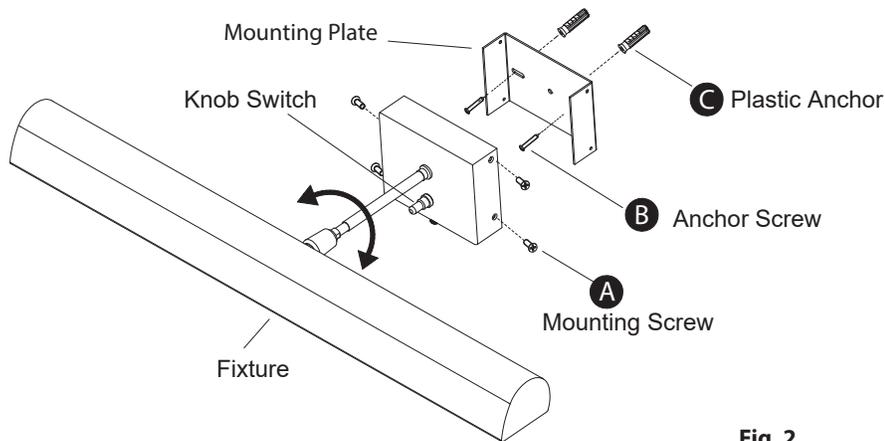

Back Plate Dimensions


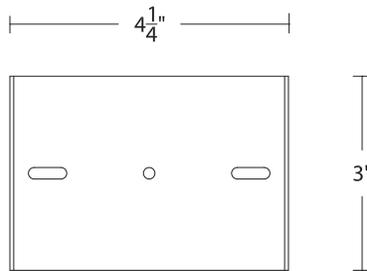


Fig. 2

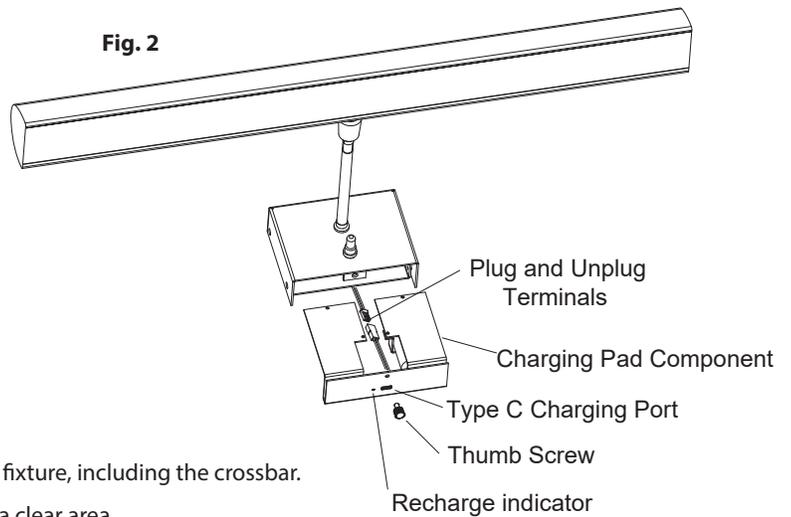

PREPARATION

1. Shut off the power at the circuit breaker and remove existing fixture, including the crossbar.
2. Carefully unpack your new fixture and lay out all the parts on a clear area.
 Be careful not to lose any small parts necessary for installation.

MOUNTING THE FIXTURE ON SWITCH BOX (Fig. 1)

3. Remove the mounting screws (A) from the fixture.
4. First, drill holes in the ceiling aligned with the key holes located in the back plate, insert the plastic anchors (C).
 Second, fasten the mounting plate to the wall using anchor screws (B).

CONNECTING THE WIRES (Fig. 1/2)

5. Secure the fixture to the mounting back plate using the mounting screws (A).
6. This lamp comes with a knob switch that can be turned on and off by rotating clockwise,
7. This lamp is powered by a rechargeable battery and can be charged through the Tybe C charging port. It is necessary to ensure that the voltage of the charger is 5V 2A input voltage. When the charge indicator shows green, it means full.
8. Loosen the thumb screw, remove the male and female plug, you can take off the battery module to charge.

The fixture can be adjusted by adjusting handle to adjust the rotation angle of the lamp head