


462 Leap® Leg Angle Front Strap for Customer Service (For chairs manufactured prior to July 18, 2005)

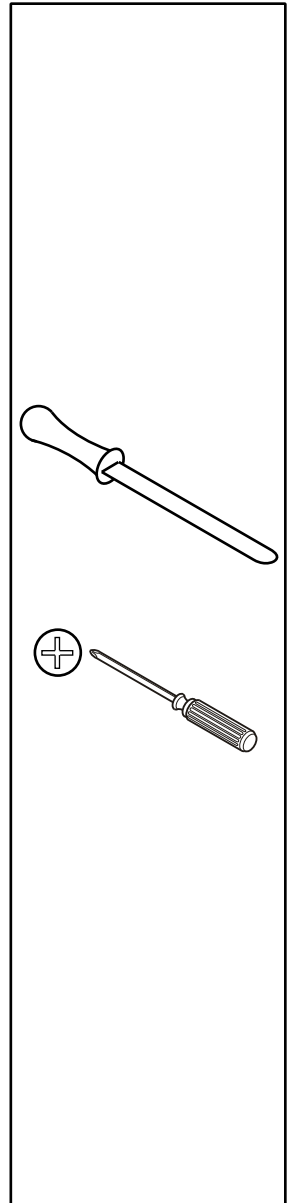

If you have a problem, question, or request, call
your local dealer, or Steelcase Line 1 at
888.STEELCASE (888.783.3522)
for immediate action by people who want to help you.



(Outside the U.S.A., Canada, Mexico, Puerto Rico,
and the U.S. Virgin Islands, call: 1.616.247.2500)

Or visit our website: www.steelcase.com



© 2004 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.

1. Slide seat fully forward while holding side lever.

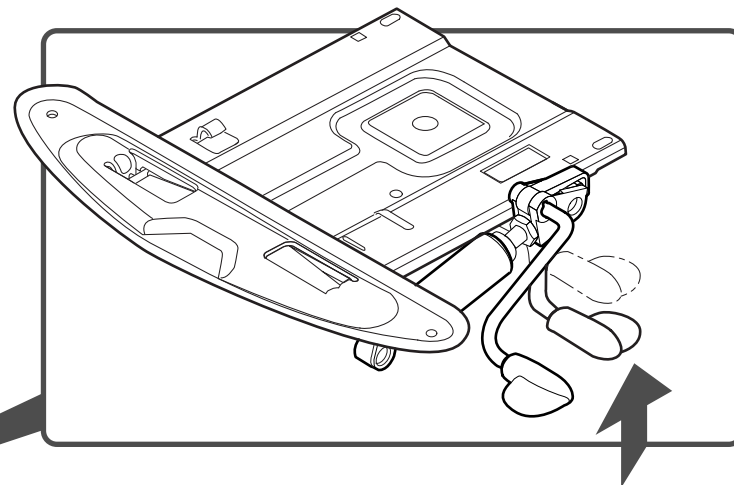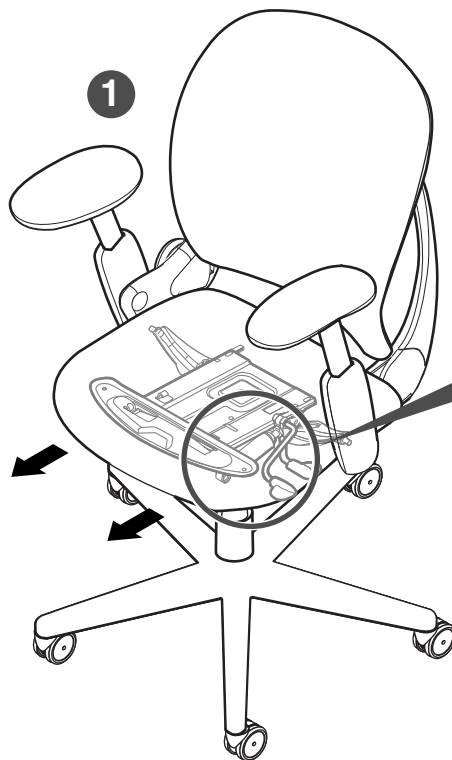

2. Disengage quick release located on the left hand side of the chair between plates. Slide seat forward and off.

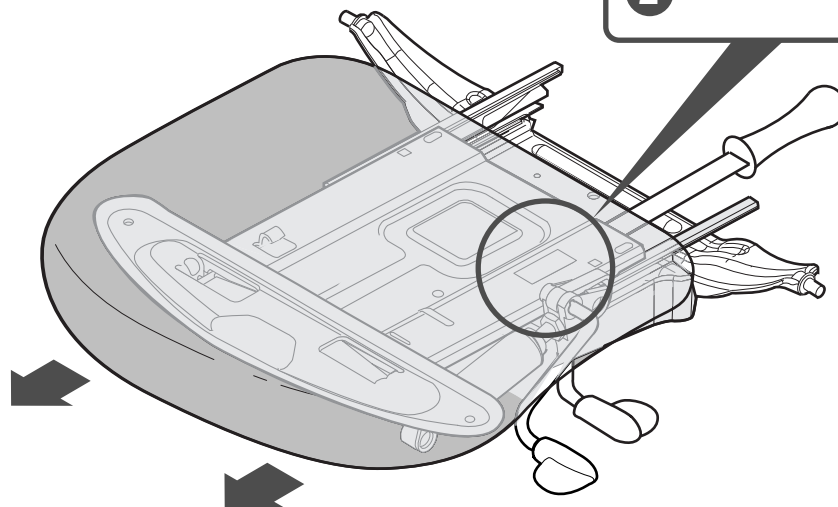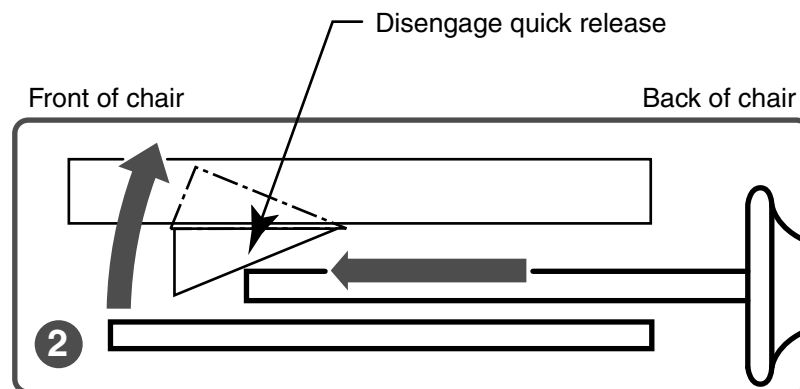

3. Remove (11) shell screws and outer seat shell.

4. Remove leg angle cylinder cover.

5. Remove (4) screws and front seat panel.

6. Lift front of seat plate assembly and remove leg angle front strap assembly.

7. Remove upper bail support bearing from old strap and install it on the new one.

8. Make sure the lower bail bearing is still wrapped around the wire bail. Replace the front strap by sliding it over the lower bail bearing and installing it under the front seat shell tabs. Make sure the rear of the seat plate is also engaged under the rear seat shell tabs.

9. Reassemble chair by doing steps 1-5 in reverse order.

