


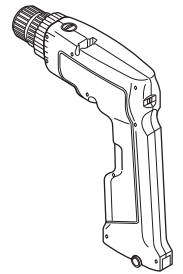


# 464 Leap® WorkLounge Lumbar Resistance Knob Replacement (Customer Service)

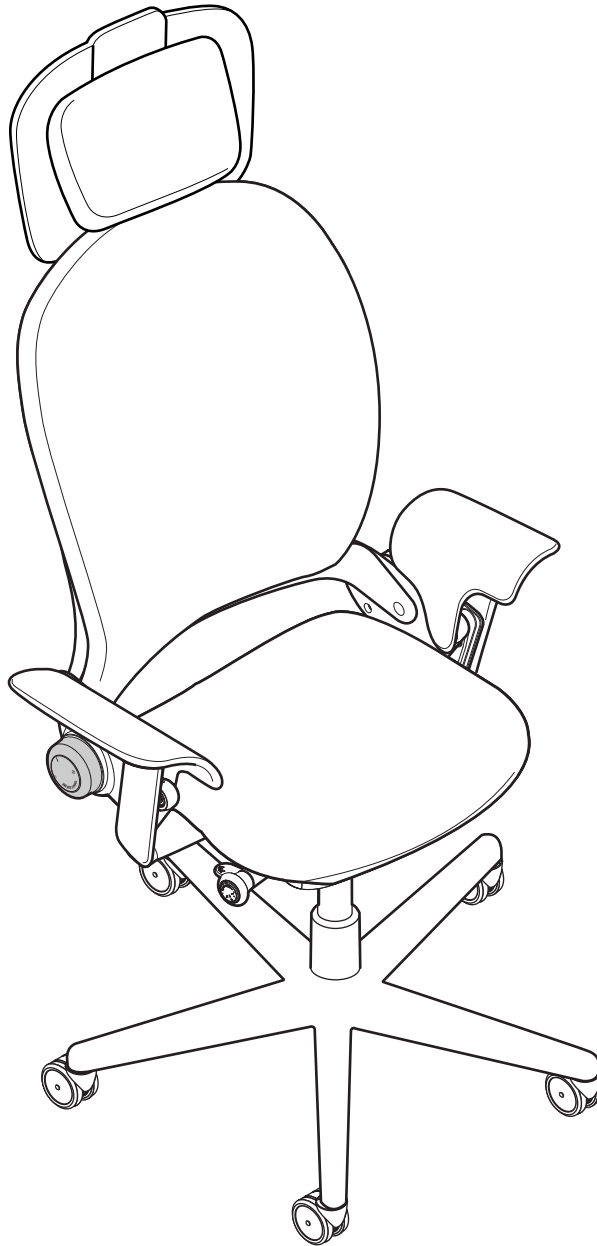

If you have a problem, question, or request, call  
your local dealer, or Steelcase Line 1 at  
**888.STEELCASE** (888.783.3522)  
for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico,  
and the U.S. Virgin Islands, call: 1.616.247.2500)  
Or visit our website: [www.steelcase.com](http://www.steelcase.com)

© 2005 Steelcase Inc.  
Grand Rapids, MI 49501  
U.S.A.

Printed in U.S.A.

**1.** Set the lumbar resistance knob to **MINIMUM** tension by rotating it counter-clockwise.

**2.** Using a #3 phillips, remove both the lumbar resistance knob screws and lumbar resistance knob.

**3.** Insert the pin from the lower right back belt of the back assembly into the loop end of the spring in the new lumbar resistance knob. Using a #3 phillips driver, install the lower screw (3a). Press down on the back assembly and install the upper screw (3b).

