

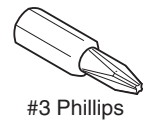


464 Leap® WorkLounge Headrest Replacement (Customer Service)

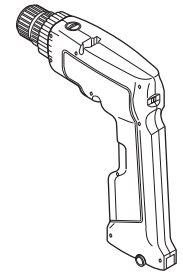

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)




Or visit our website: www.steelcase.com

© 2005 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.



1. Remove nameplate by pulling down (1a). Remove the two (2) small screws from the back of pivots (1b).

2. Grab the ribbon on either side of the nameplate and push the back forward with the soft pads of the thumb. (This will unclip the top section of the back).

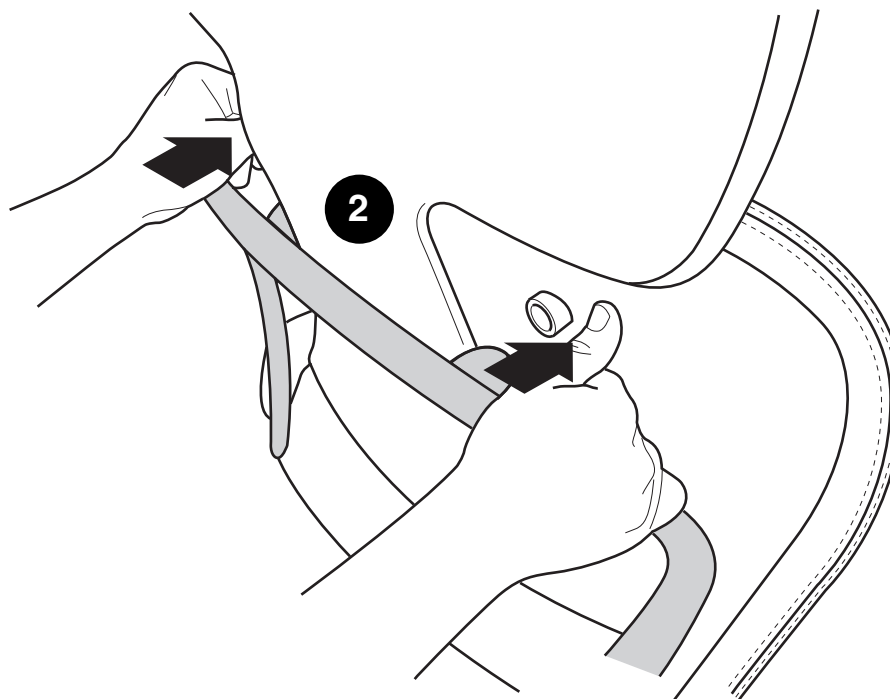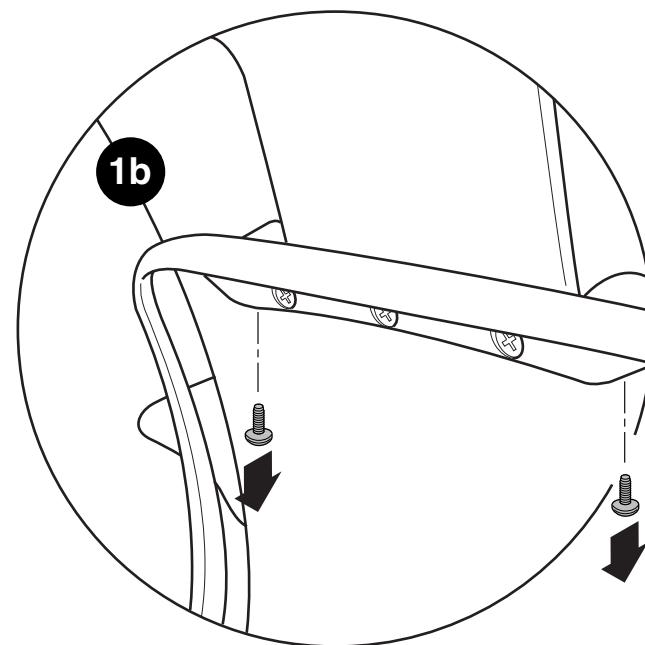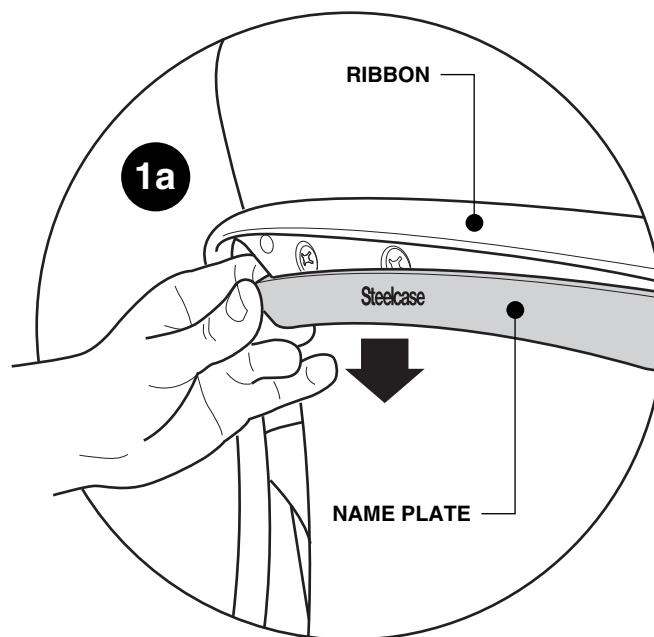

3. Remove the three (3) headrest attachment screws with a #3 phillips screwdriver.

4. Push the backrest forward while tipping the headrest rearward to remove it.

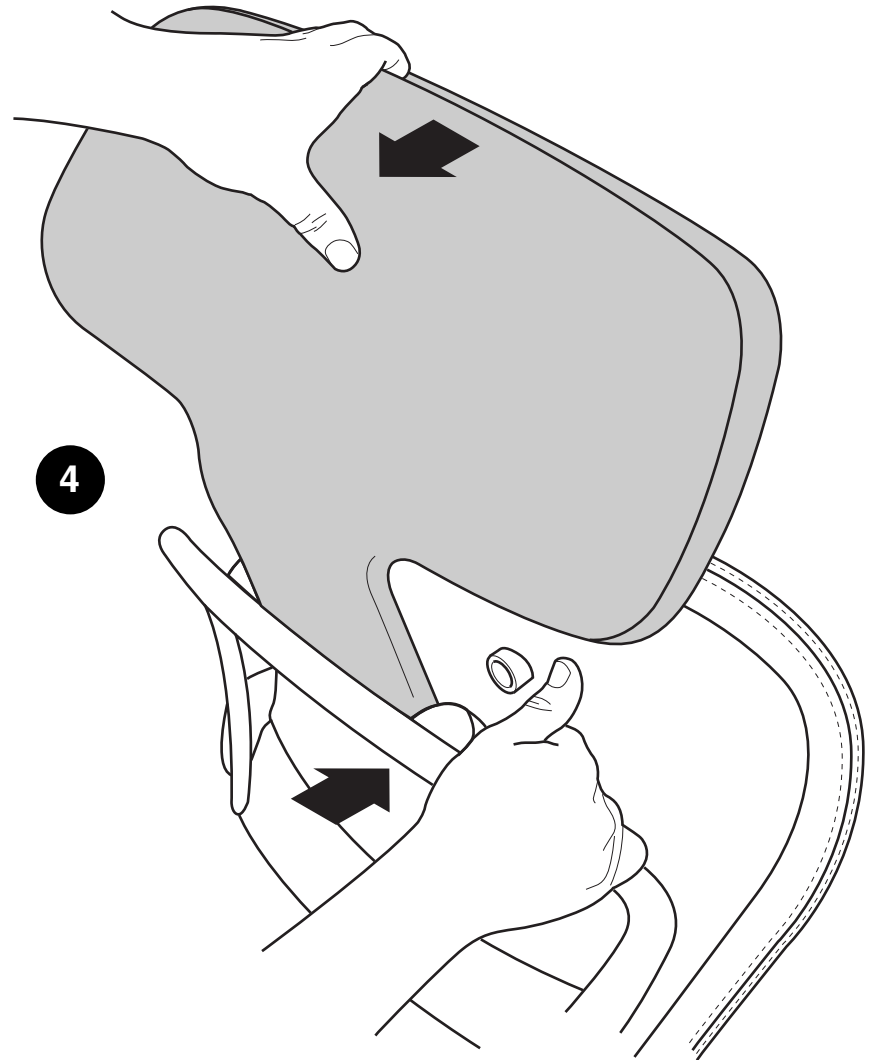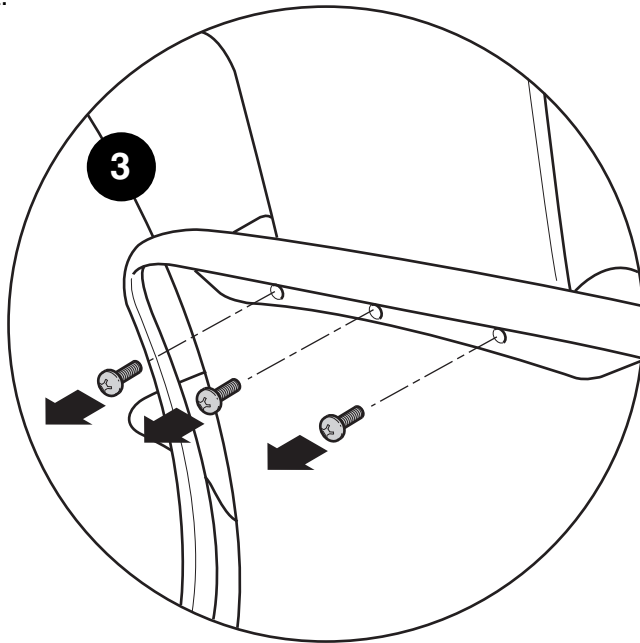

5. Install the new headrest with the three (3) new screws provided.

6. Snap the back shell sockets into the rear pivot cups (6a) (by slapping the back cushion with the palm of your hand (6b), so that the screw holes are aimed at the floor).

7. Hold back in place and reinstall the two (2) small pivot screws.

8. Reinstall nameplate per step 1.

